




15 Parking brake lever - removal and installation

Removal

- 1 Remove the rear section of the center console (see [Chapter 11](#)) to gain access to the parking brake lever.
- 2 Loosen and remove both the parking brake cable locknuts and adjusting nuts, and detach the cables from the compensator plate.
- 3 Disconnect the wiring connector from the warning light switch then unscrew the retaining nuts/bolts, and remove the lever from the vehicle (see illustration) .

15.3 Parking brake lever switch wire (1) and lever retaining bolts (2)

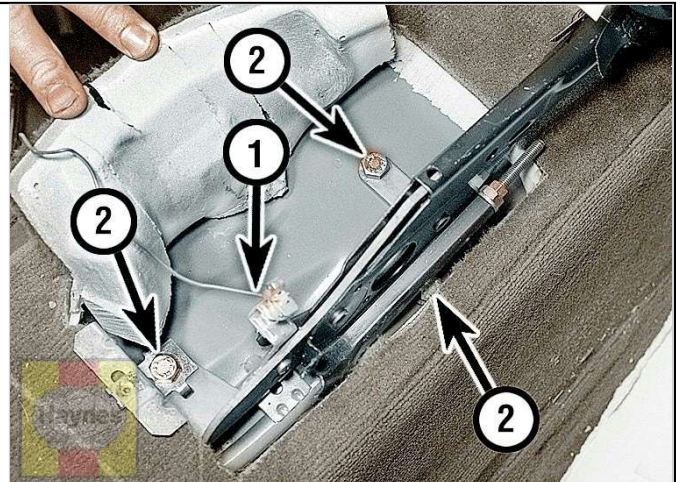

Installation

- 4 Installation is a reversal of the removal. Prior to installing the center console, adjust the parking brake (see [Section 14](#)).