



Haynes
shows you how

BMW 3-Series 320i & 320xi (12-14), 325i, 325xi, 330i & 330xi (06) & 328i & 328xi (07-14) Haynes Online Manual

14 Ignition switch and engine start/stop switch - replacement

Ignition switch

1 The covered models use a coded fob instead of a traditional metal key. Inserting the fob into the switch allows the use of the engine start/stop switch, which actually starts the engine.


2 Carefully pry off the switch trim (see illustration) .

14.2 Pry the switch surround from the instrument panel



3 Remove the mounting bolts and pull the switch from the instrument panel (see illustration) . Disconnect the electrical connector as the switch is withdrawn.

14.3 Switch retaining bolts

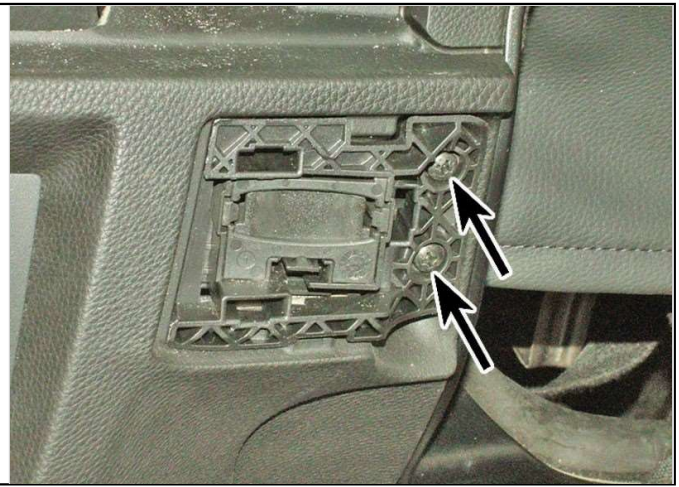

4 Installation is the reverse of removal.


Engine start/stop switch

E-series chassis models

5 Using a blunt, flat-bladed tool, carefully pry the decorative trim strip/air vents from the instrument panel (see illustration 11.5) . Disconnect any electrical connectors as the trim is removed.

6 Squeeze together the clips and push the engine start/stop switch from the trim (see illustration) .

14.6 Squeeze together the clips and push the start switch from the trim

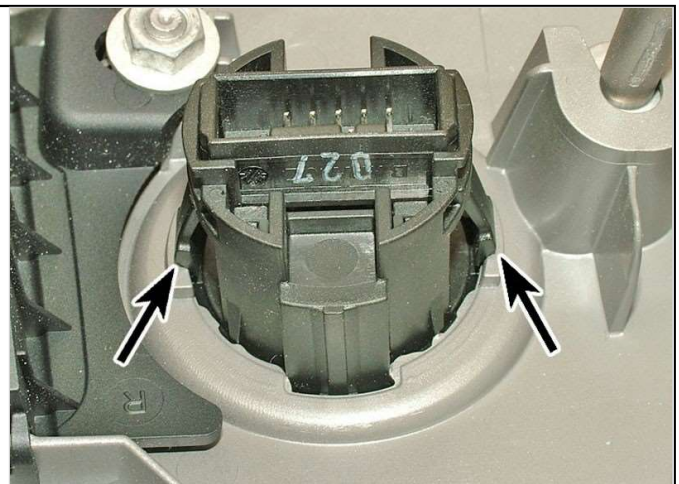

7 Installation is the reverse of removal.

F-series chassis models

8 Using a trim tool, pry out the switch from the instrument panel, then disconnect the electrical connector.

9 Installation is the reverse of removal.

