



Haynes
shows you how

BMW 3-Series and Z4 (99-05) Includes 2006 325ci/330ci Coupe and Convertible models Haynes Online Manual.

Booster battery (jump) starting

Note:


The battery is located in the trunk with remote terminals provided in the engine compartment.

Observe the following precautions when using a booster battery to start a vehicle:

- A. Before connecting the booster battery, make sure the ignition switch is in the Off position.
- B. Turn off the lights, heater and other electrical loads.
- C. Your eyes should be shielded. Safety goggles are a good idea.
- D. Make sure the booster battery is the same voltage as the dead one in the vehicle.
- E. The two vehicles **MUST NOT TOUCH** each other.
- F. Make sure the transmission is in Neutral (manual transmission) or Park (automatic transmission).


Connect the red jumper cable to the positive (+) terminals of each battery (or to the remote positive terminal in the engine compartment) (see illustration) .

Remote locations for the positive (A) and negative (B) battery terminals are in the engine compartment behind the right shock tower

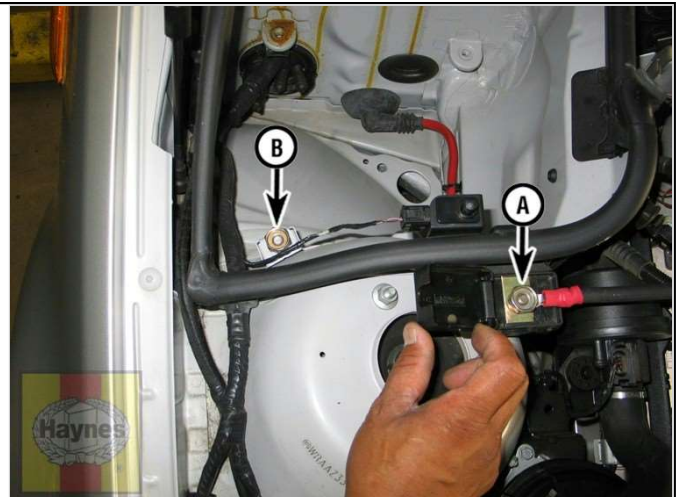

Connect one end of the black cable to the negative (-) terminal of the booster battery. The other end of this cable should be connected to a good ground on the engine block (or to the remote negative terminal in the engine compartment) (see illustration) . Make sure the cable will not come into contact with the fan, drivebelts or other moving parts of the engine.

Make the booster battery cable connections in the numerical order shown (note that the negative cable of the booster battery is NOT attached to the negative terminal of the dead battery)

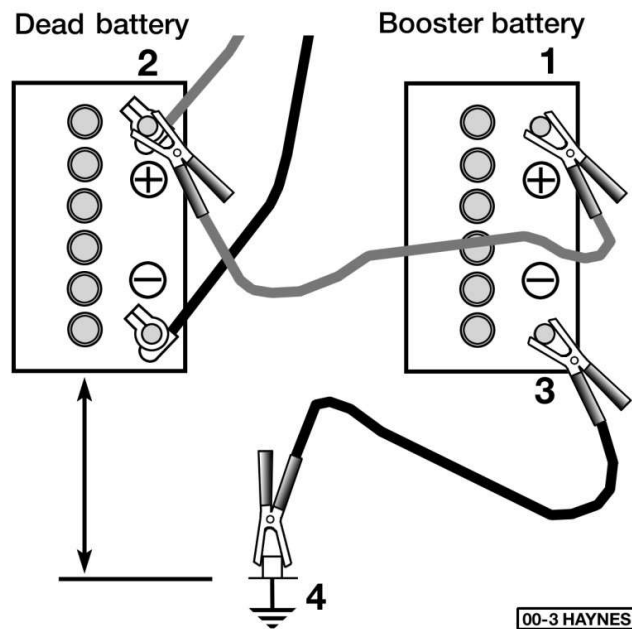

Start the engine using the booster battery, then, with the engine running at idle speed, disconnect the jumper cables in the reverse order of connection.

© 2024 Haynes Manuals, Inc. Contact us