

**Haynes**
shows you how**BMW 3-Series 320i & 320xi (12-14), 325i, 325xi, 330i & 330xi (06) & 328i & 328xi (07-14) Haynes Online Manual**


2 Front hub assembly - removal and installation

Removal

1 Remove the front brake disc (see [Chapter 9](#)). If you're working on an all-wheel drive model, unstake and remove the driveaxle hub nut (see [Chapter 8](#)).

2 Remove the four retaining bolts and the hub-and-bearing assembly (see illustration). If you're working on an all-wheel drive model, draw the hub-and-bearing assembly off of the end of the driveaxle with a puller. Discard the bolts; new ones must be installed. **Note:** *The hub and bearing are only available as a complete assembly.*

2.2 Front hub retaining bolts

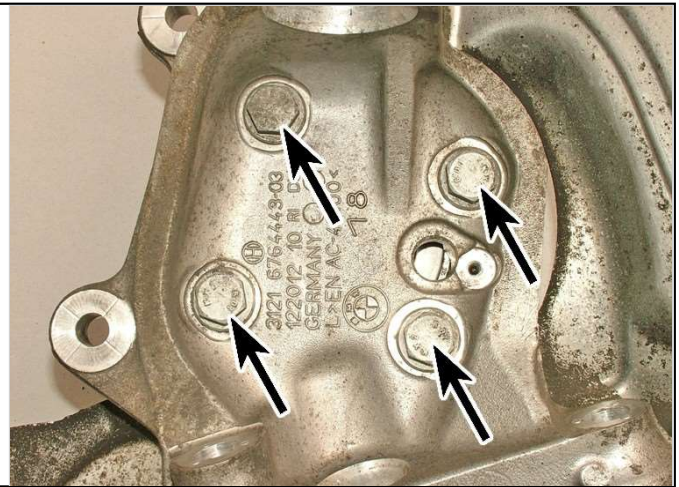

Installation

3 Ensure the mating surfaces of the hub and hub carrier are clean, then position the hub on the carrier.

4 Install the new retaining bolts and tighten them to the specified torque.

5 Reinstall the brake disc (see [Chapter 9](#)).

6 If you're working on an all-wheel drive model, install the driveaxle hub nut (see [Chapter 8](#) for installation details and the proper torque setting).

