



Emsiso d.o.o.
Zagrebška cesta 20
SI-2000 Maribor
Slovenia

tel. +386 2 46 129 07
fax. +386 2 46 129 08
www.emsiso.com

Member of
Seidel Electronics
www.seidel.at



eDrive Basic CAN control

www.emsiso.com



History

Version	Author	Description	Date
1.0	Gregor Kosc	Initial version	07.09.2015

DESCRIPTION

This document describes basic data flow on CAN bus for controlling the drive.

LEGAL REGULATIONS

Standards:


Nr.:	Standard	Description	Issued
1	ISO 11898-1	Road vehicles – Controller area network (CAN) – Part 1: Data Link Layer	
2	ISO 11898-2	Road vehicles – Controller area network (CAN) – Part 2: High-speed medium access unit	
3	ISO 11898-3	Road vehicles – Controller area network (CAN) – Part 3: Low-speed, fault-tolerant, medium-dependent interface	
4	CiA301 Version: 4.2.0	CANopen application layer and communication profile	February 2011
5	CiA402 Version: 3.0.0.	CANopen device profile for drives and motion control	December 2007

GENERAL NOTICE:

For latest version of documentation please contact the e-mail address
info@emsiso.com

DESCRIPTION OF REQUIREMENTS

1.1 Connections for supply and communication

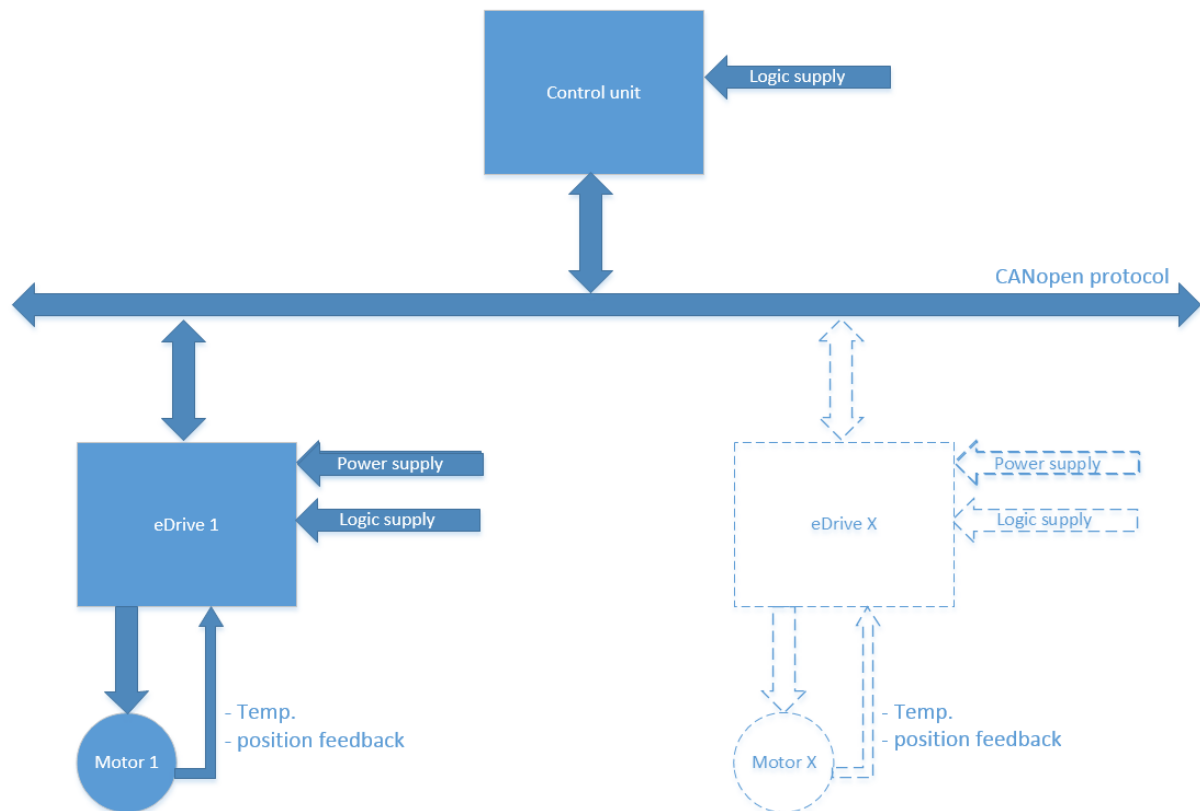

BASIC COMMUNICATION OVER CAN

1.2 Default PDO configuration

1.2.1 Receive PDO 1 (data from control unit to eDrive)

byte							
0	1	2	3	4	5	6	7
Control Word		Target Velocity				Target Torque	

1.2.2 Receive PDO 2 (data from control unit to eDrive)

byte							
0	1	2	3	4	5	6	7
Target Position				Res.	Res.	Res.	Res.

1.2.3 Transmit PDO 1 (data from eDrive to control unit)

byte							
0	1	2	3	4	5	6	7
Status Word		Position Actual Value				Torque Actual val	


1.2.4 Transmit PDO 2 (data from eDrive to control unit)

byte							
0	1	2	3	4	5	6	7
Controller temp	Motor temp	DC Link Voltage		Logic Power Supply Voltage		Current Demand	

1.2.5 Transmit PDO 3 (data from eDrive to control unit)

byte							
0	1	2	3	4	5	6	7
Motor current actual value		Electrical angle		Phase A Current		Phase B Current	

1.3 Network management (NMT) state of slave

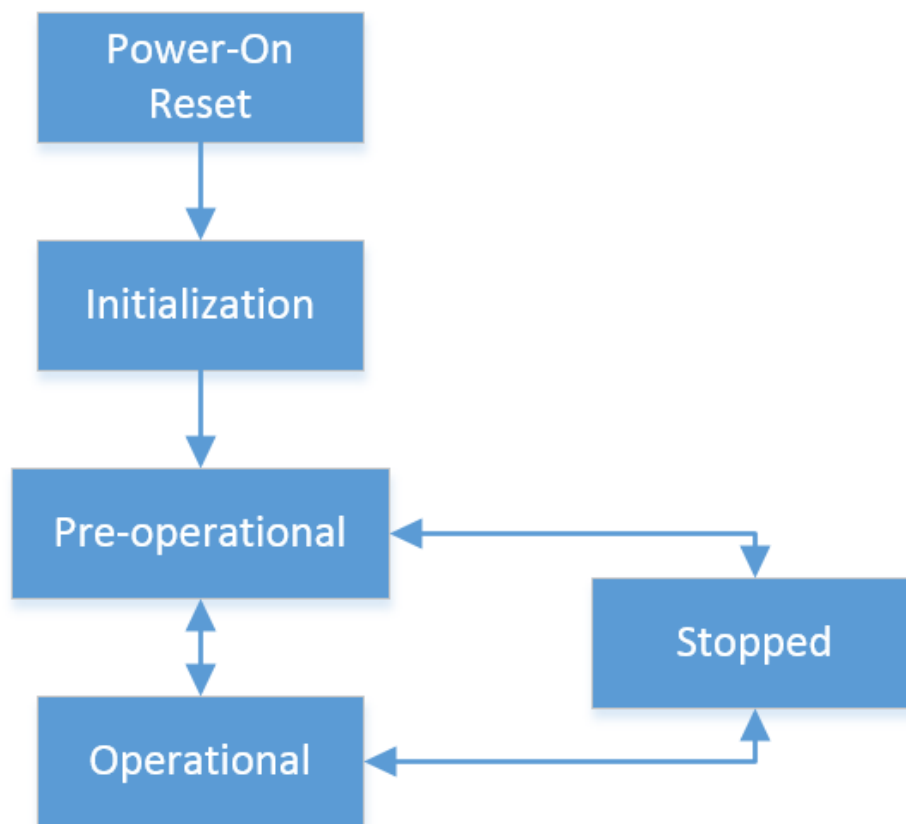

Upon power-up eDrive (CANopen slave node) comes out of »power-on reset« and goes into initialization. It initializes the entire application, CAN/CANopen interfaces and communication. At the end of the initialization the node tries to transmit boot-up message. As soon as it is transmitted successfully, the node switches to Pre-operational state.

Using the NMT Master message, an NMT Master can switch individual nodes or all nodes back and forth between the three major states: Pre-operation, Operational and stopped.

1.4 Synchronized or grouped polling (SYNC)

The Sync-Producer (Control unit) provides the synchronization-signal for the Sync-Consumer (eDrive). When the Sync-Consumer receives the signal they start carrying out their synchronous tasks (like transmitting TPDOs).

Master on power up sequence:

1. Wait for boot-up message from slave.

Slave (eDrive) is by default configured to node id = 10.

Slave message:

COB-ID (11bits)	Data byte 1
0x700+NodeID	0x00

Note: other bytes not send

2. Check vendor ID (sdo read object 0x1018, 1 -> eDrive response 0x3C6)

Sdo read command from master (control unit):

COB-ID (11bits)	Command byte	Obj. Index (2 byte)	Obj. sub-index (byte)	Data (4bytes)
0x600+NodeID	0x40	0x1810	0x01	0

Sdo read response from slave (eDrive):

COB-ID (11bits)	Command byte	Obj. Index (2 byte)	Obj. sub-index (byte)	Data (4bytes)
0x580+NodeID	0x43	0x1810	0x01	0x19030000

3. Send NMT operational (broadcast)

Broadcast NMT request go to 'Operational':

COB-ID (11bits)	Data byte 0	Data byte 1
0x000	0x01	0x00

NMT Command:

0x01 = start remote node

0x02 = stop remote node

0x80 = enter pre-operational

0x81 = reset node

0x82 = reset communication

4. Send PDO to enable PWM

COB-ID (11bits)	Data (default slave RPDO1)
0x200+Node-ID	06 00 xx xx xx xx xx xx

COB-ID (11bits)	Data (default slave RPDO1)
0x200+Node-ID	07 00 xx xx xx xx xx xx

COB-ID (11bits)	Data (default slave RPDO1)
0x200+Node-ID	0F 00 xx xx xx xx xx xx

5. Periodically:

- a. send sync (each slave (eDrive will response with three TPDOs)

master broadcast sync message:

COB-ID (11bits)	Data byte 0
0x080	0x00

Other data bytes are not transmitted.

Slave response:

COB-ID (11bits)	Data (default slave TPDO1)
0x180+Node-ID	xx xx xx xx xx xx xx xx

COB-ID (11bits)	Data (default slave TPDO2)
0x280+Node-ID	xx xx xx xx xx xx xx xx

COB-ID (11bits)	Data (default slave TPDO3)
0x380+Node-ID	xx xx xx xx xx xx xx xx

COB-ID (11bits)	Data (default slave TPDO4)
0x480+Node-ID	xx xx xx xx xx xx xx xx

b. master transmits PDO-for controlling

COB-ID (11bits)	Data (default slave RPDO1)
0x200+Node-ID	0F 00 xx xx xx xx xx xx

COB-ID (11bits)	Data (default slave RPDO2)
0x300+Node-ID	0F 00 xx xx xx xx xx xx

6. To disable PWM

COB-ID (11bits)	Data (default slave RPDO1)
0x200+Node-ID	06 00 xx xx xx xx 00 00

7. To disable drive

Broadcast NMT request go to 'Pre-operational'