



Turboprop Engine Cutaway Assembly Charts

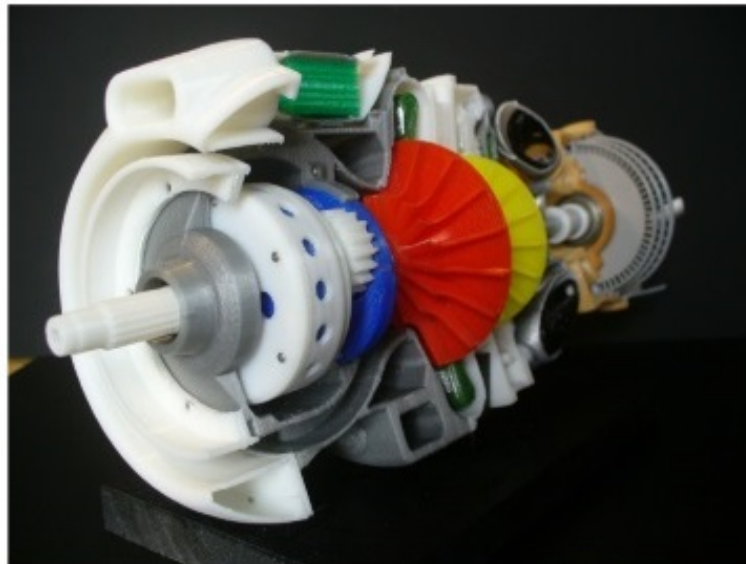


- 01 Reduction Section
- 02 Compressor Section
- 03 Intern-CC Section
- 04 Turbine-Exh Section
- 05 Accessory
- 06 Stand & Rotate-Tool
- 07 Propeller

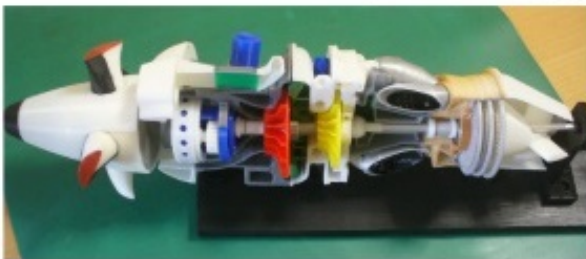

2017.12.30


01-Reduction Section Parts

*: Gluing

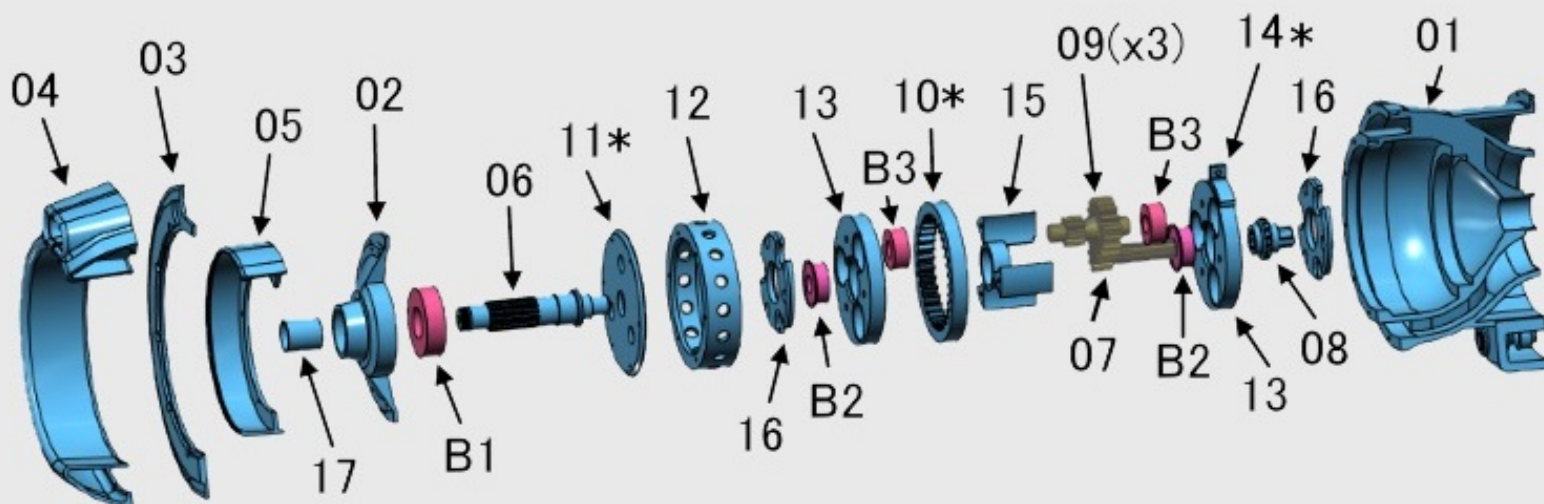

	Seq	File Name(.stl)		
BRG B1: 6900ZZ (x1) B2: F686ZZ (x2) B3: WBC6-12ZZ (x6)	01	Air-Intake-Case1 01	11	Reduction-Gear-Flg01
	02	Air-Intake-Cover1 01	12	Reduction-Gear-Flg02
	03	Air-Intake-Cowling02	13	Reduction-Panel01
	04	Air-Intake-Cowling301	14	Reduction-Panel01 a
	05	Air-Intake-Fairing1 01	15	Reduction-Panel02
	06	Red-Prop-Shaft201	16	Reduction-Panel03f
	07	Reduction-Gear01 a	17	Shaft-Spacer04
	08	Reduction-Gear01 b		
	09	Reduction-Gear02		
	10	Reduction-Gear03		


02-Compressor Section Parts

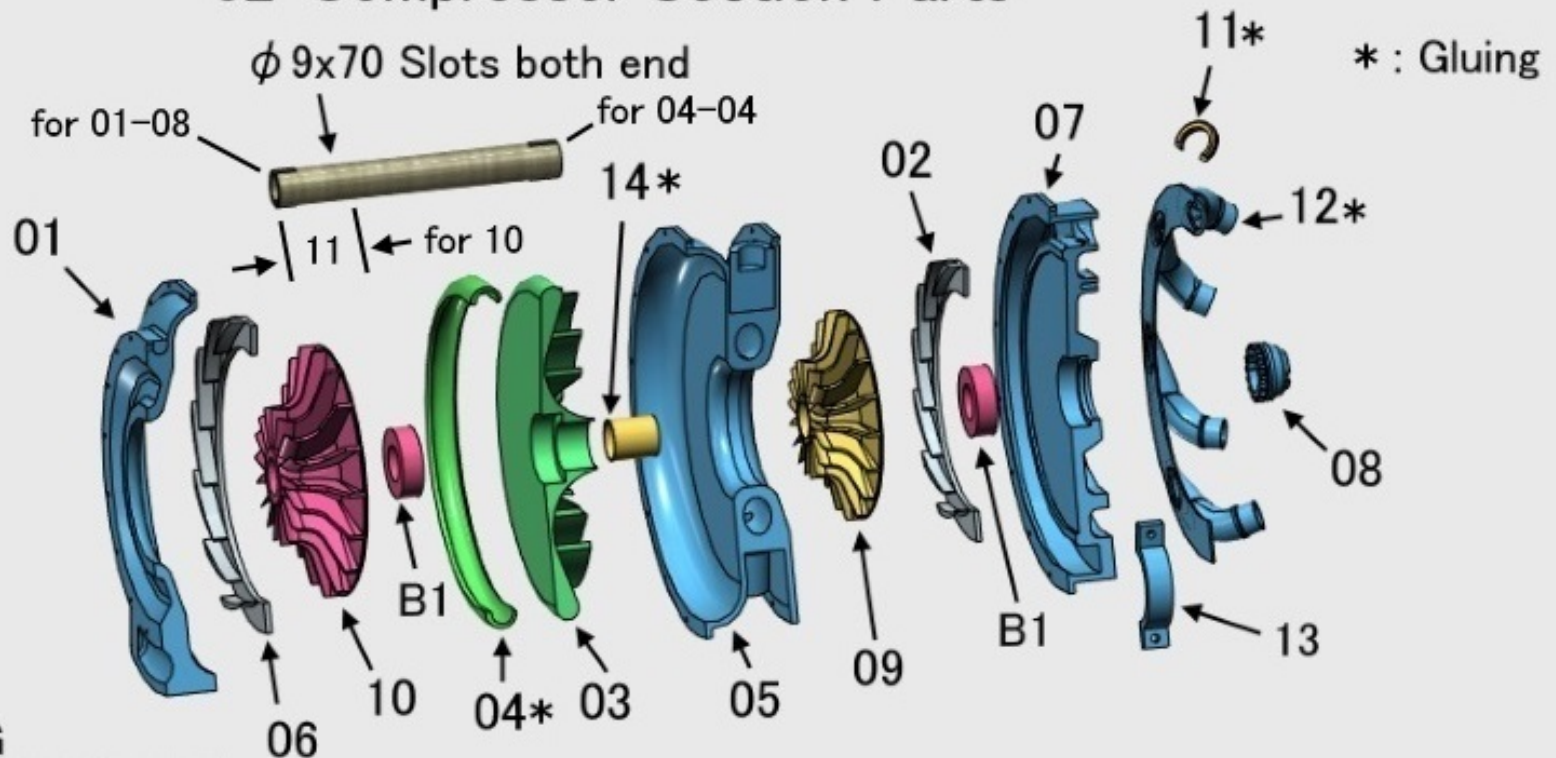

BRG
B1 : 689ZZ (x2)

101ws ←	01	Comp-Frt-Case02	11	Outlet-Elbow02
	02	Comp-HP-Diffuser01	12	Outlet-Elbow-Assy1 01
101ws ←	03	Comp-IGV-Case01	13	Shaft-Brg-Spt01
	04	Comp-IGV-Case02	14	Shaft-Spacer04
101ws ←	05	Comp-Inter-Case01		
	06	Comp-LP-Diffuser01		
	07	Comp-Outlet-Case1 01		
	08	Impeller-Coupling01		
	09	Impeller-HP1 01		
	10	Impeller-LP1 02		

03-Interm-Combustion Section Parts

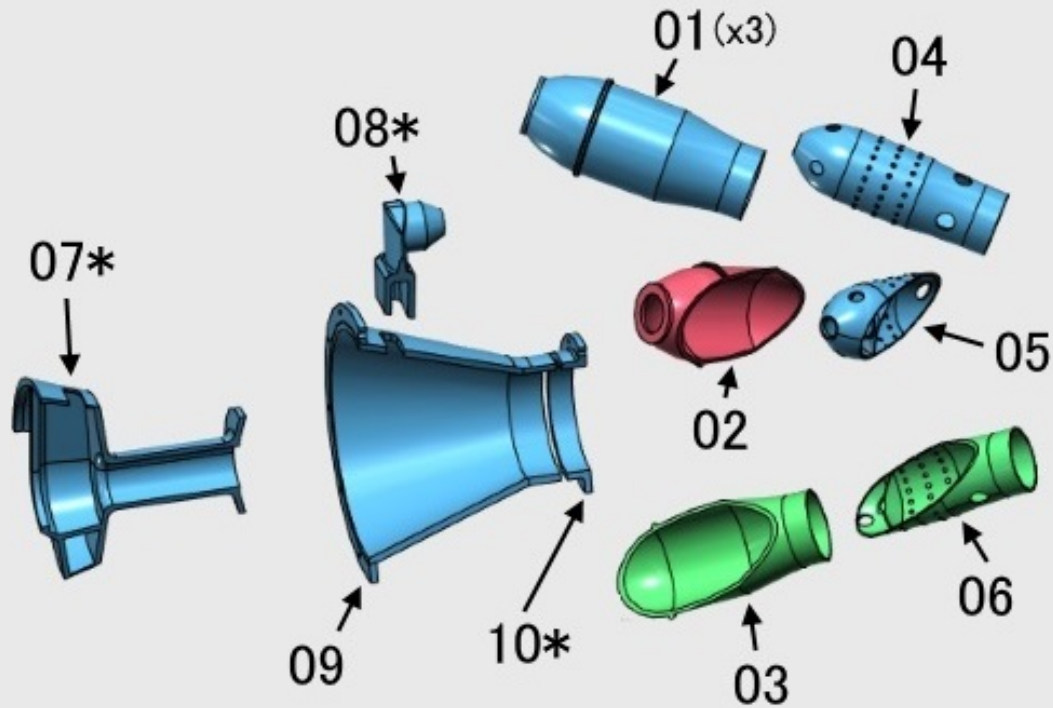


* : Gluing

01	CC-Aircase01
02	CC-Aircase03
03	CC-Aircase04
04	CC-Flame-Tube01x95
05	CC-Flame-Tube02x95
06	CC-Flame-Tube03x95
07	Interm-Case02a
08	Interm-Case03a
09	Interm-Case-Cut01
10	Interm-Case-Cut02

(One-Piece Type)
Interm-Case01ws

04-Turb-Exhaust Section Parts

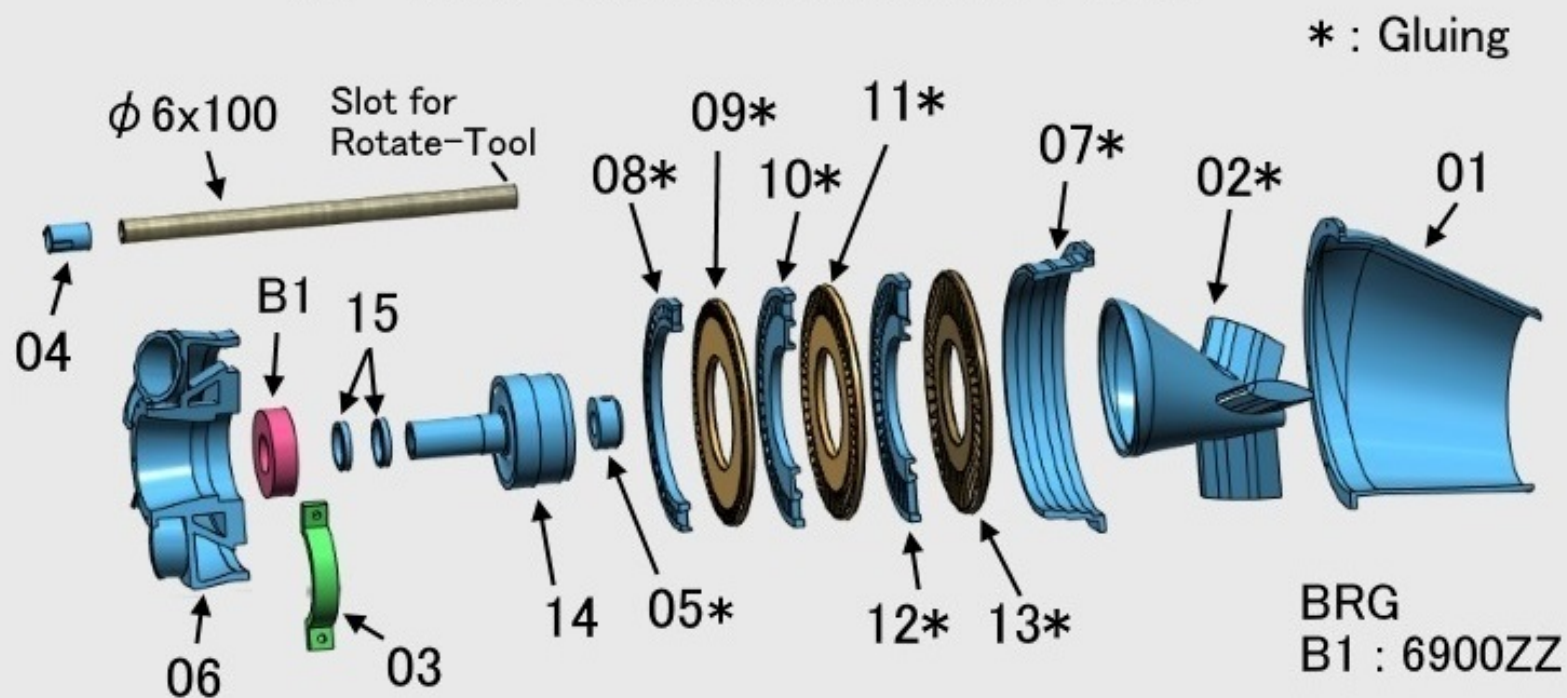


01	Exhaust-Duct1 01
02	Exhaust-Duct1 02
03	Shaft-Brg-Spt02
04	Shaft-Coupling01
05	Shaft-Coupling03
06	Turbine-Case01 a
07	Turbine-Case1 01 b

08	Turbine-HP-NGV01
09	Turbine-HP-Rotor01
10	Turbine-IP-NGV01
11	Turbine-IP-Rotor01
12	Turbine-LP-NGV01
13	Turbine-LP-Rotor01
14	Turbine-Shaft01
15	Shaft-Spacer1 02

Blade & Vane
Thicker Type
101


05-Accessory Parts

*: Gluing


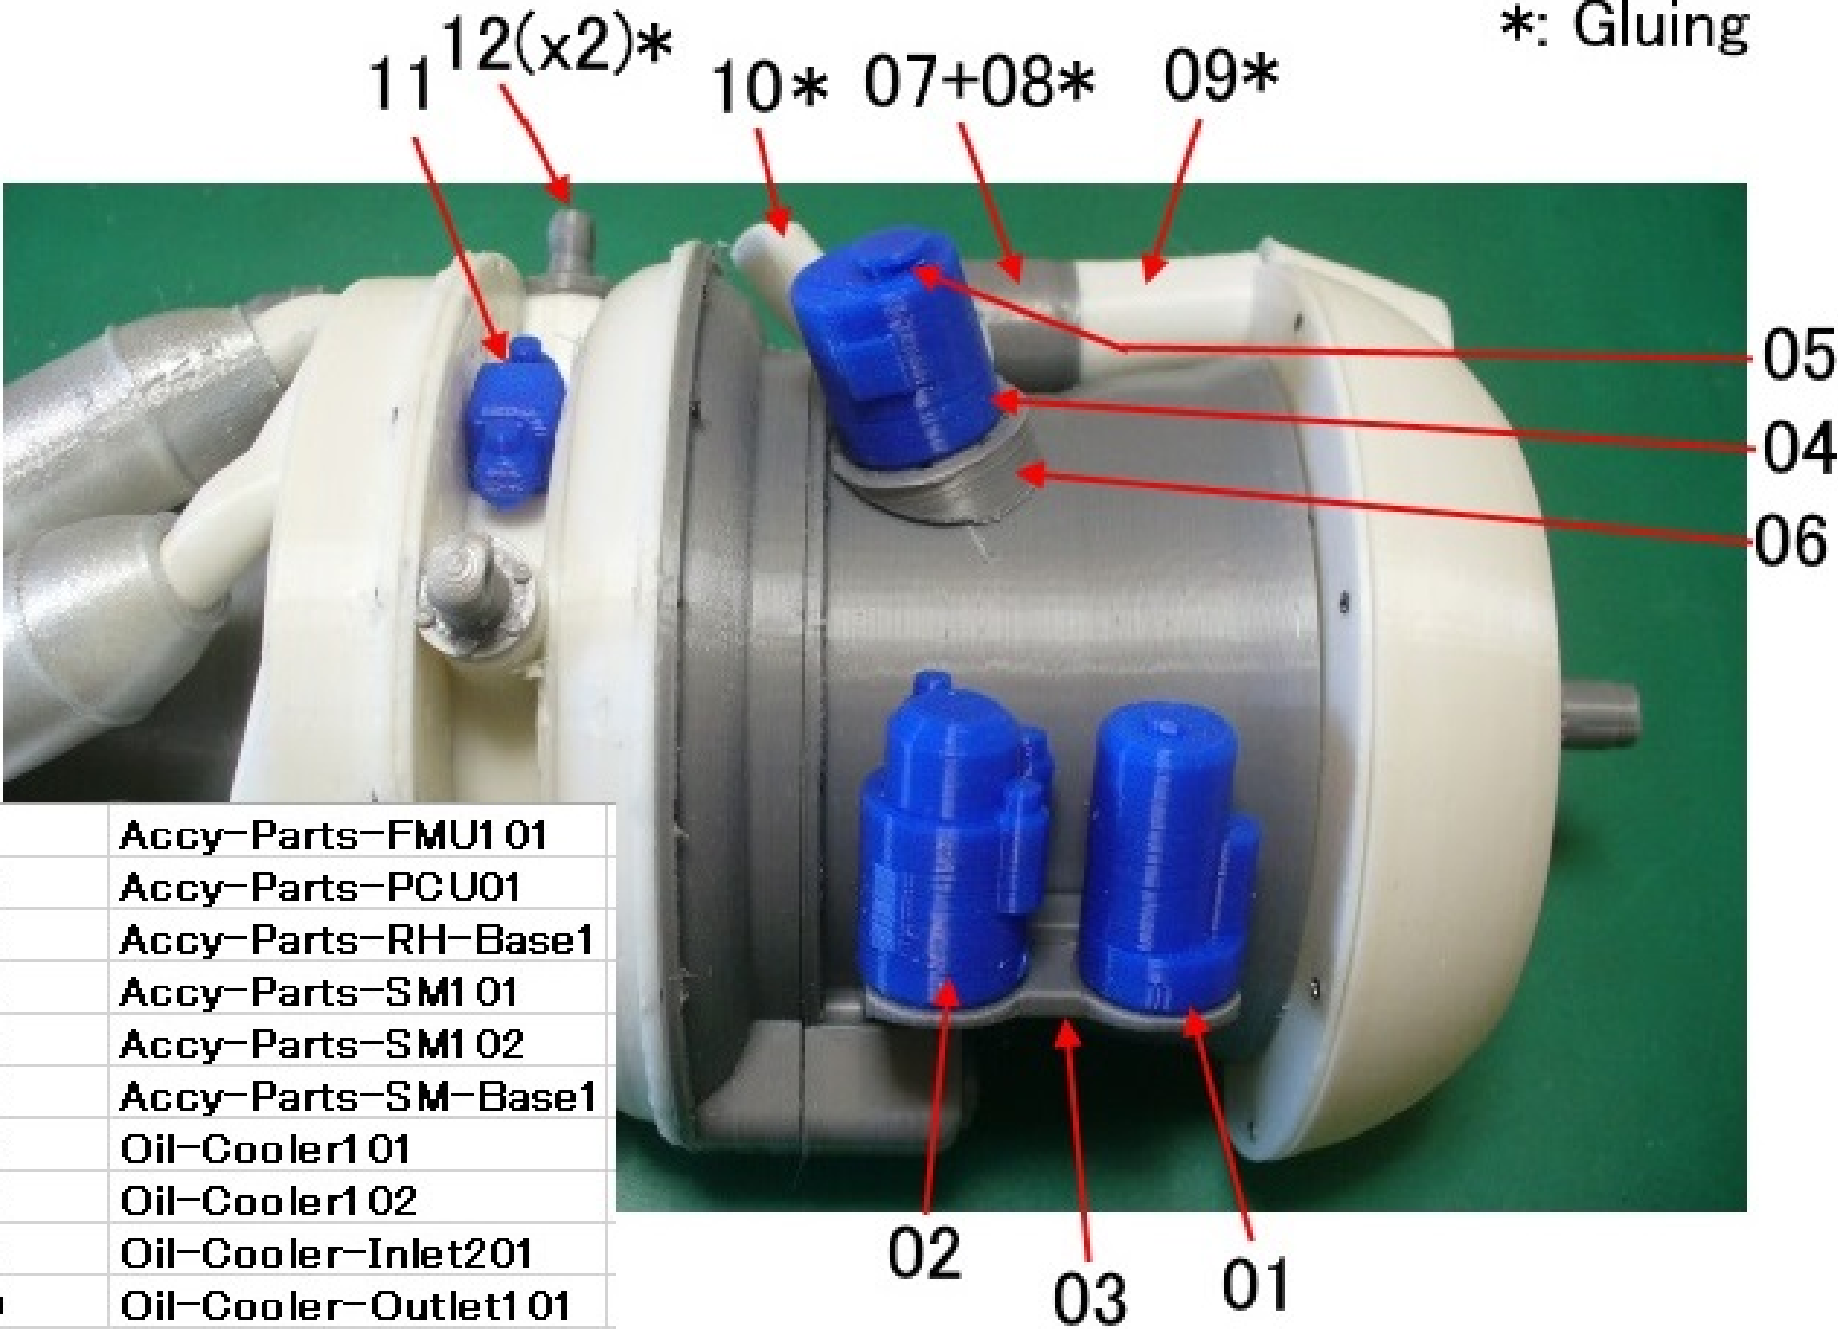


01	Accy-Parts-FMU1 01
02	Accy-Parts-PCU01
03	Accy-Parts-RH-Base1
04	Accy-Parts-SM1 01
05	Accy-Parts-SM1 02
06	Accy-Parts-SM-Base1
07	Oil-Cooler1 01
08	Oil-Cooler1 02
09	Oil-Cooler-Inlet201
10	Oil-Cooler-Outlet1 01
11	Oil-Press-Tx01
12	Mount-Foot1 01

06-Stand & Rotation-Tool Parts

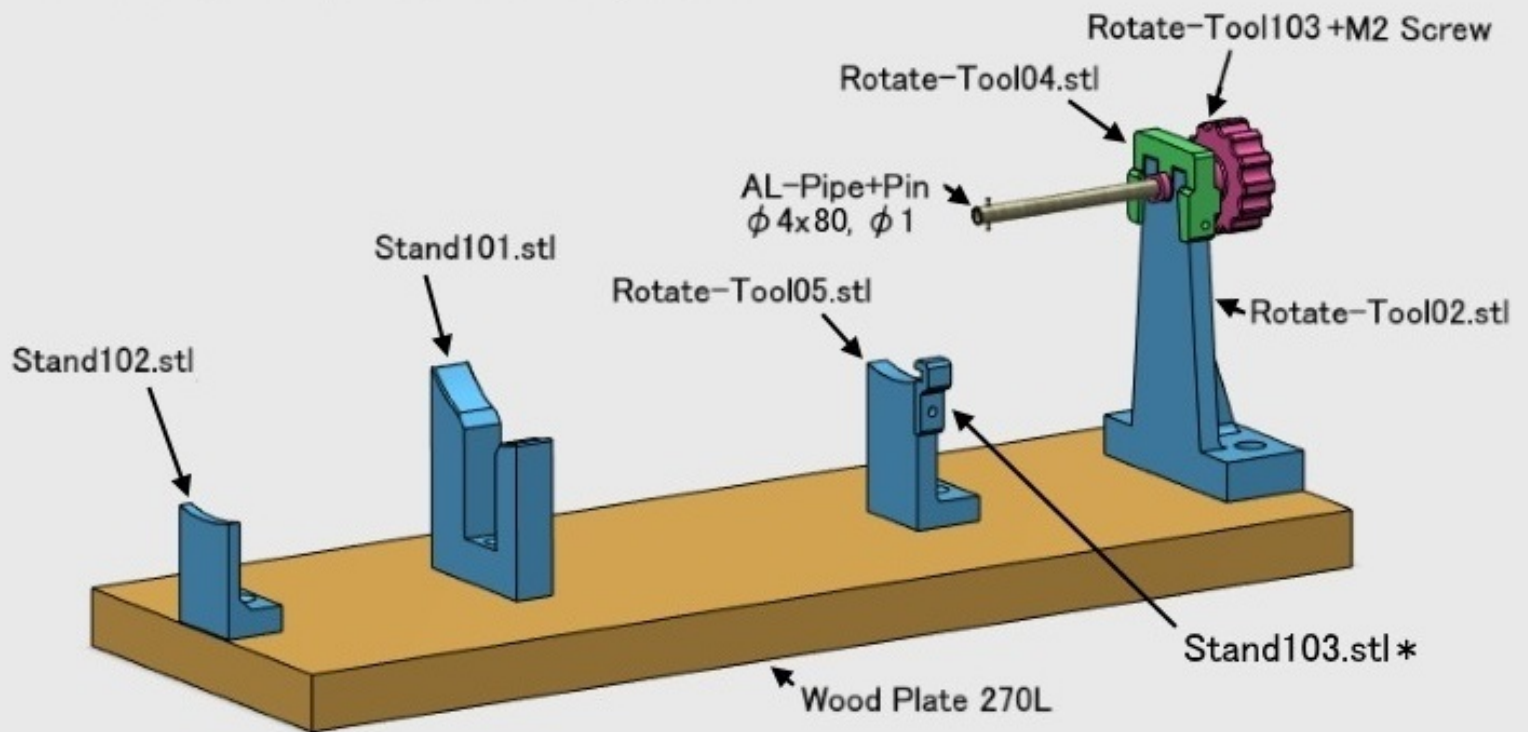

07-Propeller Parts

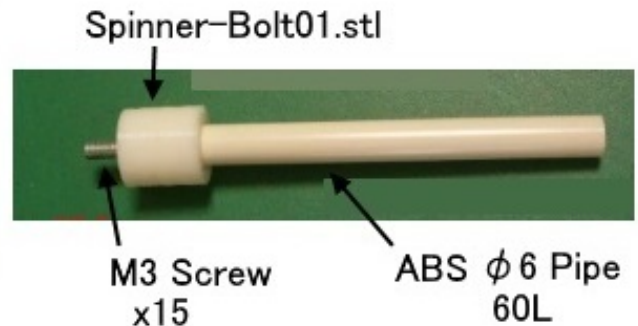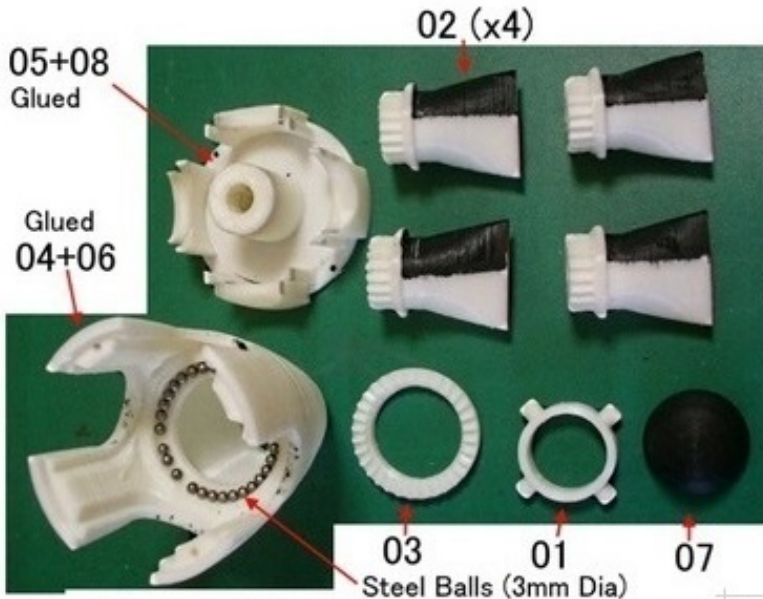

01	Spinner-Blade04
02	Spinner-Blade1 01
03	Spinner-Blade1 02
04	Spinner-Body01
05	Spinner-Body02a
06	Spinner-Body03
07	Spinner-Bolt01
08	Spinner-Cap01
09	Spinner-Hub1 01