


Main Board[2A] MONO\_IN mono\_in

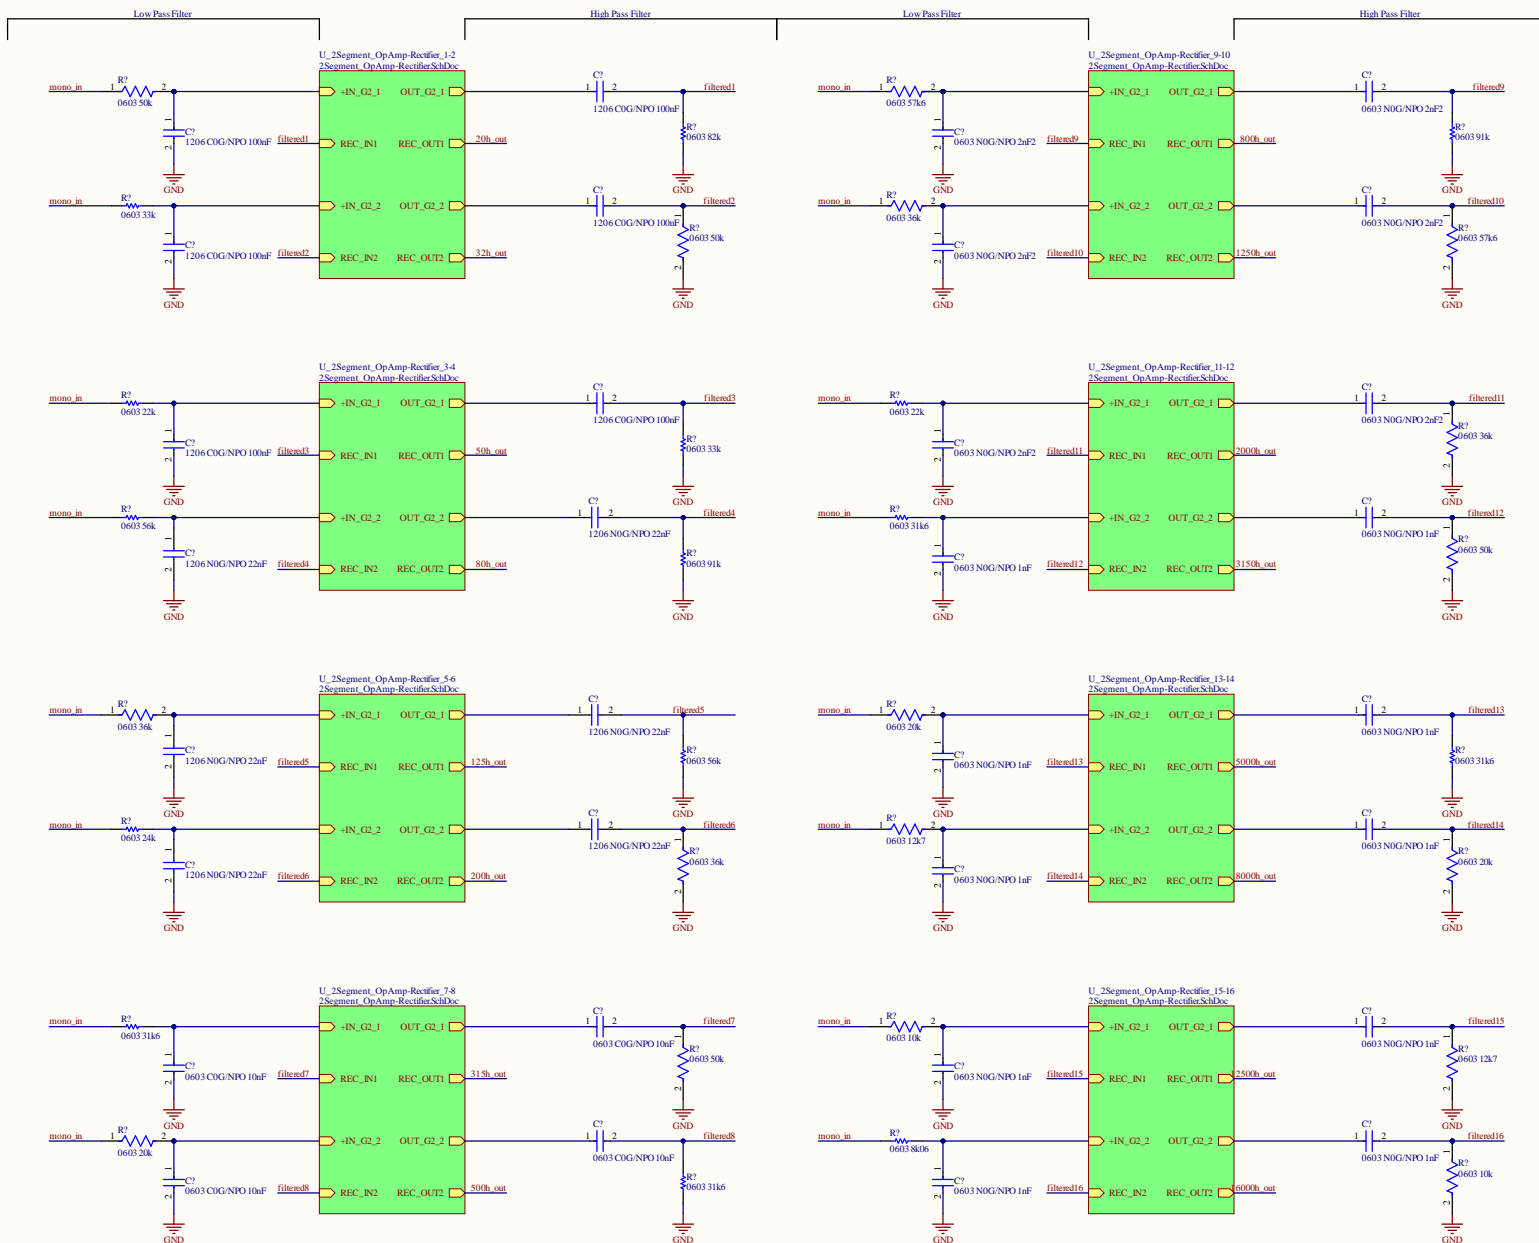

20h\_out 20Hz OUT Main Board[3A]  
32h\_out 32Hz OUT Main Board[3A]  
50h\_out 50Hz OUT Main Board[3A]  
80h\_out 80Hz OUT Main Board[3A]  
125h\_out 125Hz OUT Main Board[3A]  
200h\_out 200Hz OUT Main Board[3A]  
315h\_out 315Hz OUT Main Board[3A]  
500h\_out 500Hz OUT Main Board[3A]  
800h\_out 800Hz OUT Main Board[3A]  
1250h\_out 1250Hz OUT Main Board[3A]  
2000h\_out 2000Hz OUT Main Board[3A]  
3150h\_out 3150Hz OUT Main Board[3A]  
5000h\_out 5000Hz OUT Main Board[3A]  
8000h\_out 8000Hz OUT Main Board[3A]  
12500h\_out 12500Hz OUT Main Board[3A]  
16000h\_out 16000Hz OUT Main Board[3A]

A



A


C

C

D

D

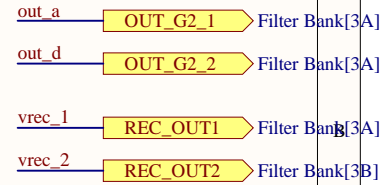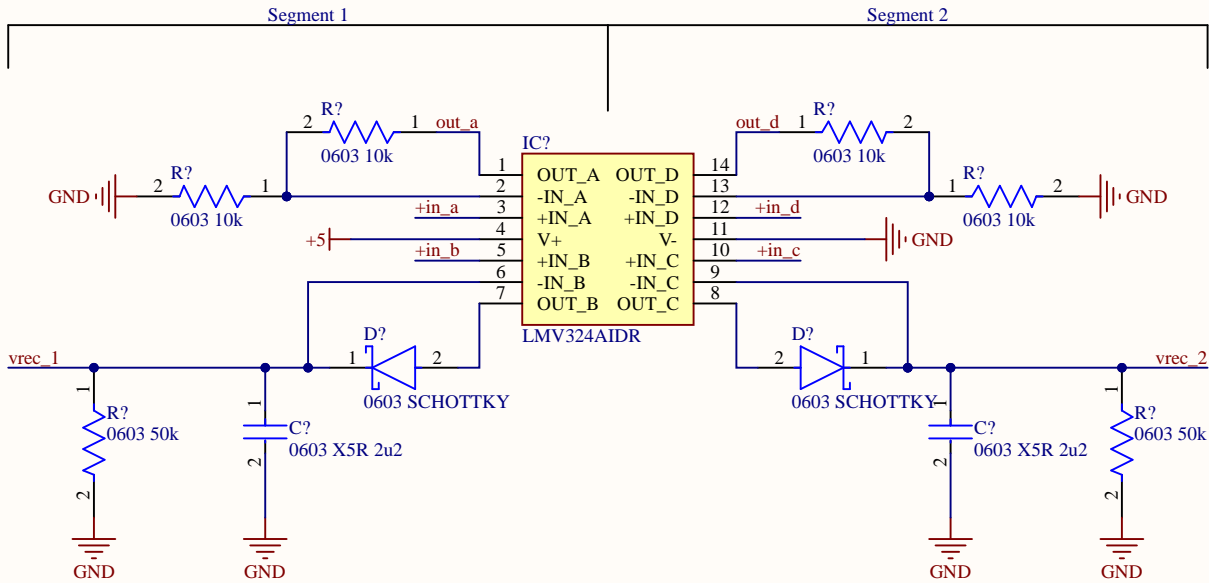

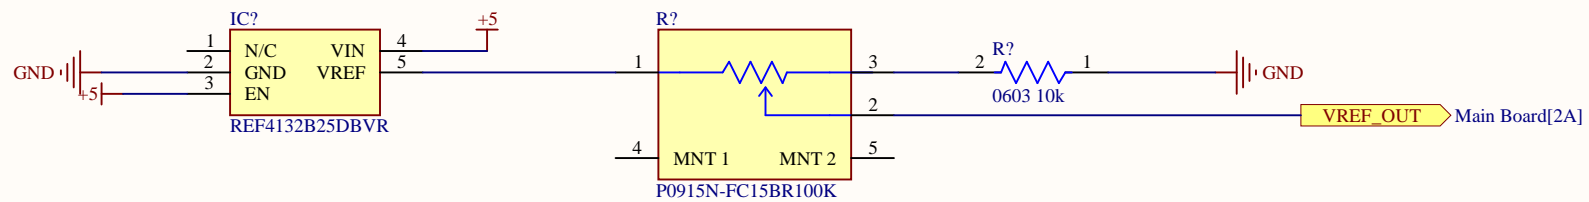

△  
MNT pins are the  
mount pins, they  
don't do anything else



A

B

C

D

A

B

C

D

