

5. Horn Switch

A: NOTE


Horn switch is a unit with the driver's airbag module. For operation procedures, refer to "Driver's Airbag Module" in "AIRBAG SYSTEM". <Ref. to AB-32, Driver's Airbag Module.>

B: INSPECTION

1. CHECK HORN SWITCH

- 1) Remove the driver's airbag module. <Ref. to AB-32, REMOVAL, Driver's Airbag Module.>
- 2) Check that the connection of the horn switch harness connector is correct.
- 3) Disconnect the horn switch harness connector and check the resistance between the harness connectors.

Preparation tool:
Circuit tester

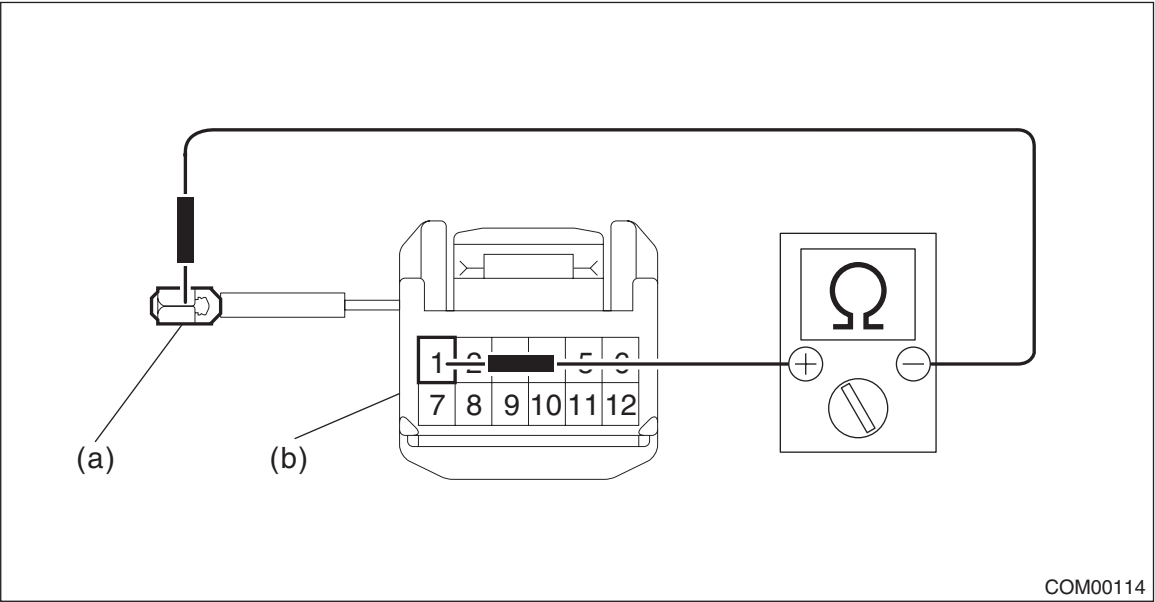

(a) Ground terminal (b) Horn switch terminal


Terminal No.	Standard
Horn switch terminal — ground terminal	Less than 1 Ω

- 4) Replace the driver's airbag module if the inspection result is not within the standard value.

2. CHECK ROLL CONNECTOR

- 1) Remove the roll connector. <Ref. to AB-93, REMOVAL, Roll Connector.>
- 2) Check the resistance between roll connector terminals.

Preparation tool:
Circuit tester

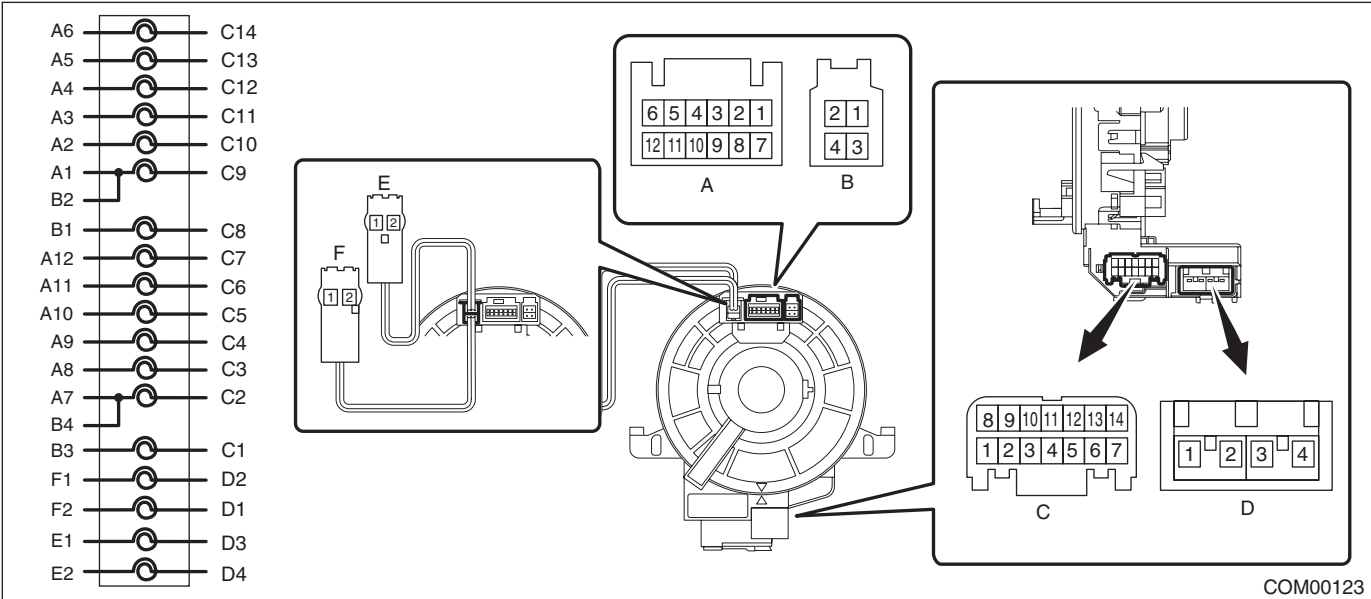

Terminal No.	Inspection conditions	Standard
A1 — C9	Always	Less than 1 Ω

- 3) Replace the roll connector if the inspection result is not within the standard value.

Horn Switch

COMMUNICATION SYSTEM

GLASS/WINDOWS/MIRRORS

GW

	Page
1. General Description	2
2. Relay and Fuse	8
3. Power Window System	10
4. Power Window Control Switch	12
5. Front Door Glass	18
6. Front Regulator and Motor Assembly	21
7. Remote Control Mirror System	23
8. Outer Mirror Assembly	24
9. Remote Control Mirror Switch	28
10. Rearview Mirror	30
11. Rear Door Glass	31
12. Rear Regulator and Motor Assembly	33
13. Windshield Glass	35
14. Rear Window Glass	44
15. Rear Gate Glass	47
16. Rear Window Defogger System	50
17. Rear Quarter Glass	53
18. Wiper Deicer System	56