


12. Blower Resistor (Manual A/C Model)

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-78, REMOVAL, Glove Box.>
- 3) Remove the engine control module (ECM). <Ref. to FU(H4DO(w/o HEV))-100, REMOVAL, Engine Control Module (ECM).>
- 4) Remove the resistor.
 - (1) Disconnect the connector.
 - (2) Remove the screw and remove the resistor.

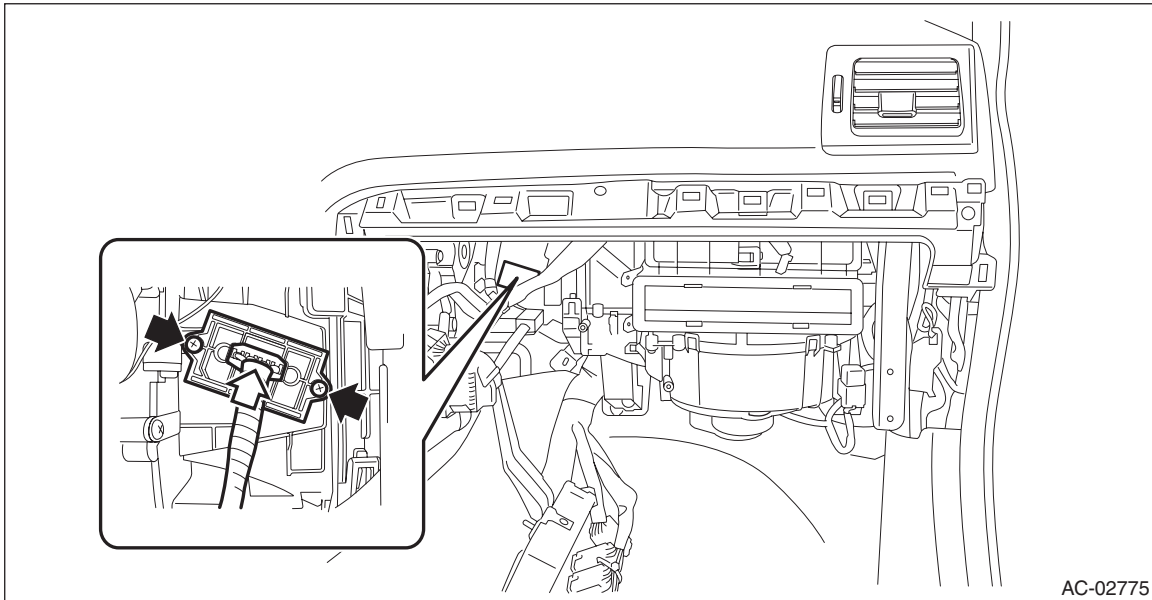

AC-02775

B: INSTALLATION

Install each part in the reverse order of removal.

C: INSPECTION

UNIT INSPECTION

PREPARATION TOOL:

Circuit tester

- 1) Check the resistance between resistor terminals.

Terminal No.	Standard	Connection diagram
4 — 3	Approx. 0.43 Ω	
4 — 2	Approx. 1.03 Ω	
4 — 1	Approx. 3 Ω	

AC-02897

- 2) Replace the resistor if the inspection result is not within the standard.