


Electrical Component Location

POWER ASSISTED SYSTEM (POWER STEERING) (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

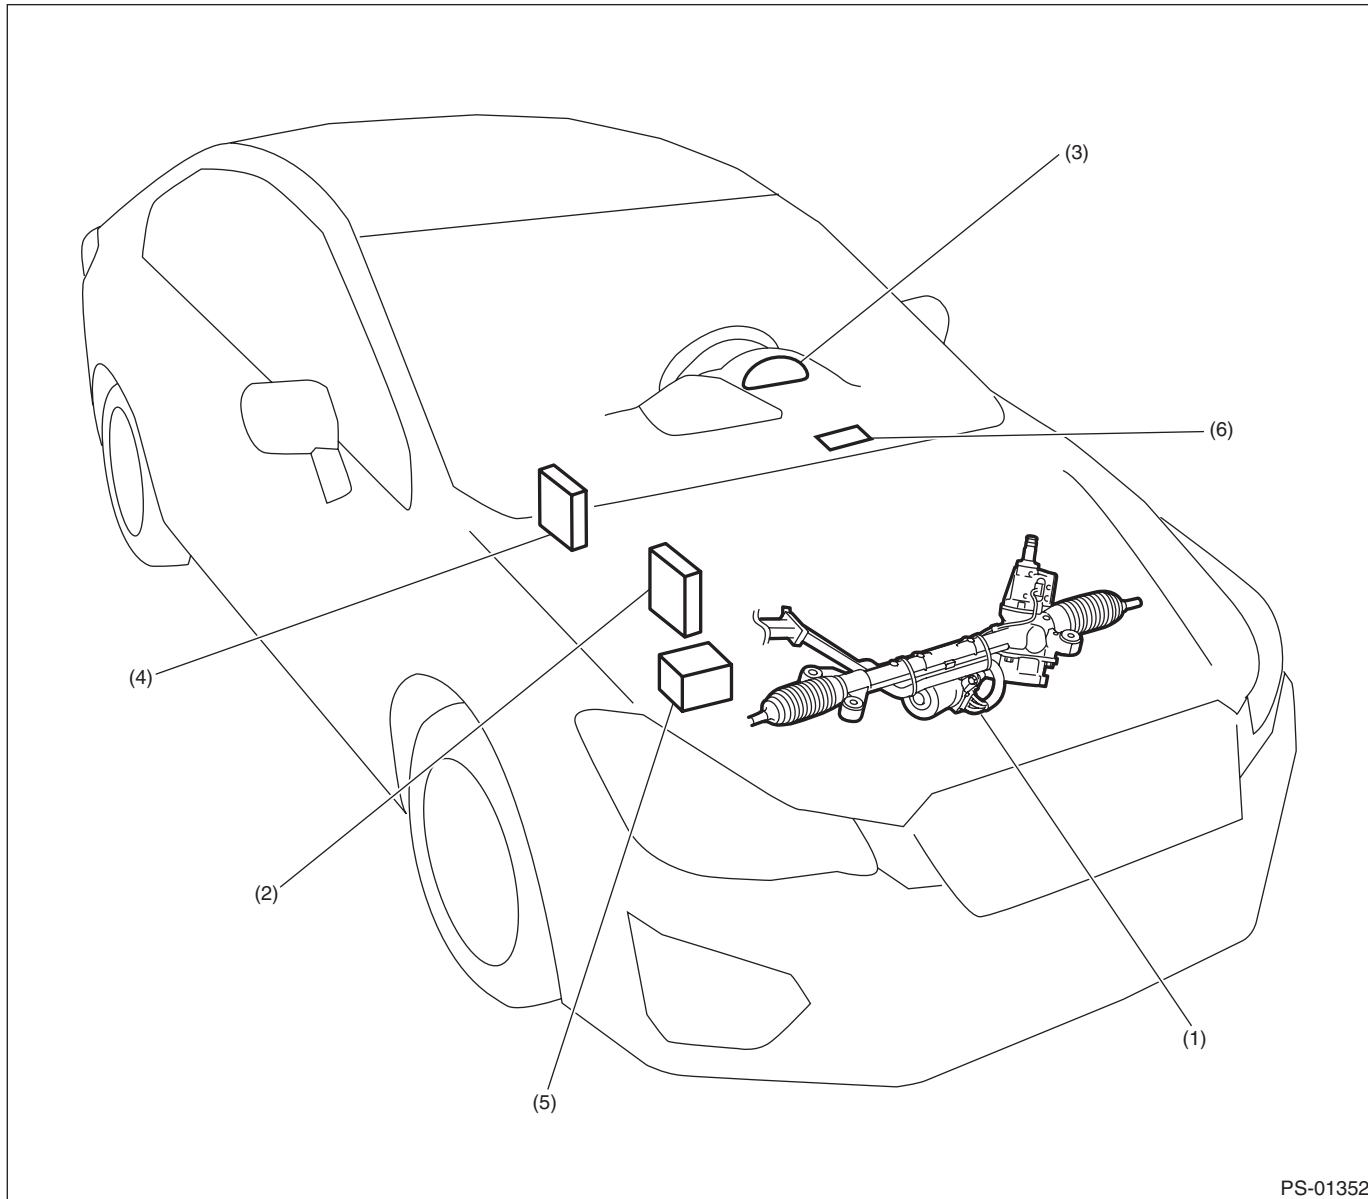


PS-01352


- | | | |
|-----------------------------------|---------------------------------|---|
| (1) Steering gearbox | (3) STEERING warning light | (5) VDCCM&H/U |
| (2) Power steering control module | (4) Engine control module (ECM) | (6) Data link connector (for Subaru Select Monitor) |

Electrical Component Location

POWER ASSISTED SYSTEM (POWER STEERING) (DIAGNOSTICS)

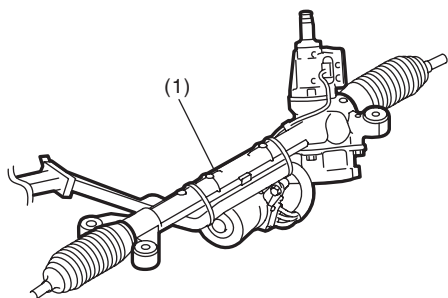


PS-01290

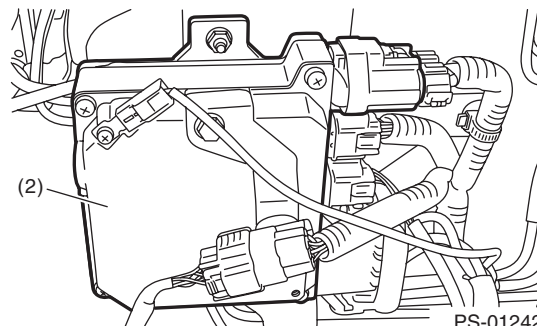


PS-01242

- Gasoline engine model (U5, U6 model)

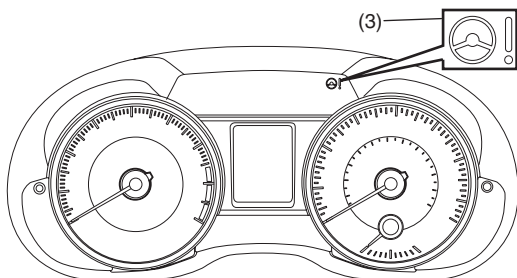


PS-01296

- Gasoline engine model (C0 model)

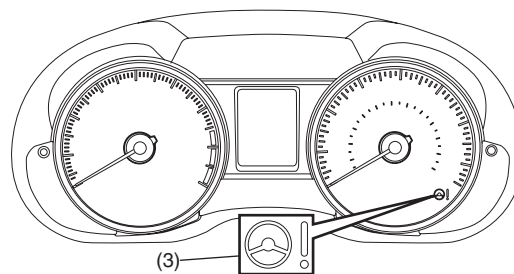


PS-01347


- HEV model

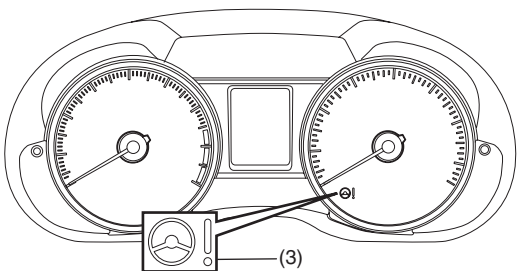


PS-01663

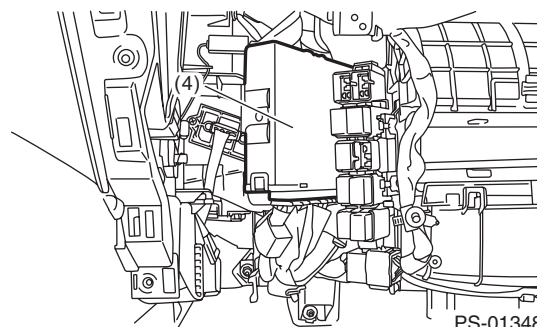

PS-01348

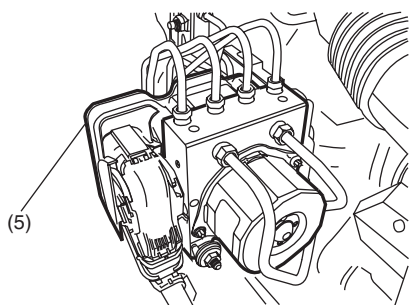

PS-01349

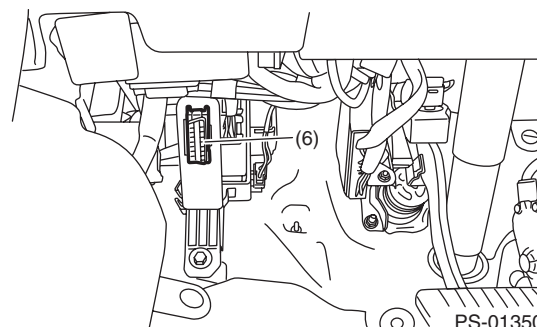

PS-01350