


5. Air Intake Duct

A: REMOVAL

- 1) Remove the clip which secures the air intake duct, and remove the air intake duct.

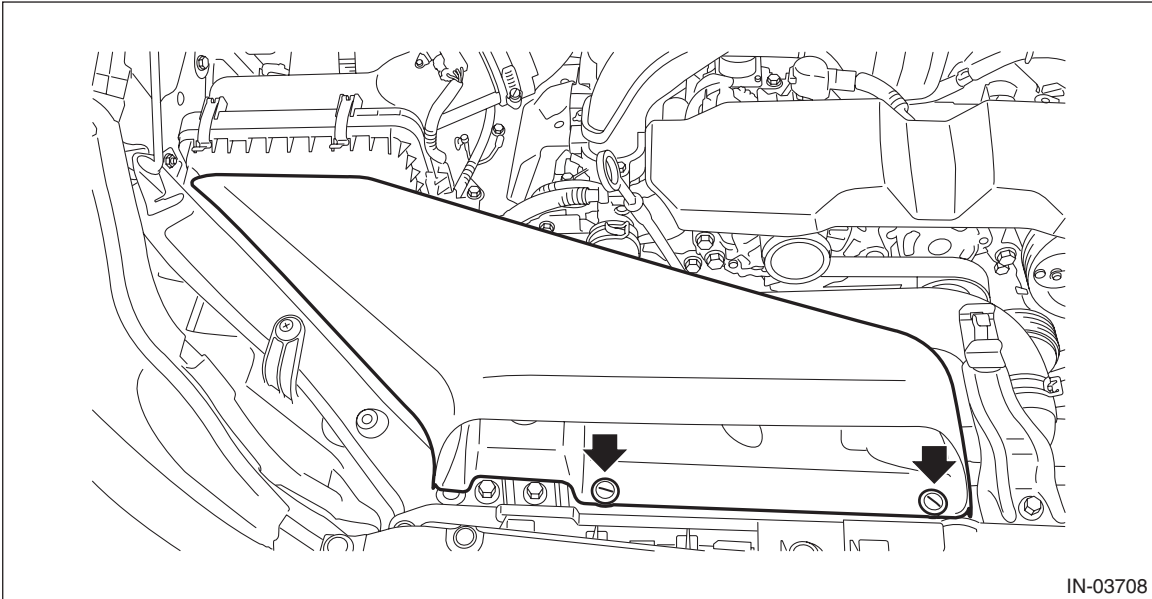

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check that the air intake duct has no deformation, cracks or other damages.
- 2) Inspect that no foreign objects are mixed in the air intake duct.

Air Intake Duct

INTAKE (INDUCTION)

MECHANICAL

ME(H4DO(w/o HEV))

	Page
1. General Description	2
2. Compression	26
3. Idle Speed	28
4. Ignition Timing	29
5. Intake Manifold Vacuum	30
6. Engine Oil Pressure	33
7. Fuel Pressure	35
8. Cam Clearance	44
9. Engine Assembly	55
10. Engine Mounting	120
11. Preparation for Overhaul	121
12. V-belt	122
13. Crank Pulley	140
14. Chain Cover	149
15. Timing Chain Assembly	169
16. Cam Sprocket	191
17. Crank Sprocket	201
18. Rocker Cover	202
19. Camshaft	219
20. Cam Carrier	220
21. Cylinder Head	263
22. Cylinder Block	304
23. Intake and Exhaust Valve	417
24. Piston	418
25. Connecting Rod	419
26. Crankshaft	420
27. Engine Trouble in General	421
28. Engine Noise	428