



### 37. Auto Headlight Beam Leveler Control Module

#### A: REMOVAL


- 1) Remove the knee airbag module. <Ref. to AB-34, REMOVAL, Knee Airbag Module.>
- 2) Release the lock and remove the fuse holder.

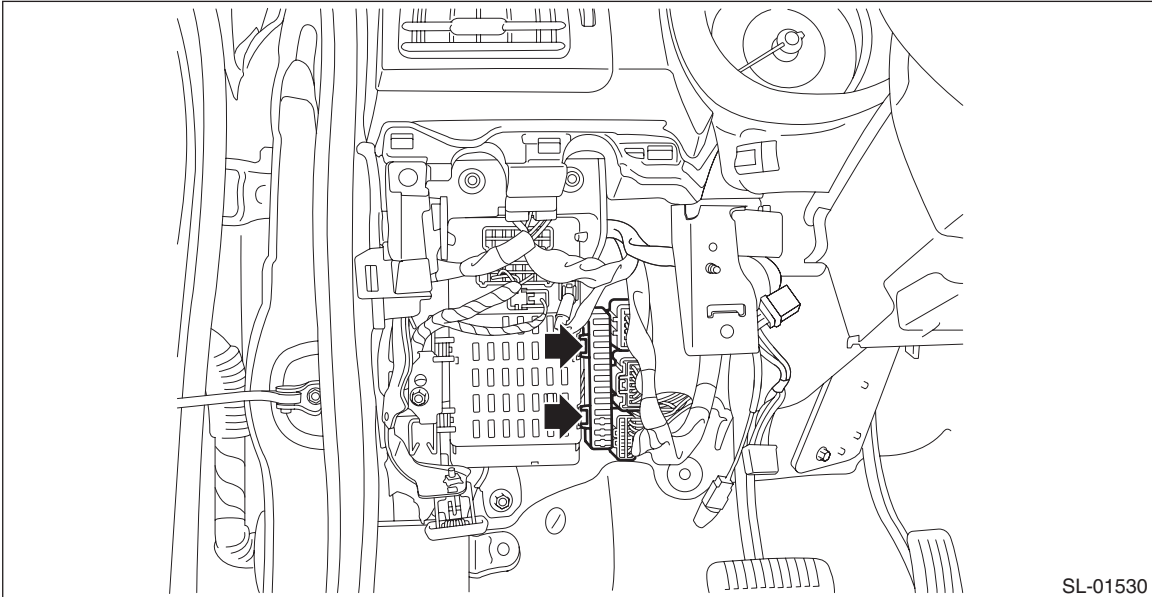

- 3) Remove the relay & fuse box.
  - (1) Disconnect the connector.
  - (2) Remove the bolts and nuts, and remove the relay & fuse box.

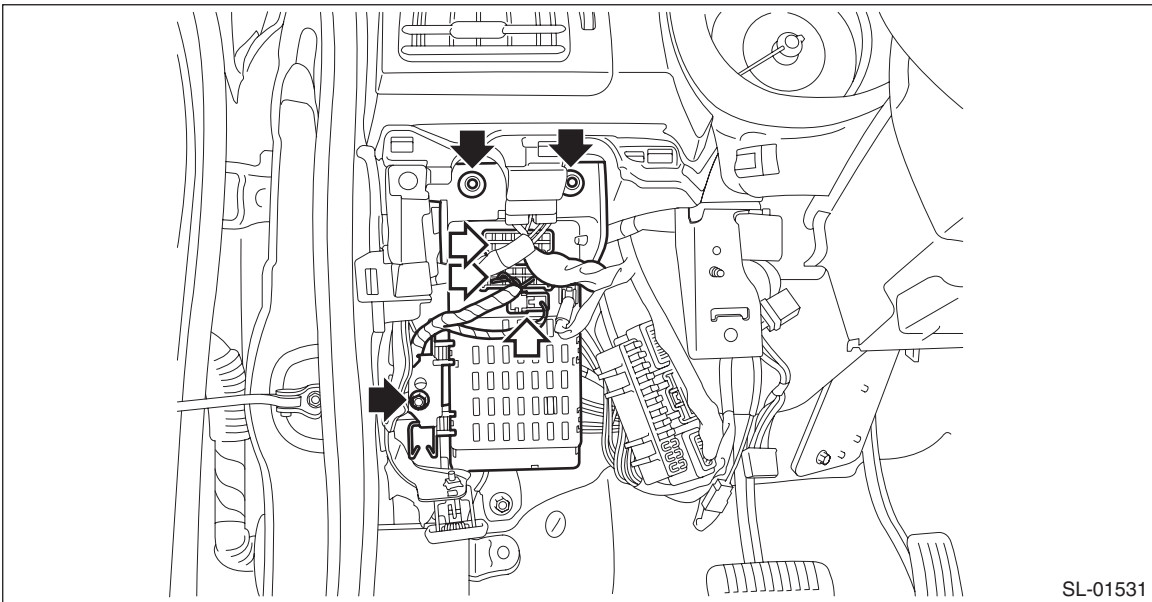


- 4) Disconnect the connector of body integrated unit.

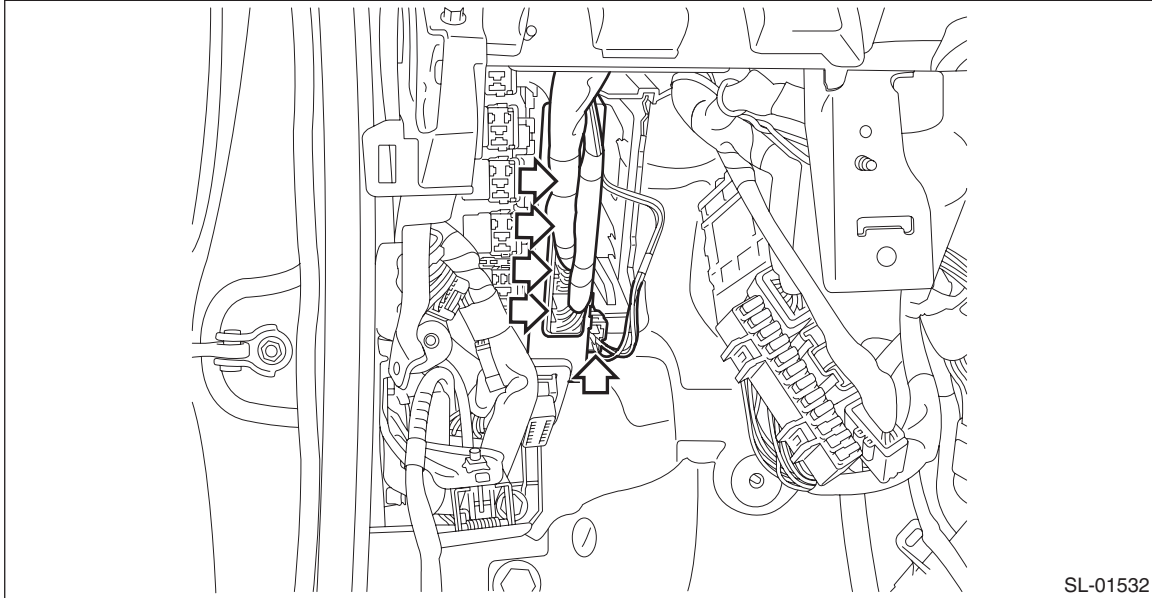

- 5) Remove the auto headlight beam leveler CM.

- (1) Disconnect the connector.
- (2) Release the claws and pull out the auto headlight beam leveler CM.

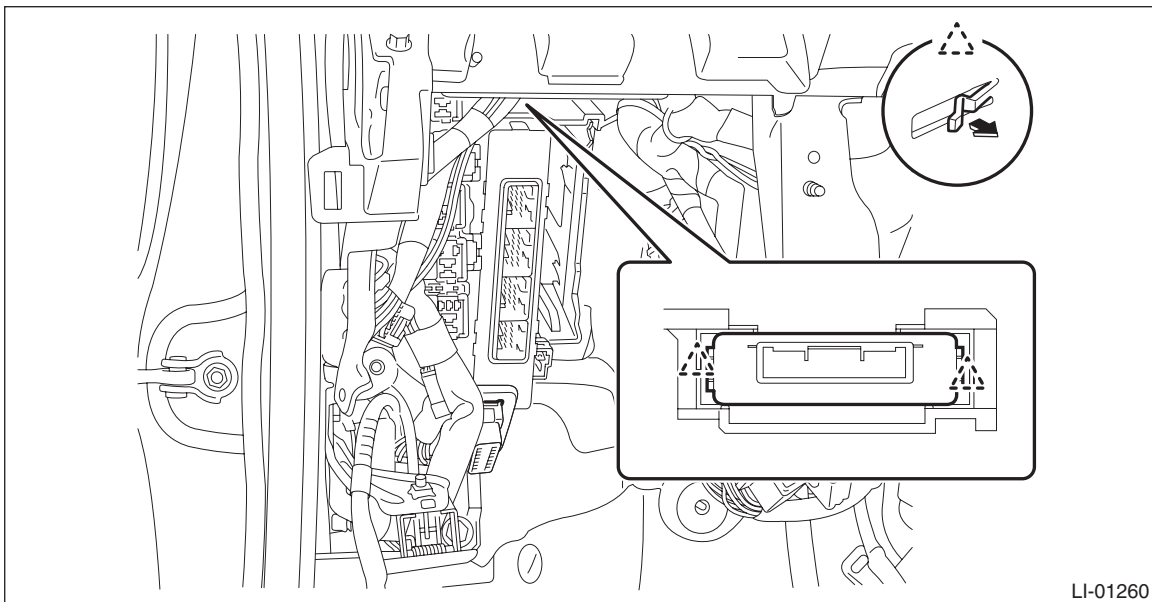

## B: INSTALLATION

Install each part in the reverse order of removal.

### **Tightening torque:**

**Relay & fuse box: 7.5 N·m (0.76 kgf-m, 5.5 ft-lb)**

### **NOTE:**

When the auto headlight beam leveler CM is removed, perform initialization or reinitialization. <Ref. to LI-20, PROCEDURE, Auto Headlight Beam Leveler System.>