


# General Description

EXTERIOR/INTERIOR TRIM

## 1. General Description

### A: COMPONENT

#### 1. FRONT UNDER COVER

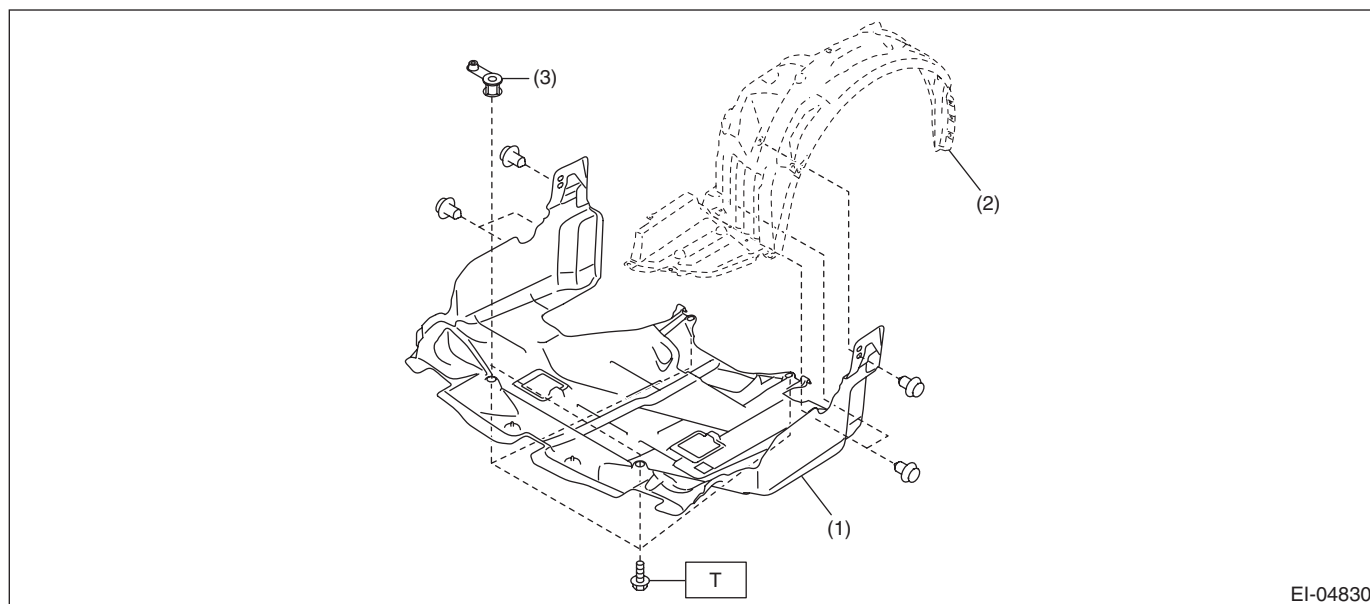

(1) Under cover - front


(3) Spacer - under cover (XV model)

(2) Mud guard - front

**Tightening torque: N·m (kgf-m, ft-lb)**

**T: 18 (1.84, 13.3)**

## 2. MUD GUARD

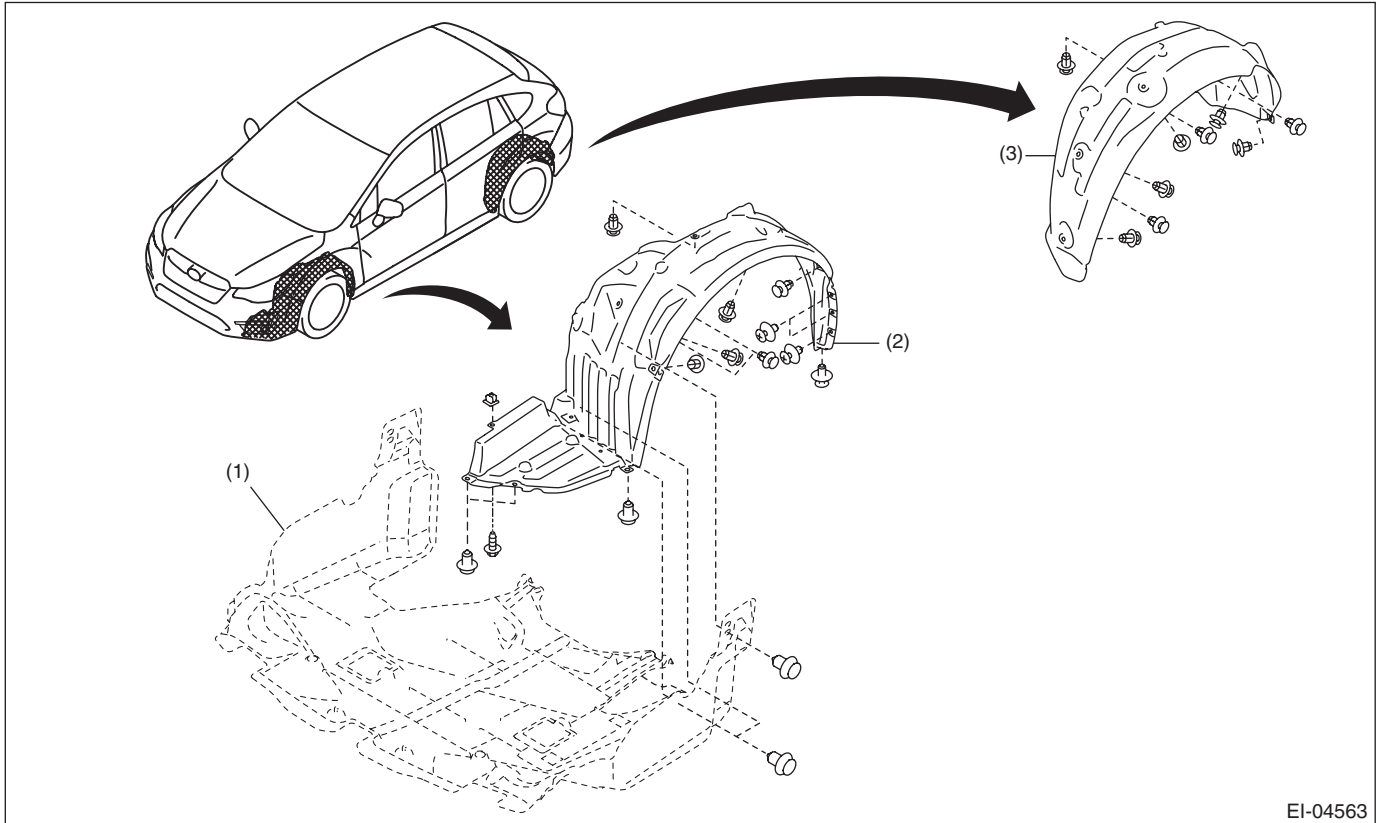

EI-04563

(1) Under cover - front

(2) Mud guard - front


(3) Mud guard - rear

# General Description

## EXTERIOR/INTERIOR TRIM

### 3. FLOOR UNDER PROTECTOR


- Type A

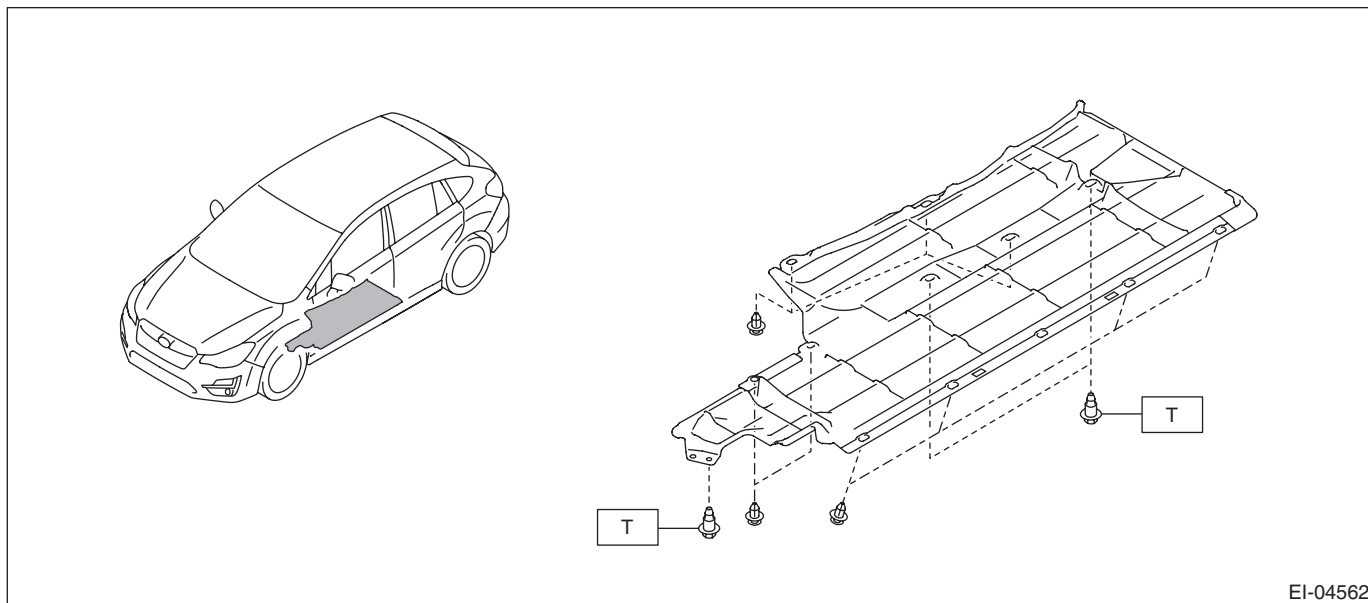

**Tightening torque: N·m (kgf-m, ft-lb)**

**T: 7.5 (0.76, 5.5)**


- Type B

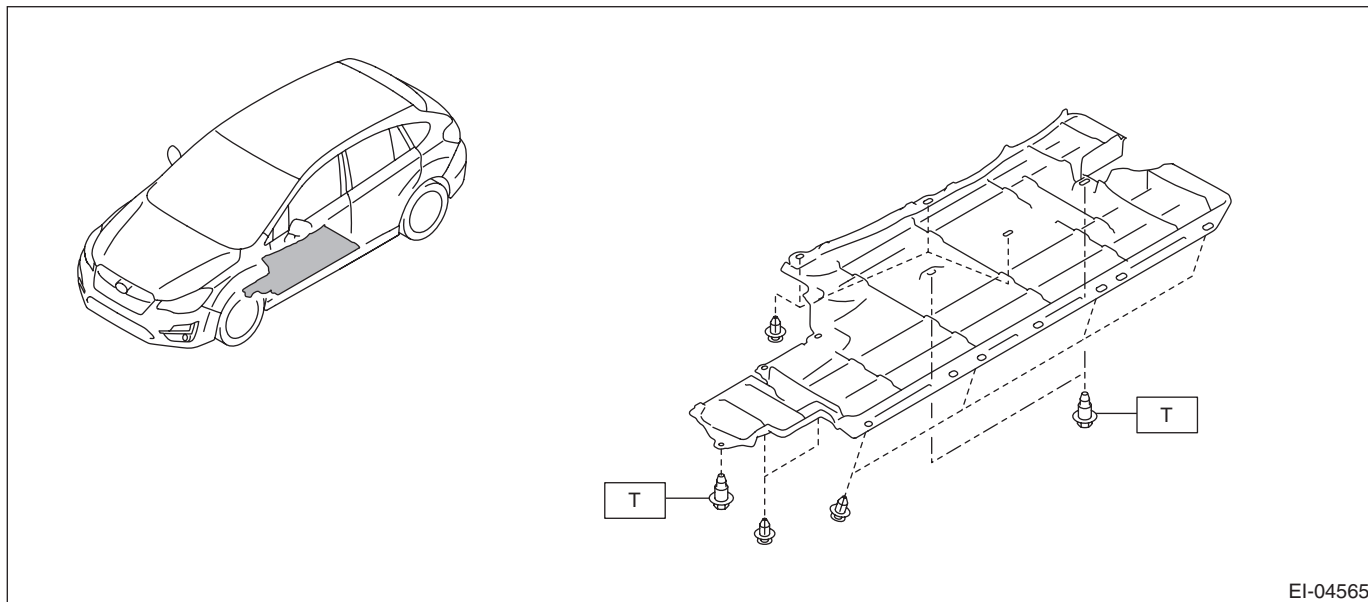

**Tightening torque: N·m (kgf-m, ft-lb)**

**T: 7.5 (0.76, 5.5)**

- Type C

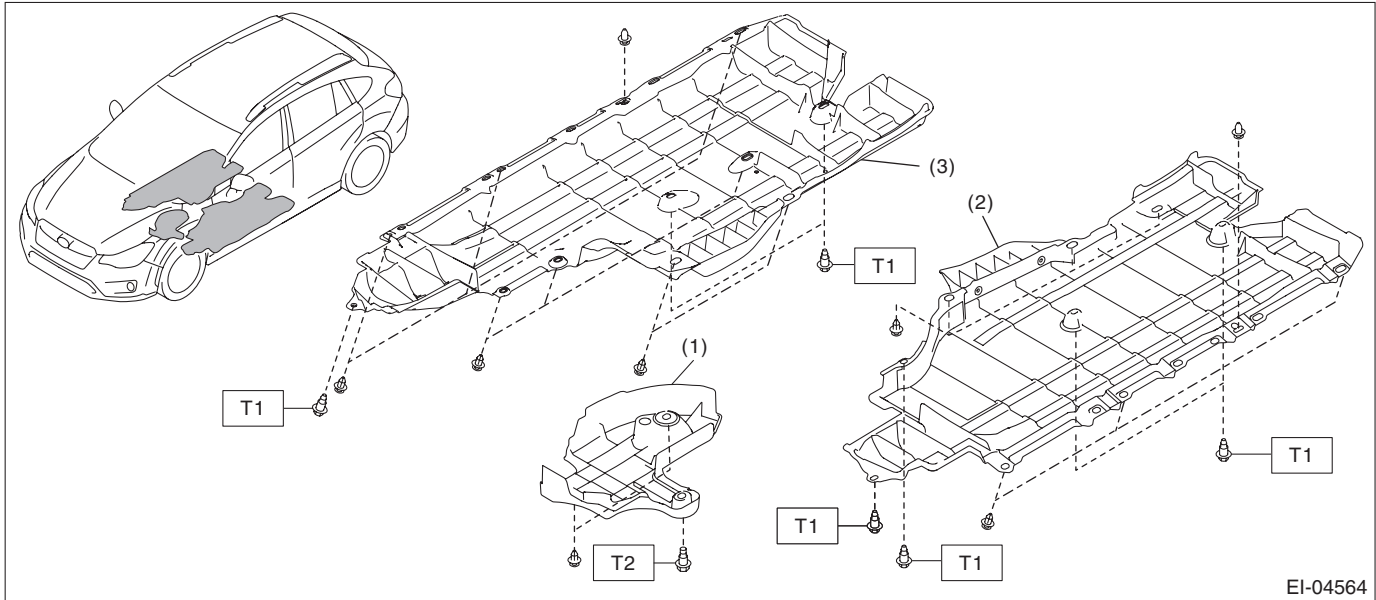

(1) Under cover front - cable

(3) Under cover - rear RH

(2) Under cover - rear LH

**Tightening torque: N·m (kgf·m, ft·lb)**

**T1: 7.5 (0.76, 5.5)**

**T2: 18 (1.84, 13.3)**


## 4. FUEL TANK PROTECTOR

For exploded view of the fuel tank protector, refer to “FUEL TANK” of “FUEL INJECTION” section. <Ref. to FU(H4DO(w/o HEV))-7, FUEL TANK, COMPONENT, General Description.>

# General Description

EXTERIOR/INTERIOR TRIM

## 5. PROTECTOR OIL COVER

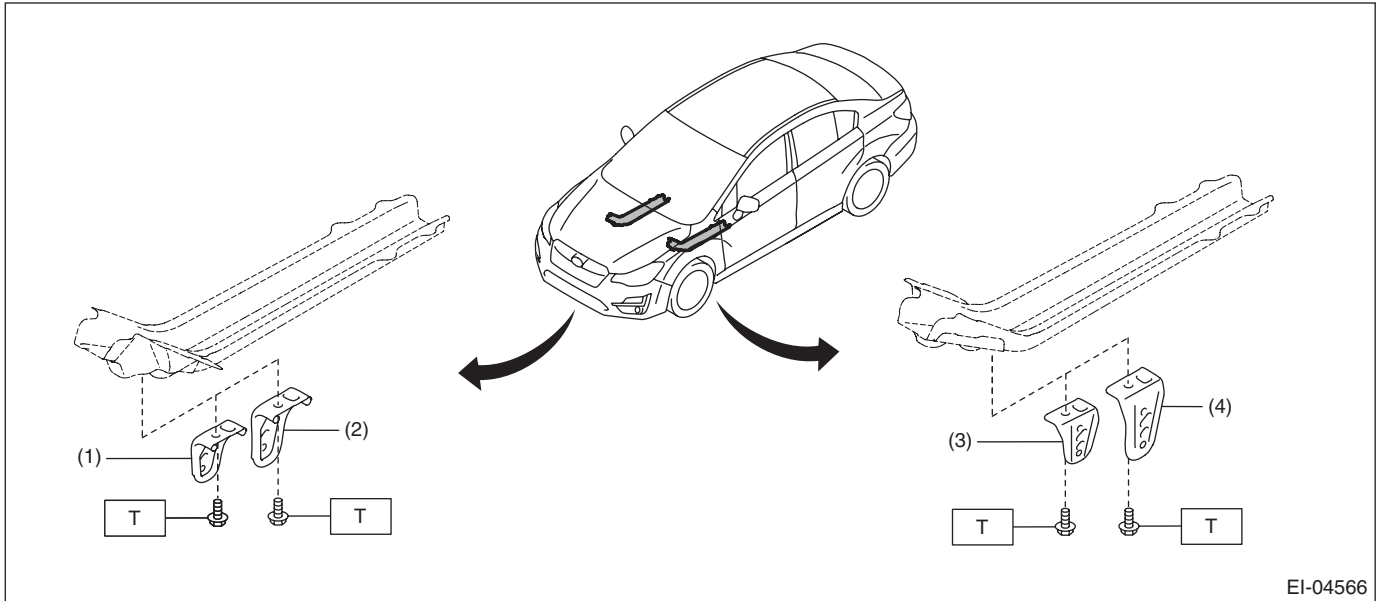

(1) Protector oil cover RH  
(except for XV model)

(2) Protector oil cover RH (XV model)


(3) Protector oil cover LH  
(except for XV model)

(4) Protector oil cover LH (XV model)

**Tightening torque: N·m (kgf-m, ft-lb)**

**T: 100 (10.2, 73.3)**

## 6. FRONT BUMPER

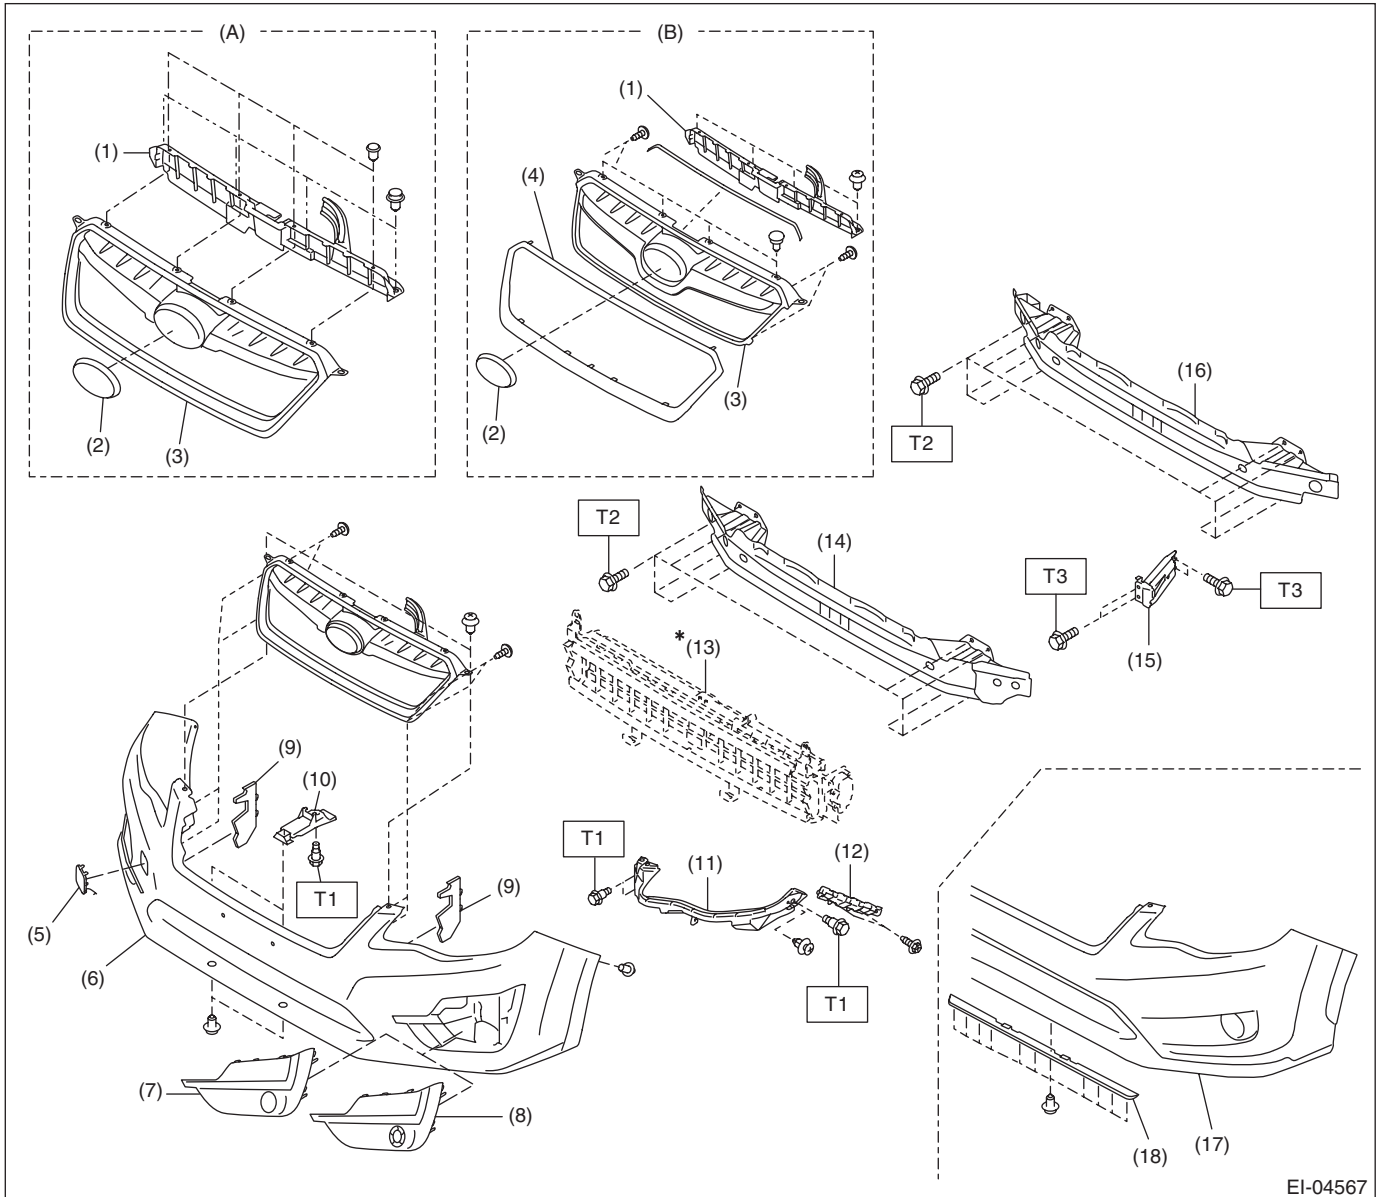

EI-04567

(A) Except for XV model

(B) XV model

- (1) Bracket - grille
- (2) Ornament front
- (3) Front grille ASSY
- (4) Ring - front grille
- (5) Cover - front bumper A
- (6) Bumper face - front (except for XV model)
- (7) Cover - fog light A
- (8) Cover - front bumper B

- (9) Radiator gasket
- (10) Bracket - front center LWR
- (11) Bracket - front bumper corner
- (12) Bracket - front bumper side
- (13) Active grille shutter (ACTGS)
- (14) Bumper beam COMPL - front (HEV model)
- (15) Gusset COMPL - front side
- (16) Bumper beam COMPL - front (gasoline engine model)

- (17) Bumper face - front (XV model)
- (18) Under spoiler - front (XV model)

**Tightening torque: N·m (kgf-m, ft-lb)**

**T1: 7.5 (0.76, 5.5)**

**T2: 32 (3.26, 23.6)**

**T3: 65 (6.63, 47.9)**


\*: For exploded view of the active grille shutter (ACTGS), refer to "ACTIVE GRILLE SHUTTER" of "HYBRID ELECTRIC VEHICLE" section. <Ref. to HEV-9, HYBRID POWERTRAIN CONTROL MODULE, COMPONENT, General Description.>

# General Description

## EXTERIOR/INTERIOR TRIM

### 7. REAR BUMPER

- 4 door model

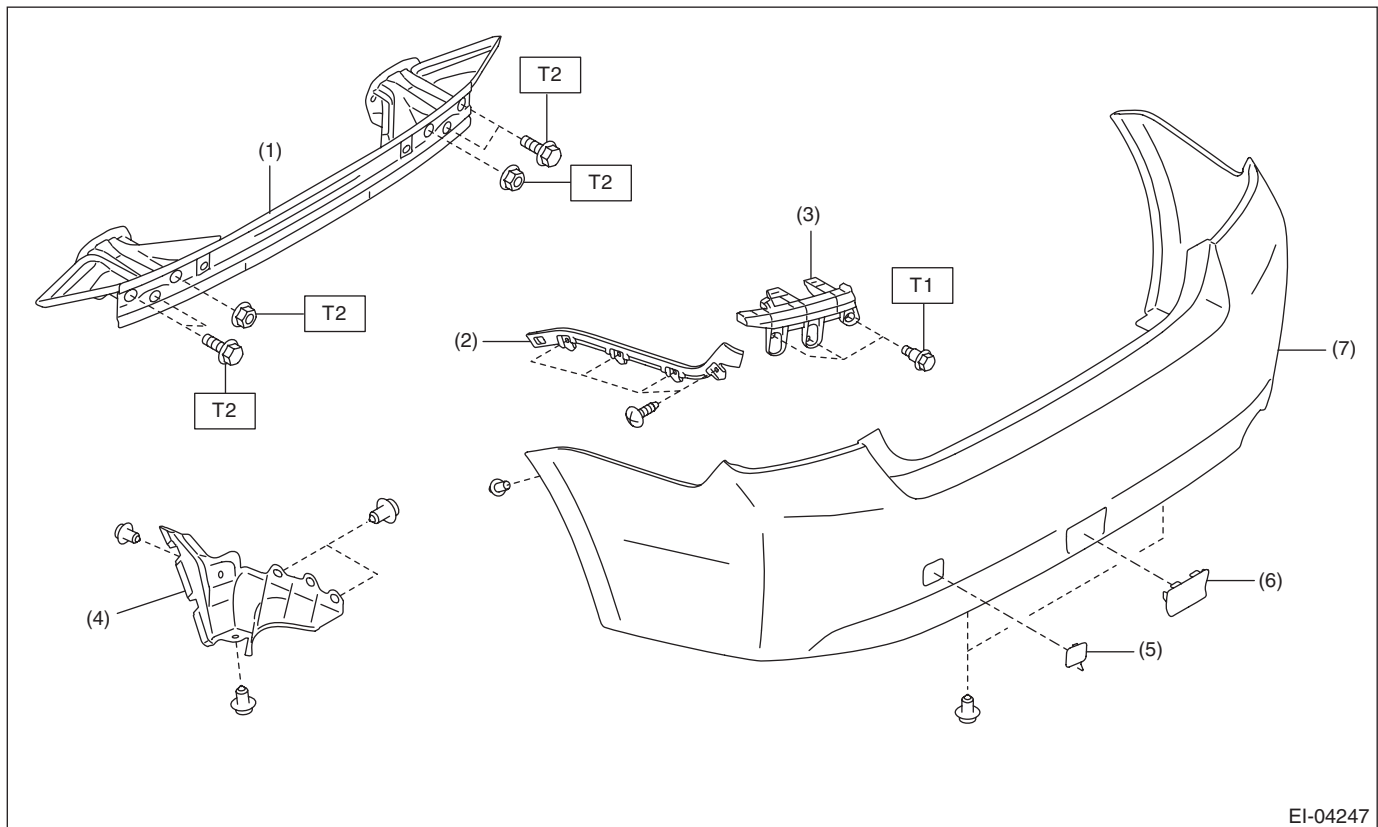


- (1) Bumper beam COMPL - rear
- (2) Bracket - rear bumper side
- (3) Bracket - rear bumper corner
- (4) Cover - rear bumper side

- (5) Cover - rear bumper A
- (6) Cover - rear bumper B
- (7) Bumper face - rear

**Tightening torque: N·m (kgf-m, ft-lb)**  
**T1: 7.5 (0.76, 5.5)**  
**T2: 70 (7.14, 51.6)**

- 5 door model/XV model

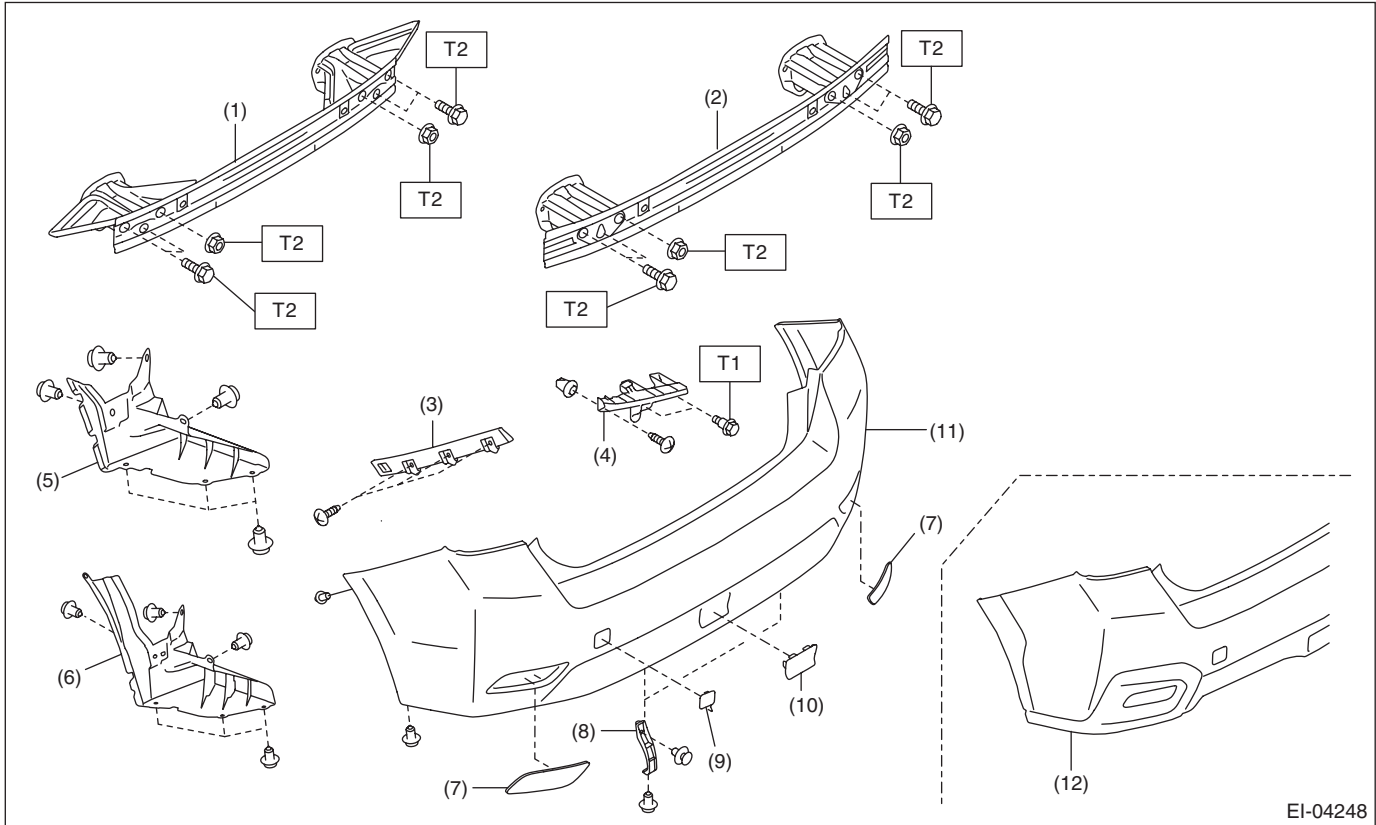

EI-04248

- |   |  |
|---|--|
| (1) Bumper beam COMPL - rear<br>(except for XV model) | (7) Reflex reflector ASSY                        |
| (2) Bumper beam COMPL - rear<br>(XV model)            | (8) Bracket - rear bumper lower                  |
| (3) Bracket - rear bumper side                        | (9) Cover - rear bumper A                        |
| (4) Bracket - rear bumper corner                      | (10) Cover - rear bumper B                       |
| (5) Cover - rear bumper side<br>(except for XV model) | (11) Bumper face - rear<br>(except for XV model) |
| (6) Cover - rear bumper side<br>(XV model)            | (12) Bumper face - rear<br>(XV model)            |

**Tightening torque: N-m (kgf-m, ft-lb)**

**T1: 7.5 (0.76, 5.5)**

**T2: 70 (7.14, 51.6)**




# General Description

## EXTERIOR/INTERIOR TRIM


### 8. COWL PANEL

- Models without EyeSight

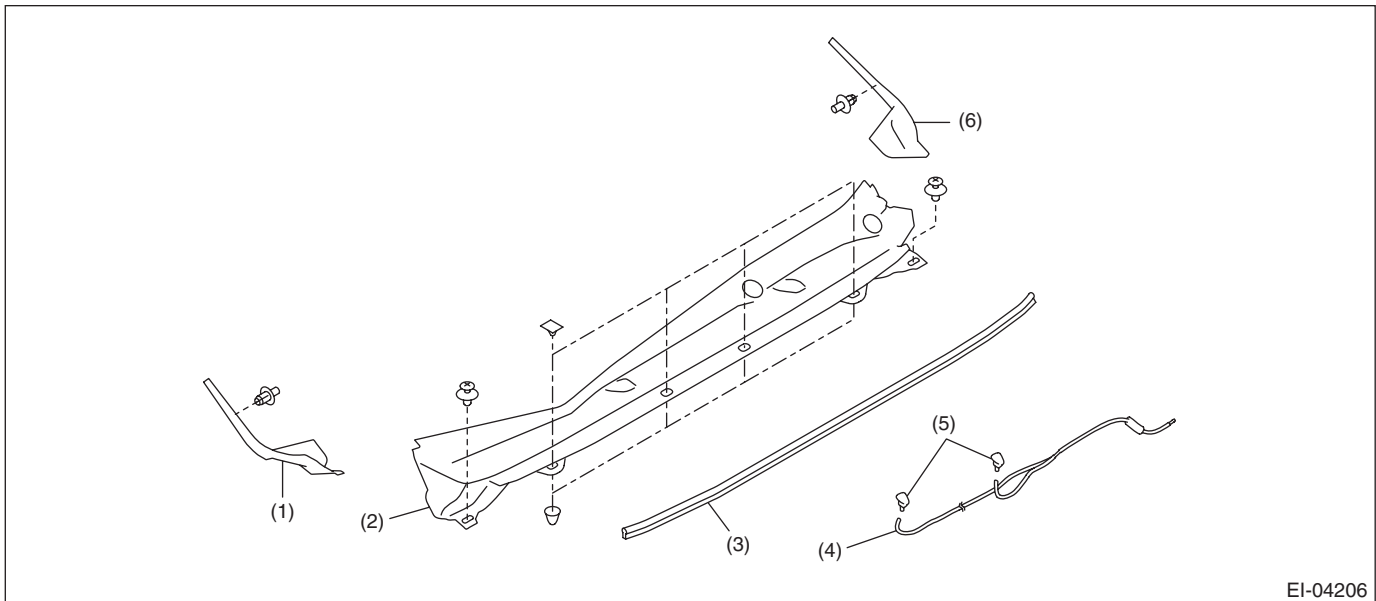


- |                          |                              |                                |
|--------------------------|------------------------------|--------------------------------|
| (1) Cowl panel - side RH | (3) Seal - front panel       | (5) Nozzle - windshield washer |
| (2) Cowl panel ASSY      | (4) Hose - windshield washer | (6) Cowl panel - side LH       |

- Models with EyeSight

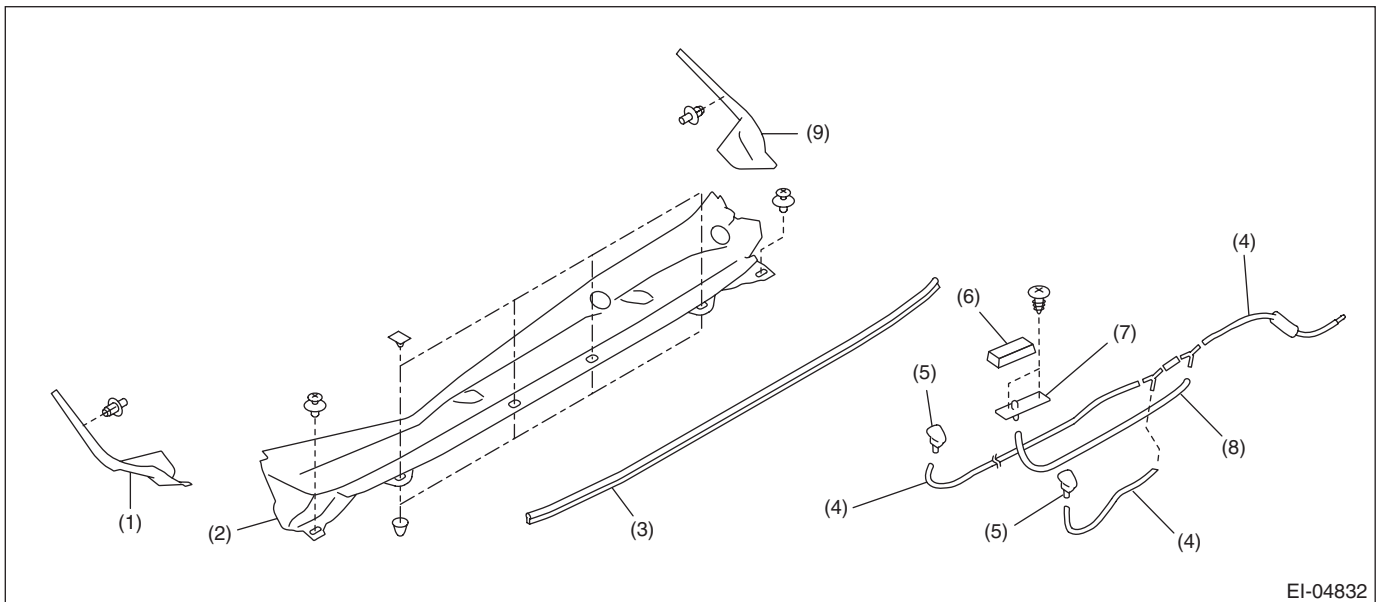


- |                          |                                |                          |
|--------------------------|--------------------------------|--------------------------|
| (1) Cowl panel - side RH | (4) Hose - windshield washer   | (7) Joint - washer hose  |
| (2) Cowl panel ASSY      | (5) Nozzle - windshield washer | (8) Hose - wiper arm     |
| (3) Seal - front panel   | (6) Cover - joint              | (9) Cowl panel - side LH |

## 9. SIDE GARNISH

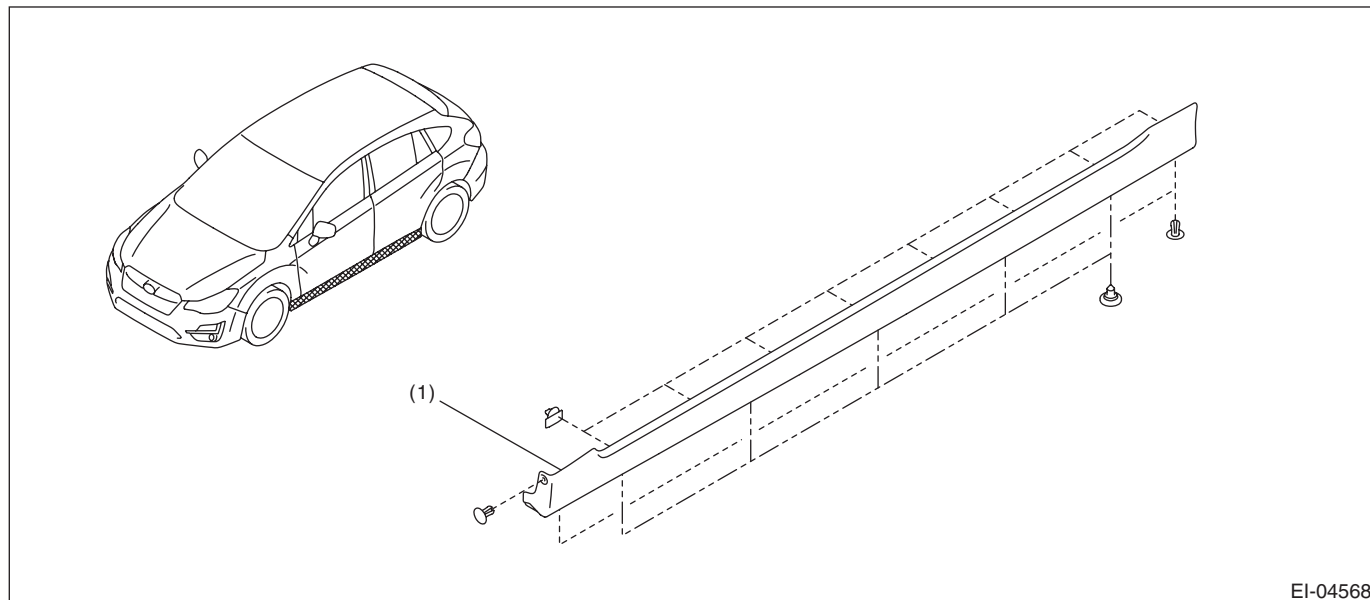

EI-04568

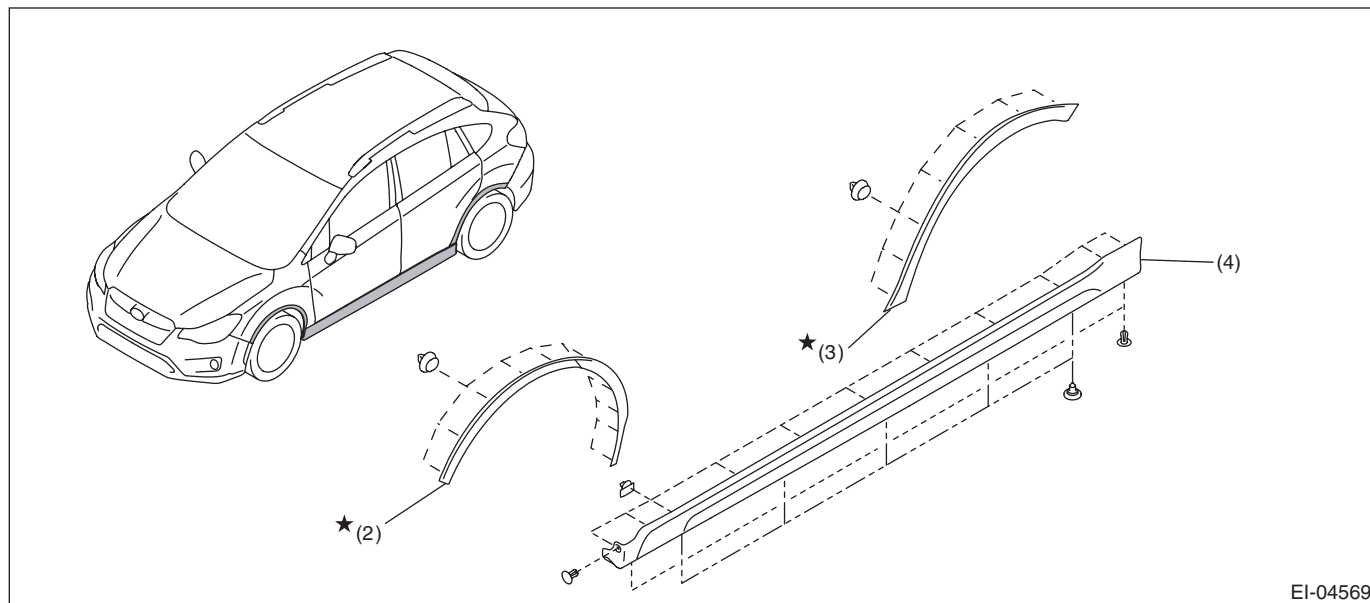

EI-04569

- (1) Garnish ASSY - side sill (except for XV model)
- (2) Garnish ASSY - fender (XV model)


- (3) Garnish ASSY - rear quarter (XV model)

- (4) Garnish ASSY - side sill (XV model)


# General Description

## EXTERIOR/INTERIOR TRIM

### 10.ROOF MOLDING

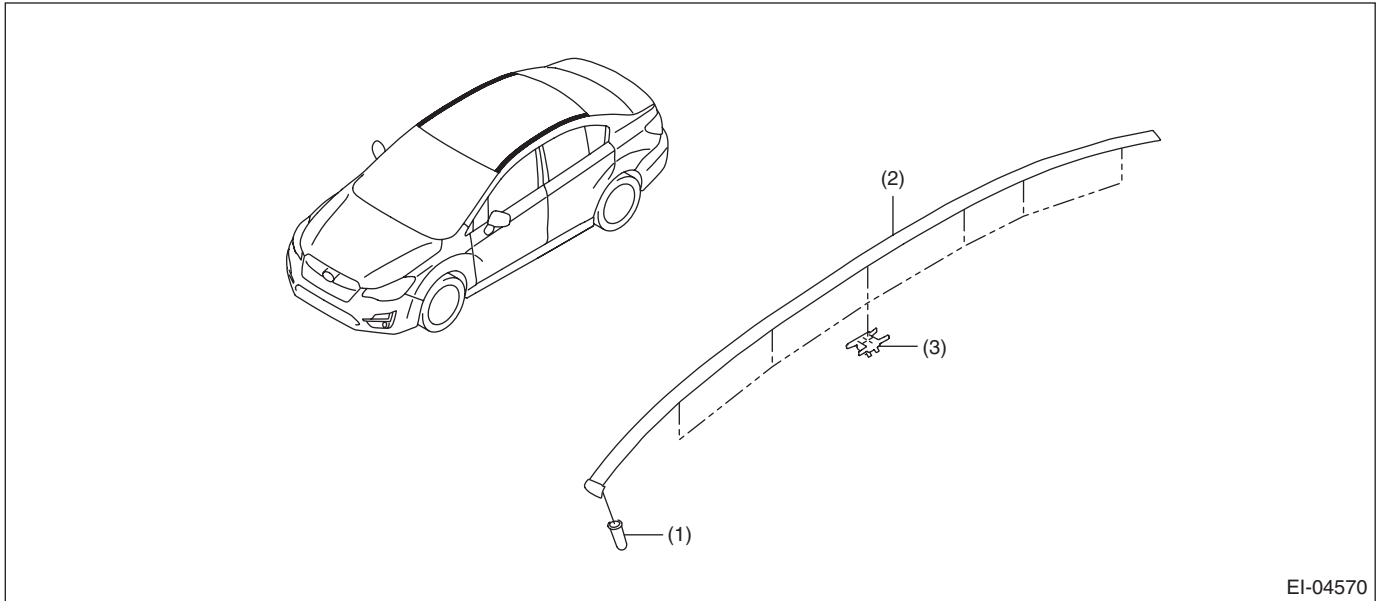

EI-04570

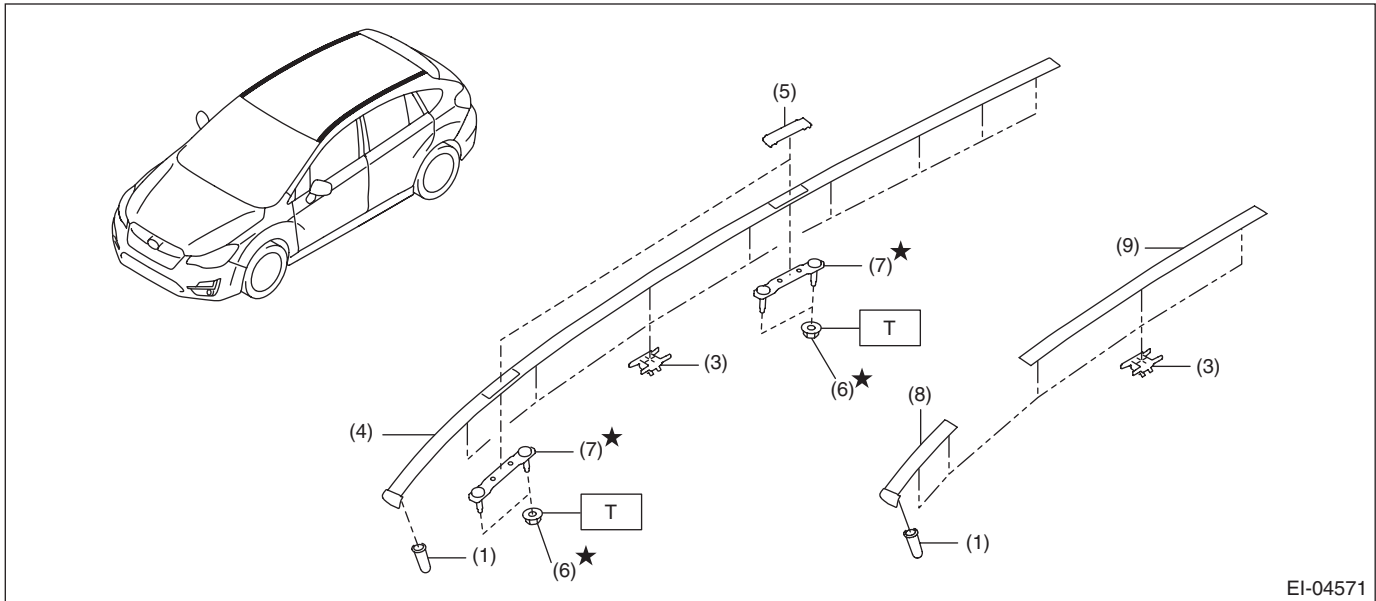


EI-04571

- |   |  |   |
|---|--|---|
| (1) Rivet                                     | (5) Cap - molding                                  | (9) Molding - roof rear<br>(model with roof rail) |
| (2) Molding - roof (4 door model)             | (6) Flange nut                                     |   |
| (3) Fastener                                  | (7) Bracket - molding roof                         |   |
| (4) Molding - roof<br>(5 door model/XV model) | (8) Molding - roof front<br>(model with roof rail) |   |

**Tightening torque: N·m (kgf·m, ft·lb)**

**T: 7.5 (0.76, 5.5)**

## 11.ROOF RAIL

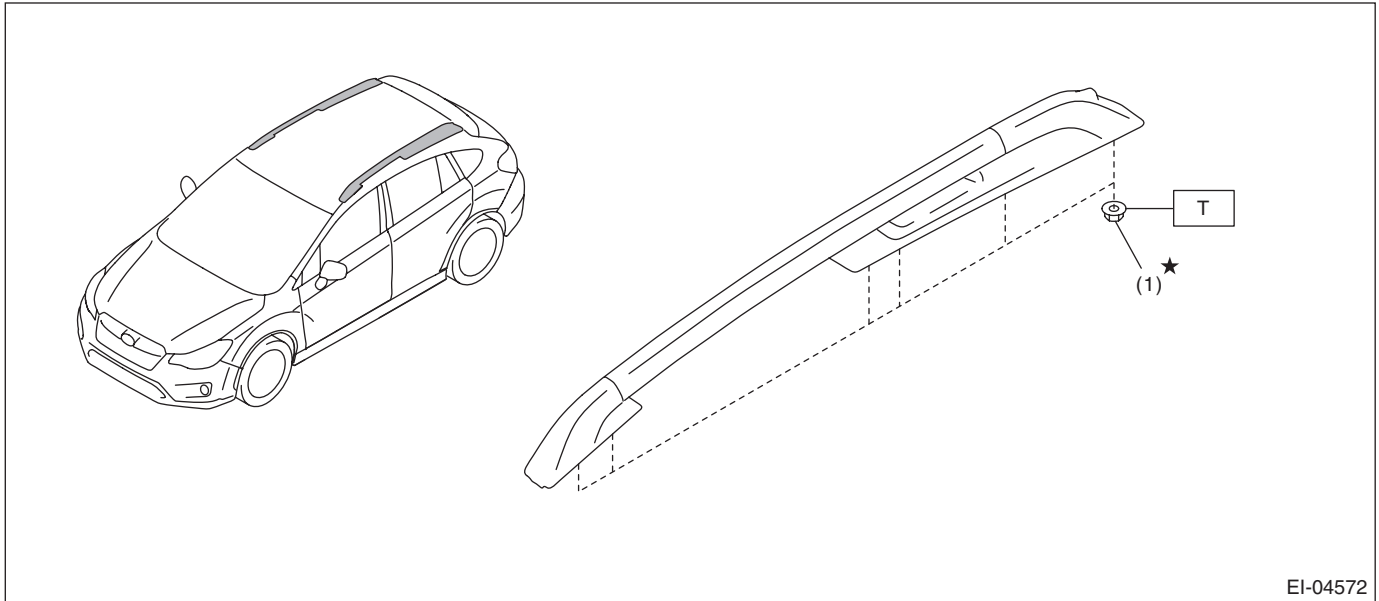


EI-04572

(1) Self-locking nut

**Tightening torque: N·m (kgf-m, ft-lb)**

**T: 7.5 (0.76, 5.5)**

## 12.REAR SPOILER

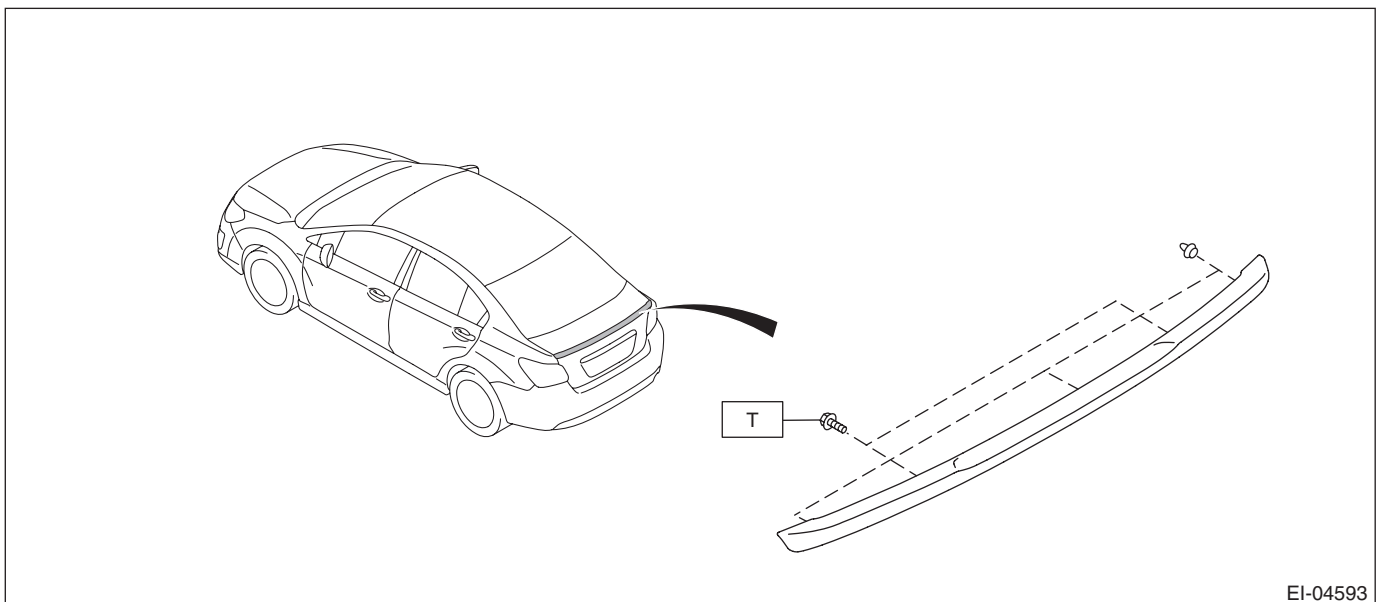

EI-04593


**Tightening torque: N·m (kgf-m, ft-lb)**

**T: 7.5 (0.76, 5.5)**

## General Description

EXTERIOR/INTERIOR TRIM

### 13.ROOF SPOILER

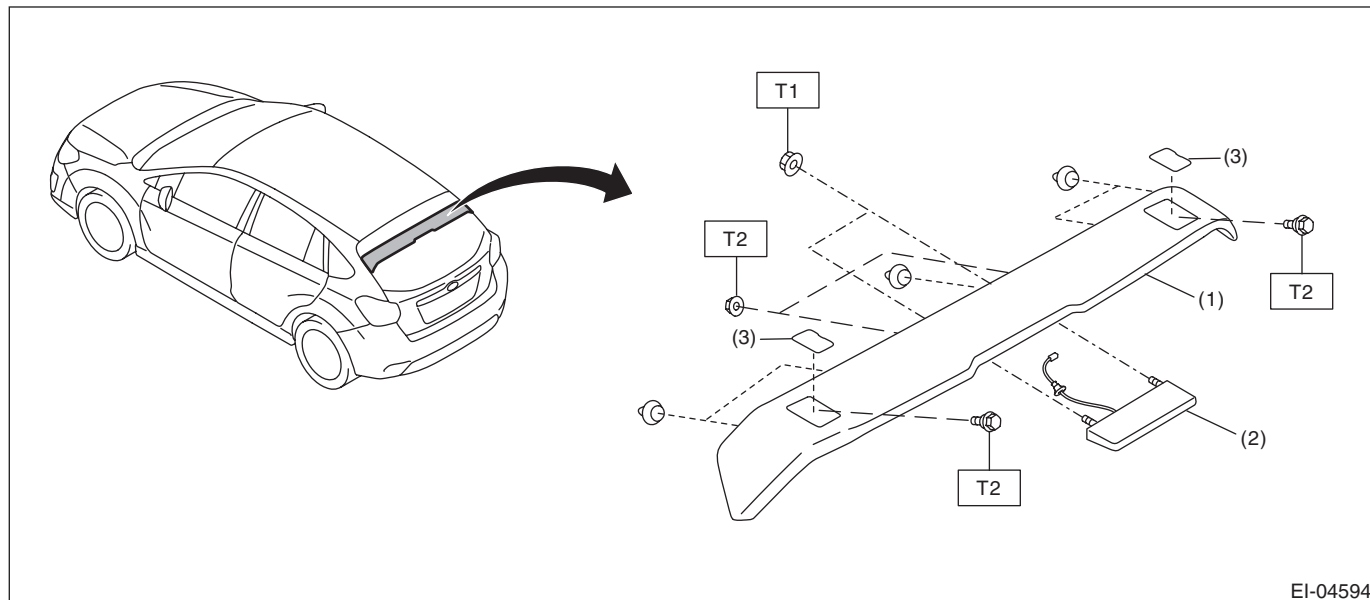

EI-04594


- (1) Roof spoiler  
(2) High-mounted stop light ASSY  
(3) Cap

**Tightening torque: N·m (kgf-m, ft-lb)**

**T1: 4.5 (0.46, 3.3)**

**T2: 7.5 (0.76, 5.5)**

## 14.DOOR TRIM

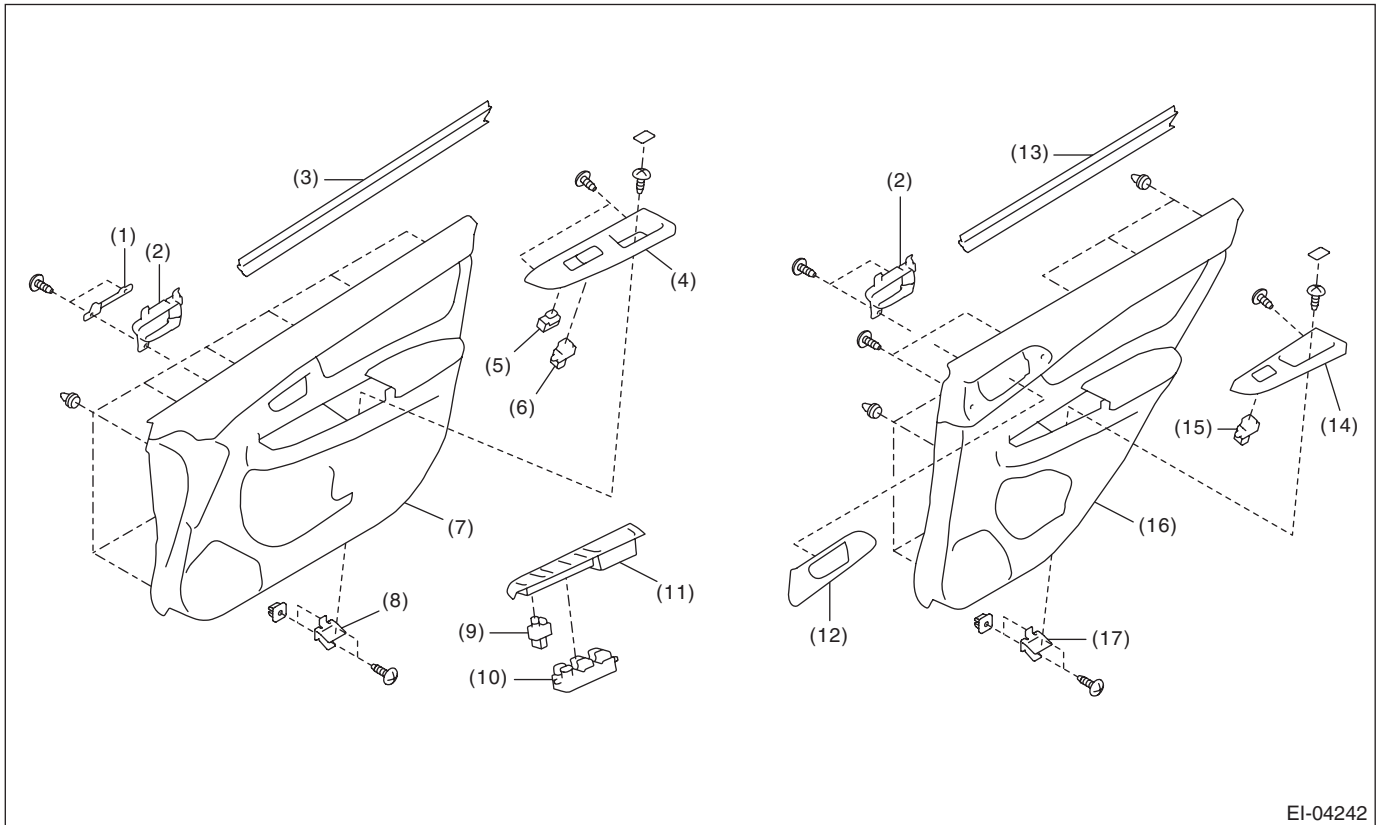


EI-04242

- |   |                                       |   |
|---|---------------------------------------|---|
| (1) Plate                                 | (7) Trim panel - front door           | (13) Weather strip - door rear INN        |
| (2) Remote ASSY - door                    | (8) Bracket - door trim front         | (14) Panel - power window sub-switch rear |
| (3) Weather strip - door front INN        | (9) Switch - door mirror              | (15) Switch - power window sub rear       |
| (4) Panel - power window sub-switch front | (10) Switch - power window main       | (16) Trim panel - rear door               |
| (5) Switch - door lock sub                | (11) Panel - power window main switch | (17) Bracket - door trim rear             |
| (6) Switch - power window sub front       | (12) Cover - remote rear door         |   |

# General Description

## EXTERIOR/INTERIOR TRIM

### 15.CONSOLE BOX

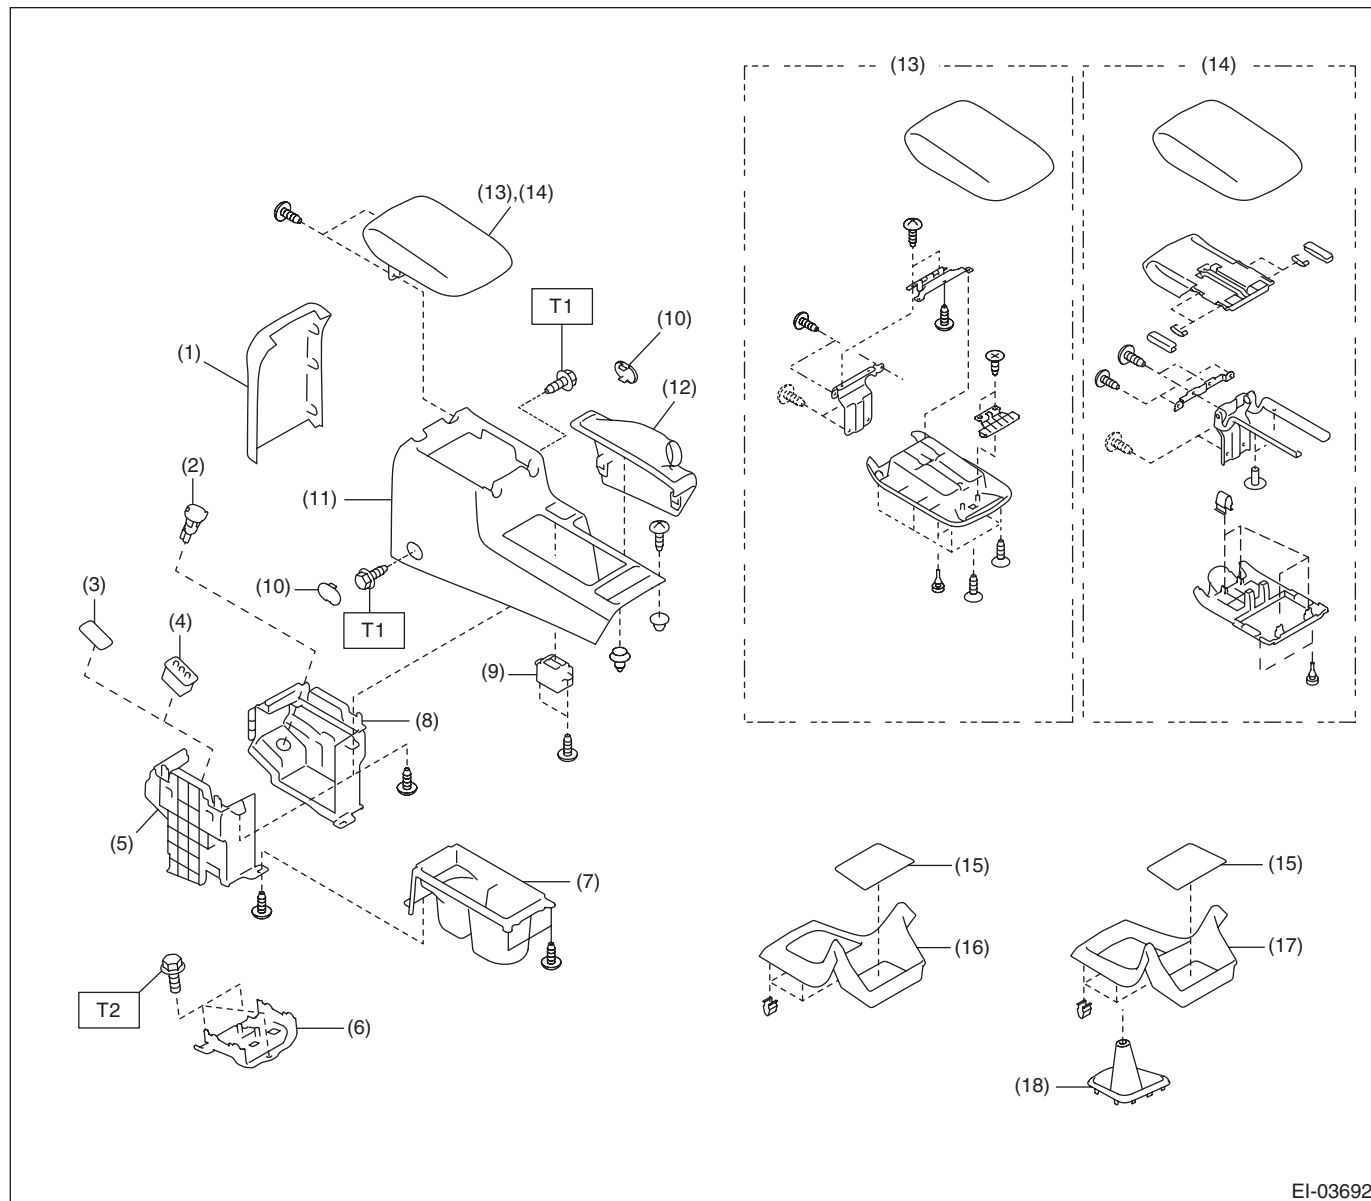

EI-03692

- |                           |  |
|---------------------------|--|
| (1) Console box, rear     | (9) Switch - seat heater                   |
| (2) Accessory socket      | (10) Cap - console box                     |
| (3) Cap                   | (11) Console box                           |
| (4) AUX unit              | (12) Boot - parking brake                  |
| (5) Pocket console box RH | (13) Lid ASSY - console box (fixed type)   |
| (6) Bracket - console box | (14) Lid ASSY - console box (sliding type) |
| (7) Cup holder            | (15) Mat                                   |
| (8) Pocket console box LH | (16) Cover front (CVT model)               |


- |                                    |
|------------------------------------|
| (17) Cover front (MT model)        |
| (18) Boot - shift lever (MT model) |

**Tightening torque: N·m (kgf-m, ft-lb)**

**T1: 6.5 (0.66, 4.8)**

**T2: 18 (1.84, 13.3)**

## 16.INSTRUMENT PANEL

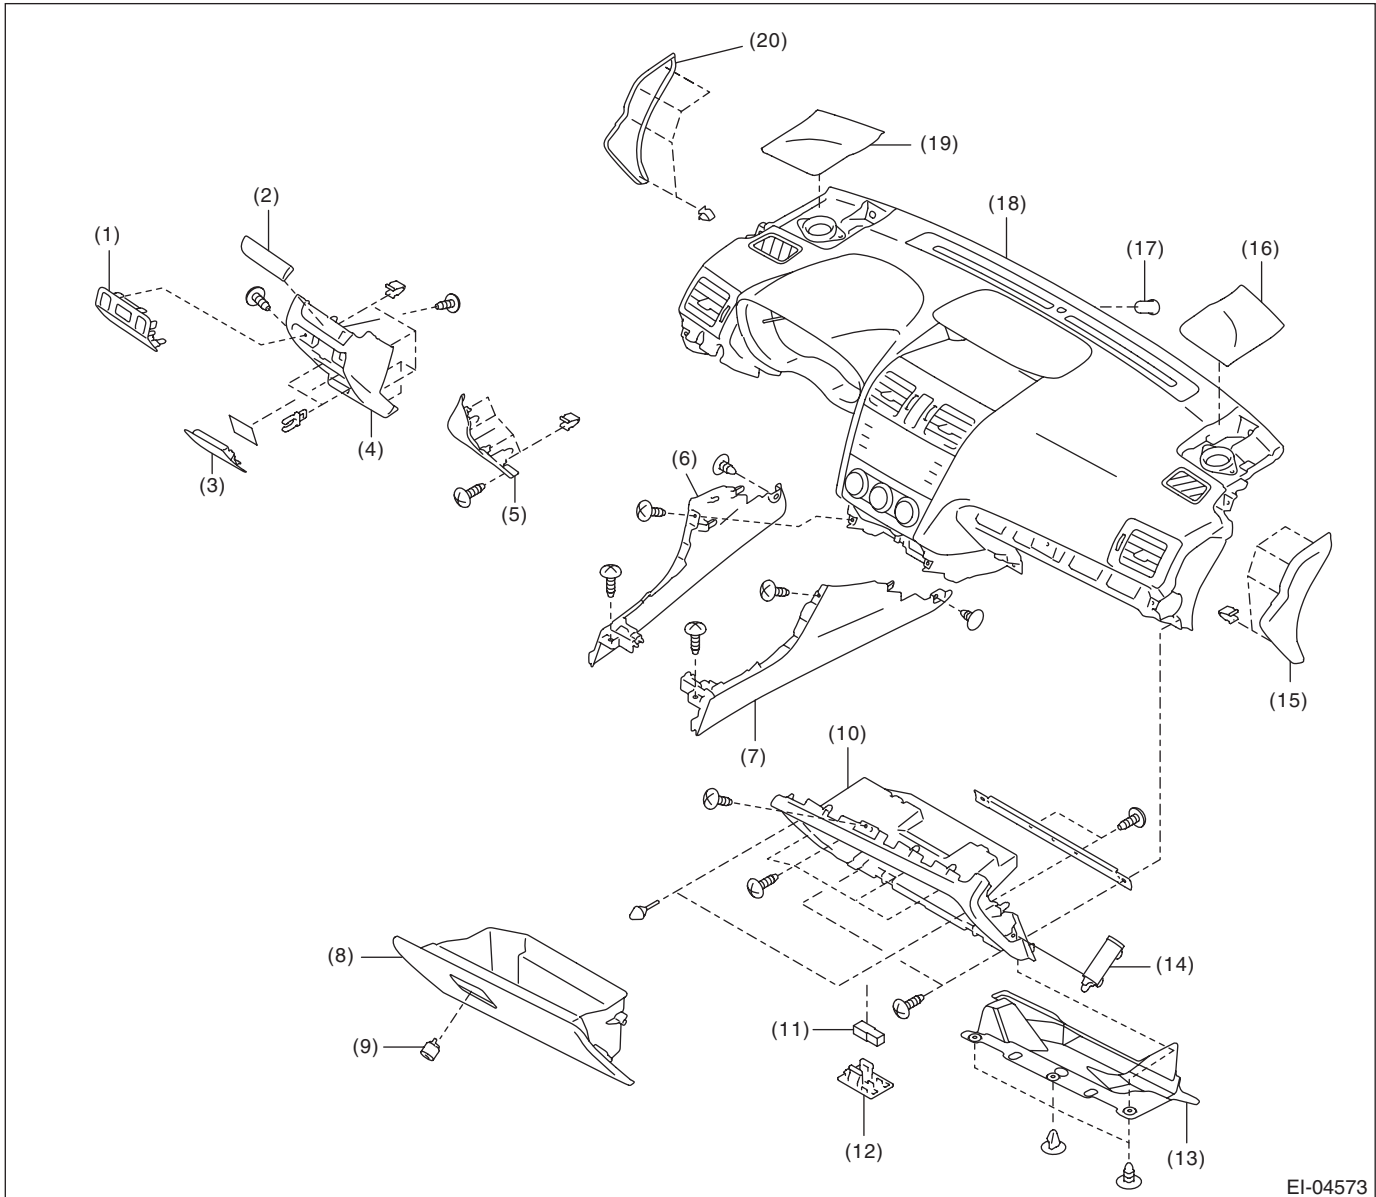


EI-04573

- |  |                                   |                                       |
|--|-----------------------------------|---------------------------------------|
| (1) Panel - switch                               | (8) Pocket ASSY                   | (15) Cover - instrument panel side RH |
| (2) Ornament - panel ASSY driver                 | (9) Key cylinder - pocket         | (16) Grille speaker side RH           |
| (3) Lid ASSY - fuse box                          | (10) Back panel - pocket          | (17) Cap - guide pin                  |
| (4) Cover ASSY - instrument panel LWR driver OUT | (11) Light - pocket               | (18) Panel COMPL - instrument         |
| (5) Cover ASSY - instrument panel LWR driver INN | (12) Holder                       | (19) Grille speaker side LH           |
| (6) Panel center LWR LH                          | (13) Under cover ASSY - passenger | (20) Cover - instrument panel side LH |
| (7) Panel center LWR RH                          | (14) Damper COMPL - pocket        |                                       |




# General Description

## EXTERIOR/INTERIOR TRIM

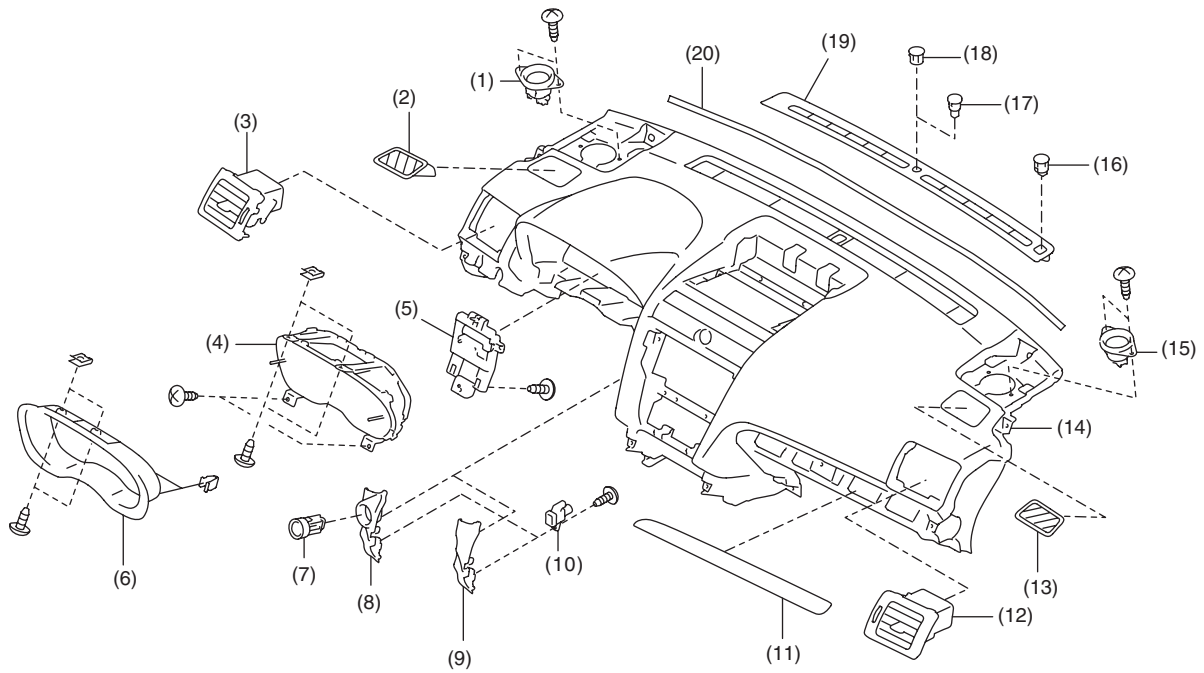

EI-04240

- |                                       |                                      |                                |
|---------------------------------------|--------------------------------------|--------------------------------|
| (1) Speaker ASSY - tweeter LH         | (8) Panel - switch                   | (15) Speaker ASSY - tweeter RH |
| (2) Grille defroster - front LH       | (9) Cover - switch starter           | (16) Sensor - rain             |
| (3) Grille ASSY - ventilation LH      | (10) Case - sensor                   | (17) Sensor - sunload          |
| (4) Combination meter ASSY            | (11) Ornament - panel ASSY passenger | (18) Cap                       |
| (5) Reinforcement - combination meter | (12) Grille ASSY - ventilation RH    | (19) Grille front defroster    |
| (6) Visor - combination meter         | (13) Grille defroster - front RH     | (20) Cushion                   |
| (7) Switch - push button start        | (14) Panel COMPL - instrument        |                                |

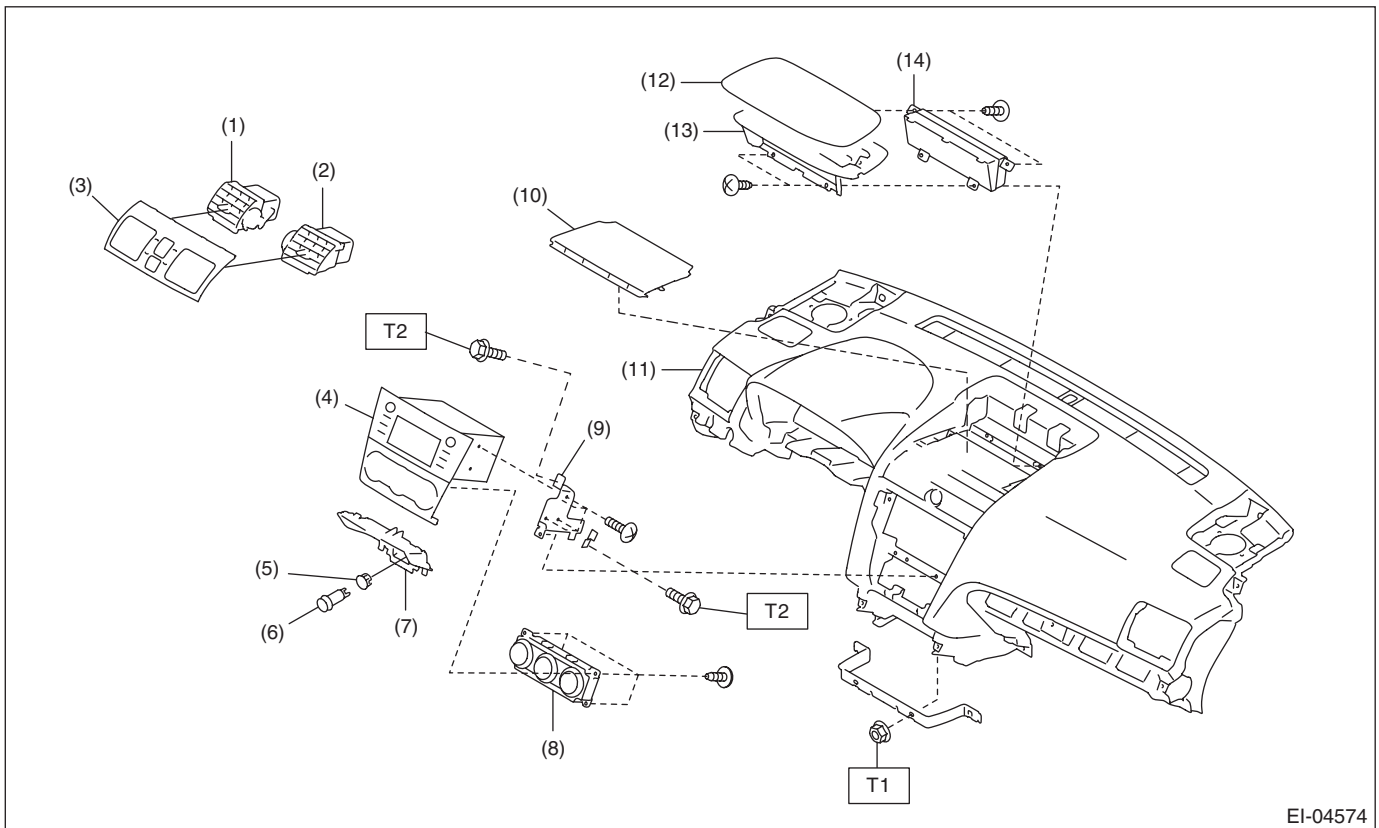

EI-04574

- (1) Grille ASSY - CTR ventilation LH
- (2) Grille ASSY - CTR ventilation RH
- (3) Panel center ASSY
- (4) Audio ASSY
- (5) Cap
- (6) Socket ASSY

- (7) Back panel - center pocket
- (8) Heater control ASSY
- (9) Bracket - audio
- (10) Cover center UPR
- (11) Panel COMPL - instrument
- (12) Panel - display UPR

- (13) Panel - display LWR
- (14) Multi-function display ASSY

---

**Tightening torque: N·m (kgf-m, ft-lb)**


**T1: 7 (0.71, 5.2)**

**T2: 7.5 (0.76, 5.5)**

---

# General Description

## EXTERIOR/INTERIOR TRIM

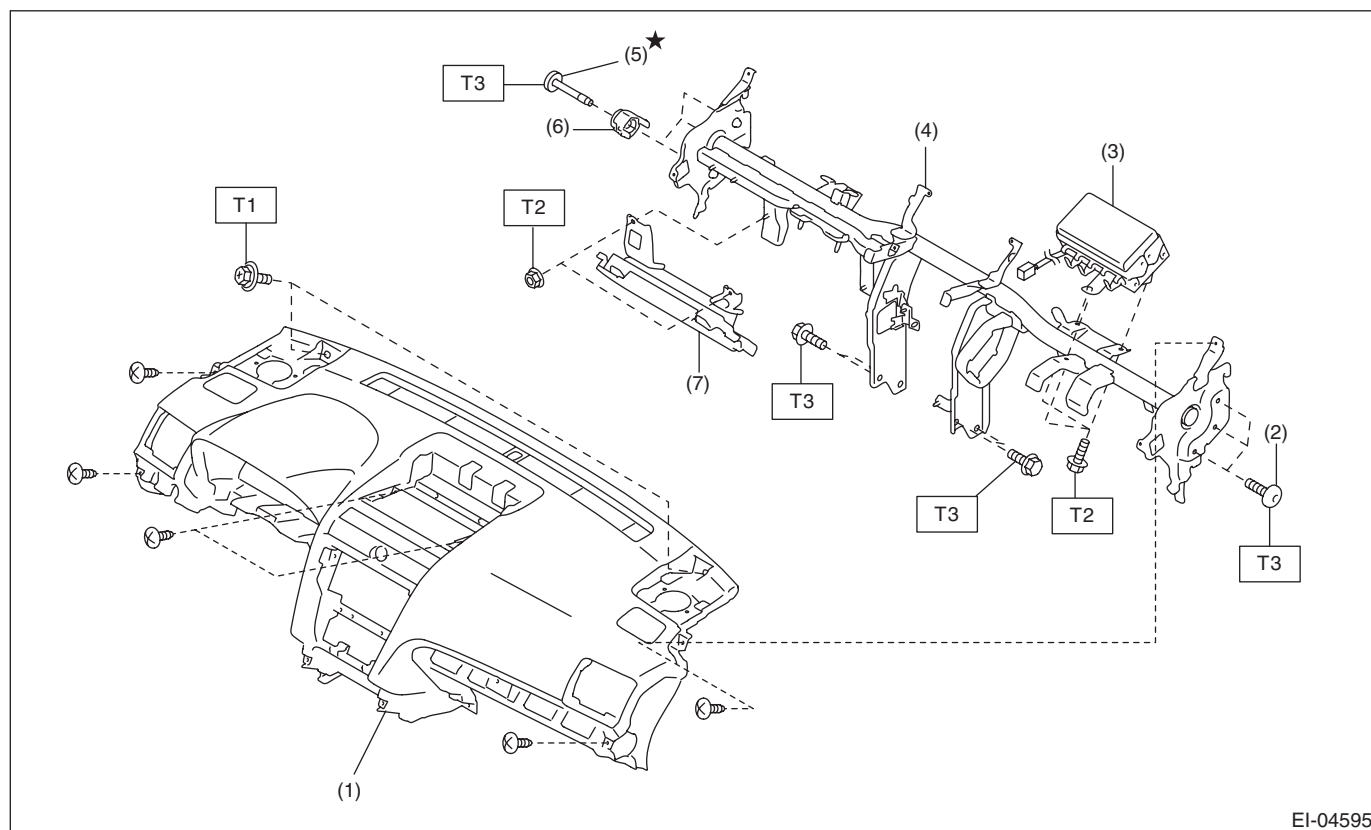


- |                               |                           |
|-------------------------------|---------------------------|
| (1) Panel COMPL - instrument  | (5) TORX® bolt (M8 × 57)  |
| (2) TORX® bolt (M8 × 37)      | (6) Adjuster - clip space |
| (3) Passenger's airbag module | (7) Knee airbag module    |
| (4) Beam COMPL - steering     |                           |

### ***Tightening torque: N·m (kgf·m, ft·lb)***

***T1: 7 (0.71, 5.2)***

***T2: 7.5 (0.76, 5.5)***

***T3: 25 (2.55, 18.4)***

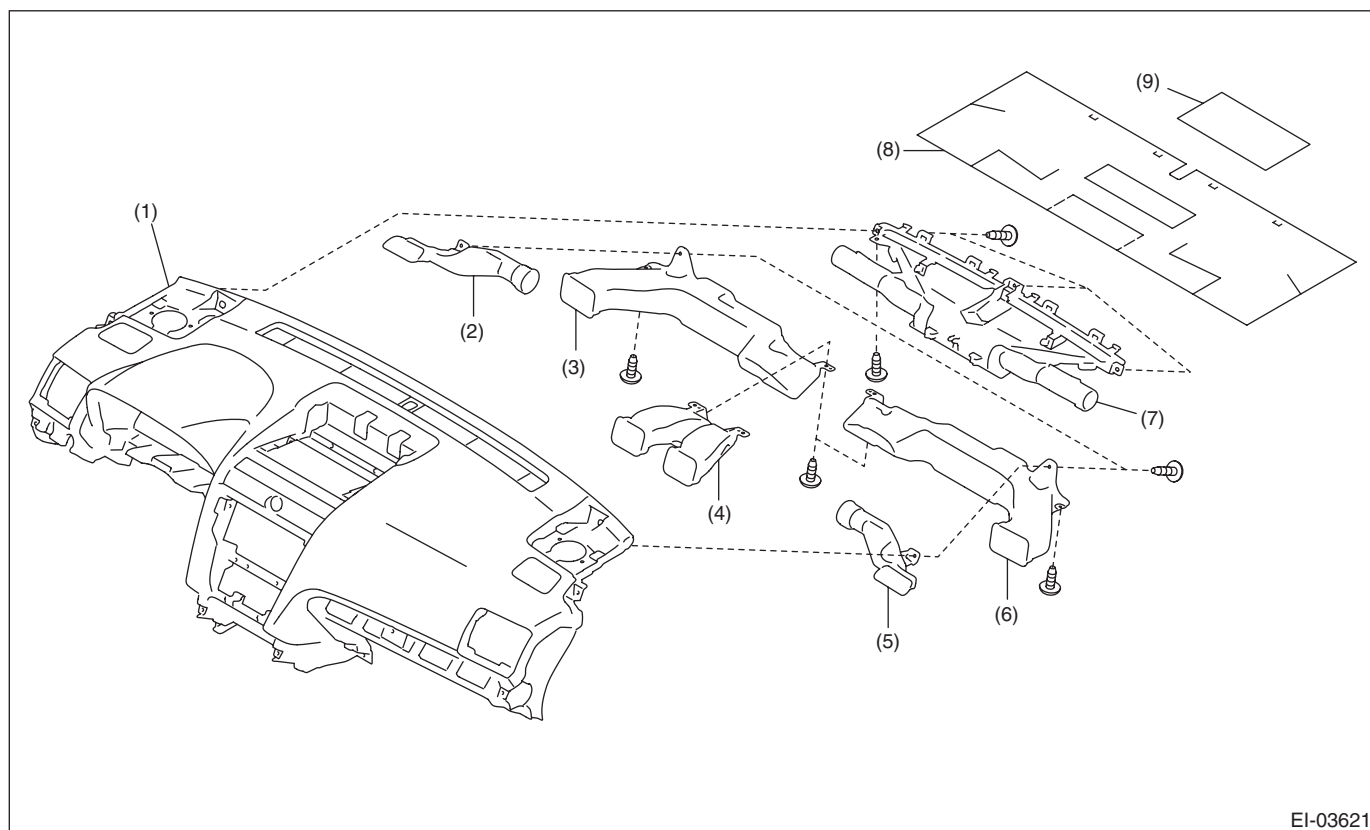

EI-03621

- (1) Panel COMPL - instrument
- (2) Duct - side defroster LH
- (3) Duct - side ventilation LH

- (4) Duct - center vent
- (5) Duct - side defroster RH
- (6) Duct - side ventilation RH


- (7) Nozzle - front defroster
- (8) Insulator - instrument
- (9) Insulator - airbag

# General Description

## EXTERIOR/INTERIOR TRIM

### 17.INNER TRIM

- 4 door model

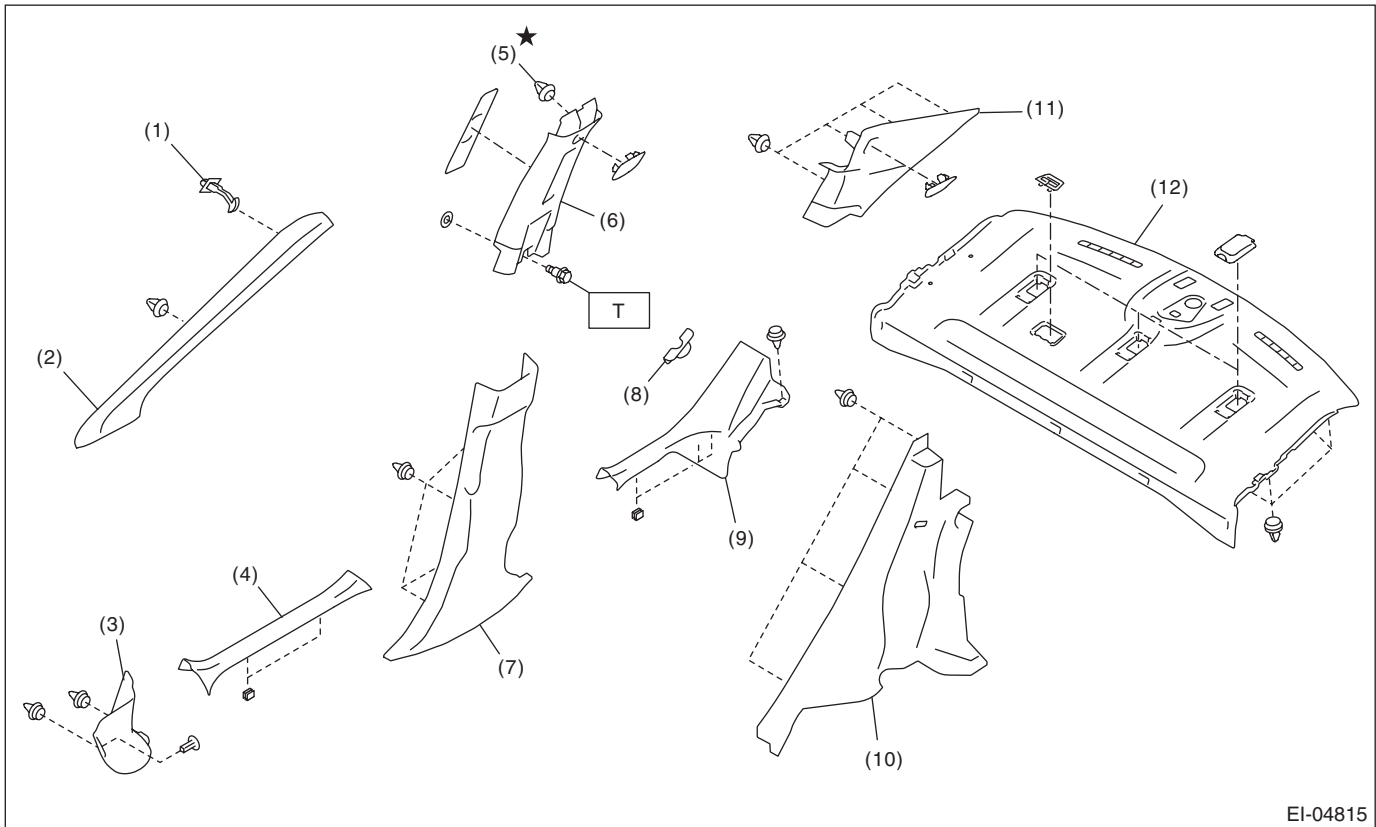

EI-04815

- (1) Tether clip
- (2) Trim panel - front pillar UPR
- (3) Cover side sill - front
- (4) Cover side sill - front INN
- (5) Clip


- (6) Trim panel - center pillar UPR
- (7) Trim panel - center pillar LWR
- (8) Cover - catcher
- (9) Cover side sill - rear INN
- (10) Trim panel - rear pillar LWR

- (11) Trim panel - rear pillar UPR
- (12) Trim panel ASSY - rear shelf

**Tightening torque: N·m (kgf·m, ft·lb)**  
**T: 7.5 (0.76, 5.5)**

# General Description

## EXTERIOR/INTERIOR TRIM

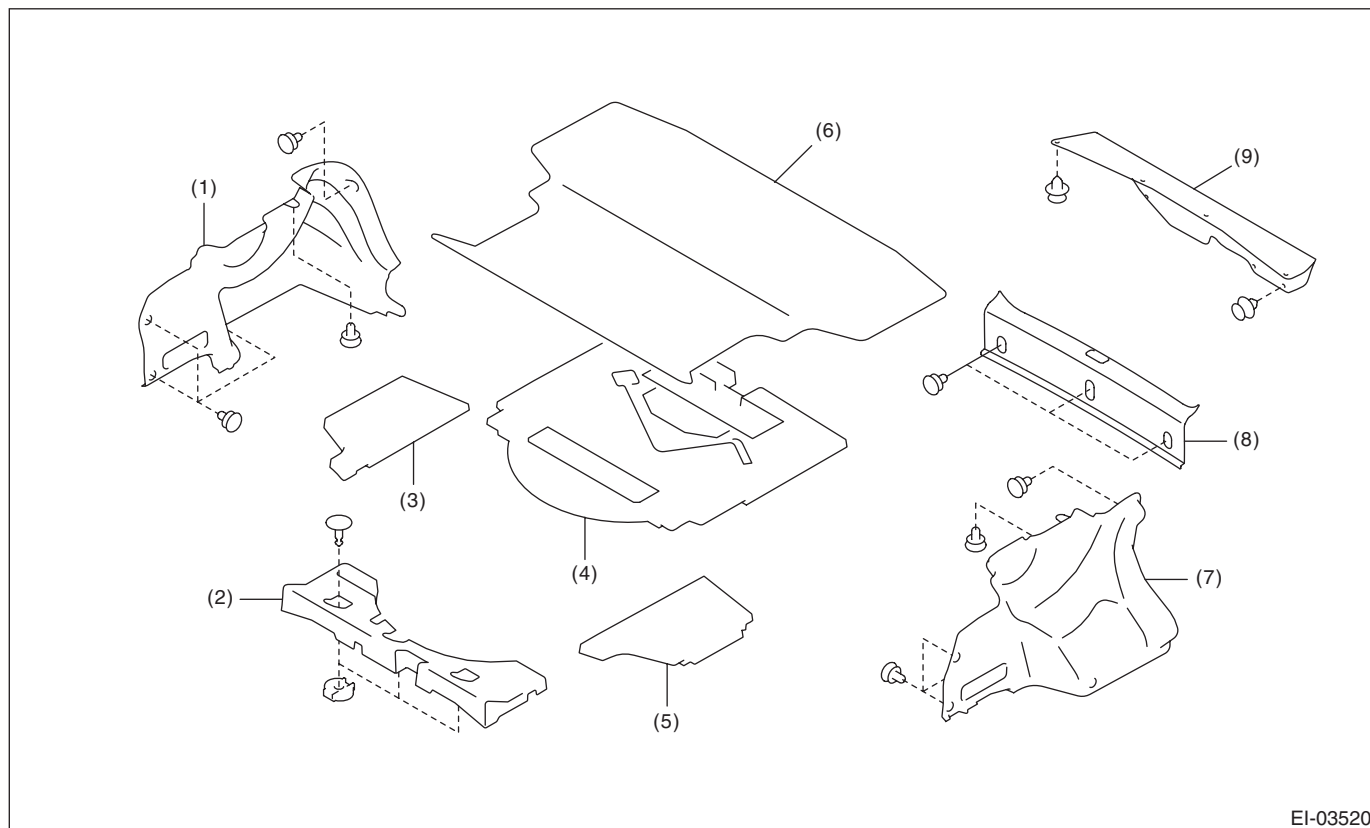


EI-03520

- |                                 |                                 |                                |
|---------------------------------|---------------------------------|--------------------------------|
| (1) Trim panel - trunk side RH  | (4) Sub-trunk ASSY              | (7) Trim panel - trunk side LH |
| (2) Spacer - rear floor front   | (5) Spacer - rear floor side LH | (8) Trim panel - trunk rear    |
| (3) Spacer - rear floor side RH | (6) Mat - trunk                 | (9) Trim panel - trunk lid     |

# General Description

## EXTERIOR/INTERIOR TRIM

- 5 door model (gasoline engine model)

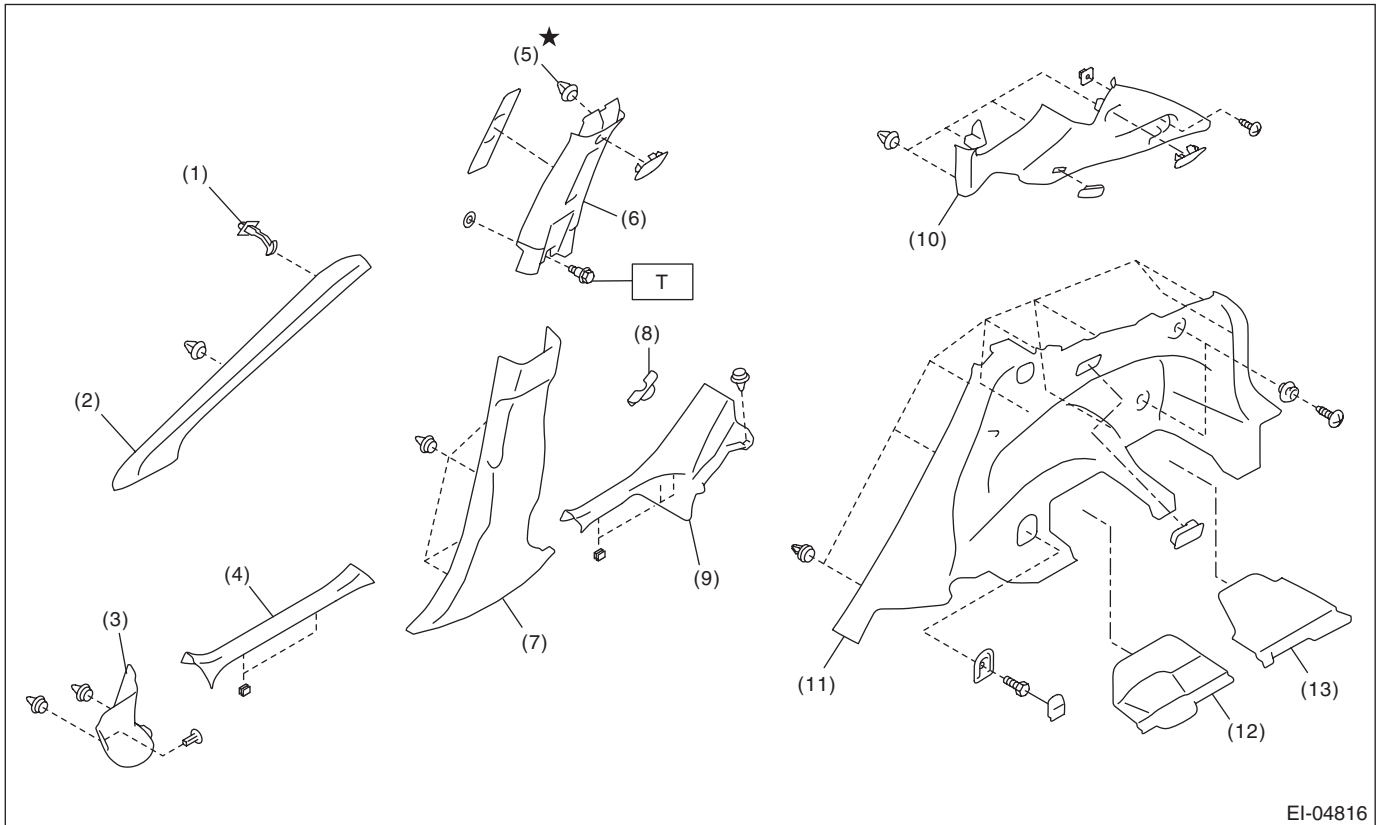


- (1) Tether clip
- (2) Trim panel - front pillar UPR
- (3) Cover side sill - front
- (4) Cover side sill - front INN
- (5) Clip
- (6) Trim panel - center pillar UPR

- (7) Trim panel - center pillar LWR
- (8) Cover - catcher
- (9) Cover side sill - rear INN
- (10) Trim panel - rear quarter UPR
- (11) Trim panel - rear apron
- (12) Cap - rear strut

- (13) Lid upper rear

***Tightening torque: N-m (kgf-m, ft-lb)***

***T: 7.5 (0.76, 5.5)***

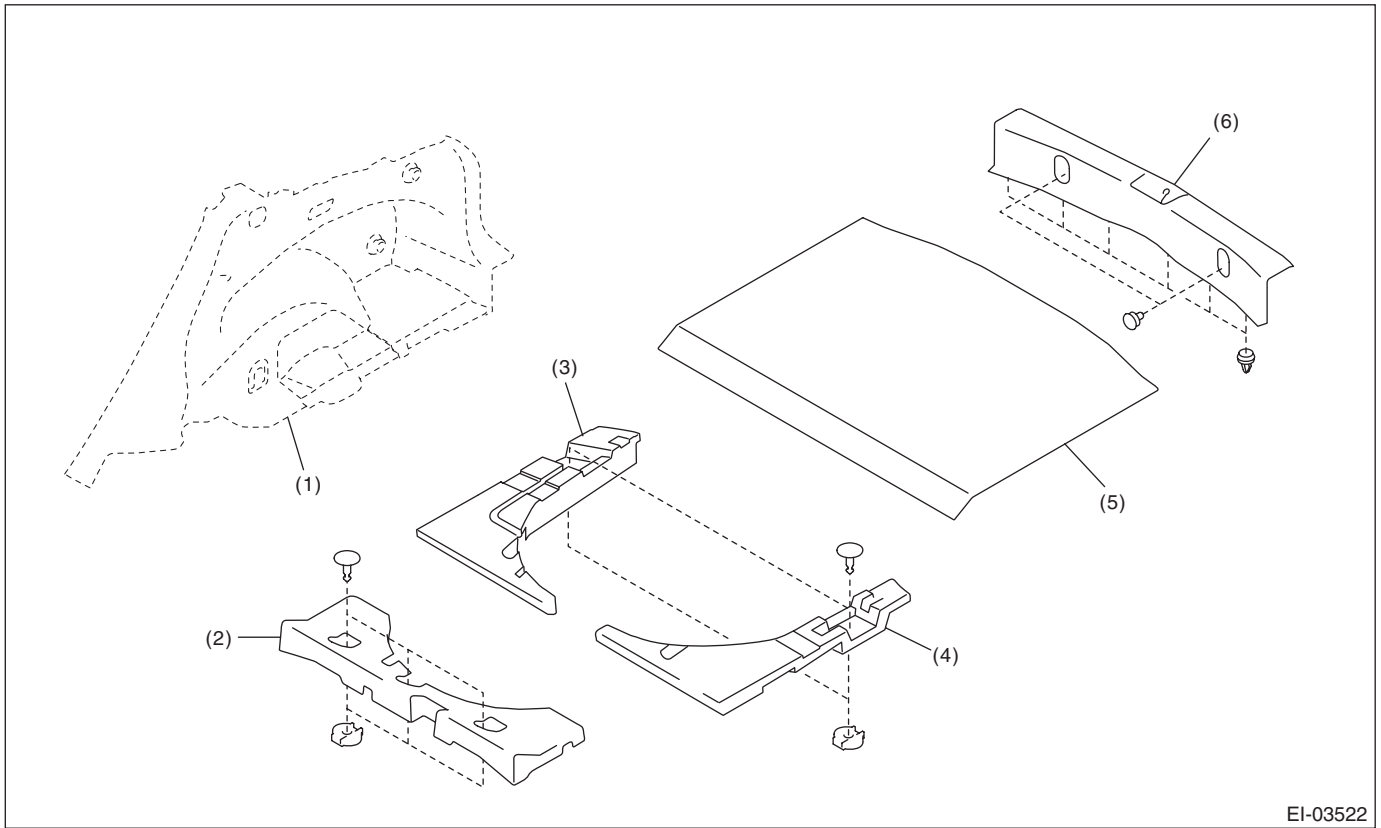

EI-03522


- |                             |                                 |                             |
|-----------------------------|---------------------------------|-----------------------------|
| (1) Trim panel - rear apron | (3) Spacer - rear floor side RH | (5) Mat - rear floor CTR    |
| (2) Spacer - rear floor     | (4) Spacer - rear floor side LH | (6) Trim panel - rear skirt |



# General Description

## EXTERIOR/INTERIOR TRIM

- 5 door model (HEV model)

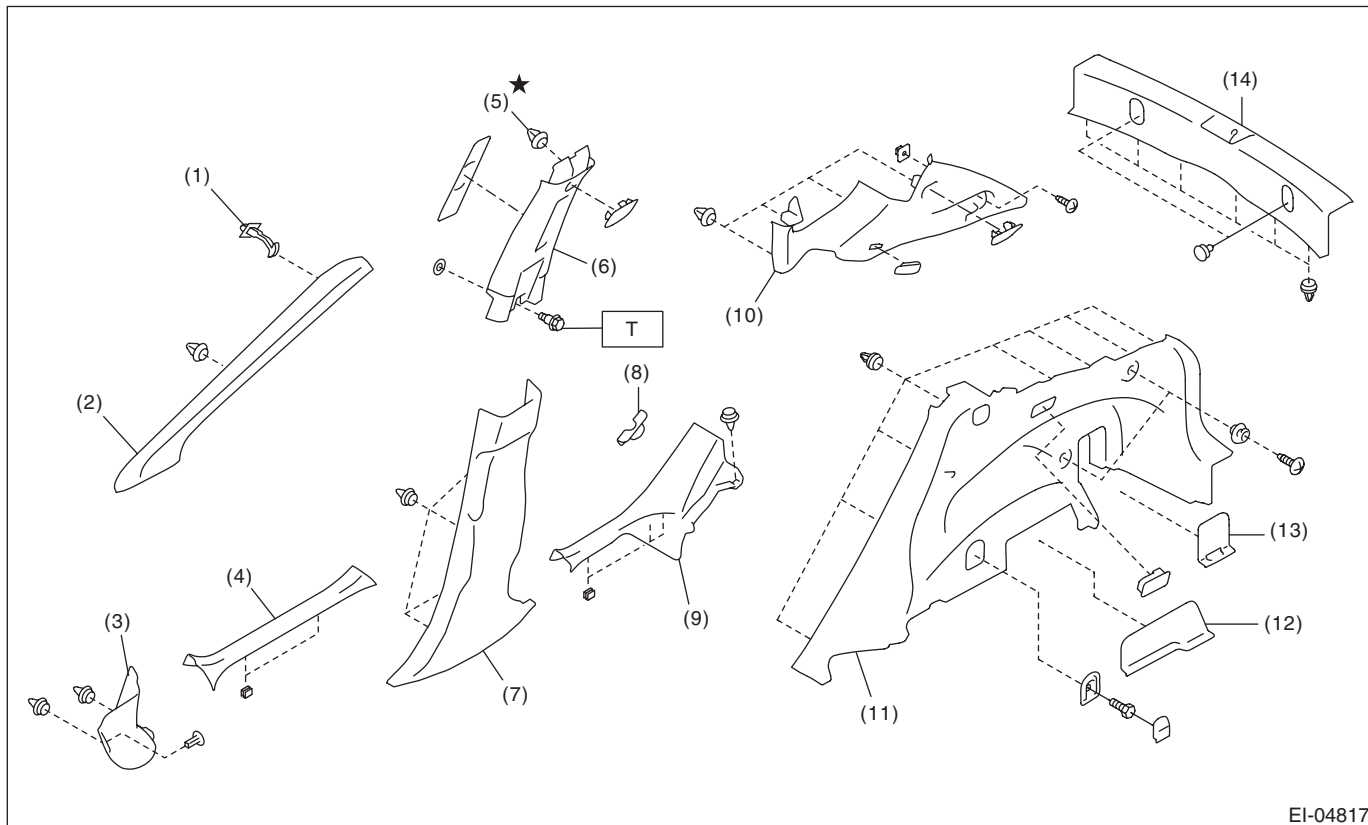


EI-04817

- (1) Tether clip
- (2) Trim panel - front pillar UPR
- (3) Cover side sill - front
- (4) Cover side sill - front INN
- (5) Clip
- (6) Trim panel - center pillar UPR

- (7) Trim panel - center pillar LWR
- (8) Cover - catcher
- (9) Cover side sill - rear INN
- (10) Trim panel - rear quarter UPR
- (11) Trim panel - rear apron
- (12) Cap - rear strut

- (13) Cover - jack (LH side only)
- (14) Trim panel - rear skirt

**Tightening torque: N·m (kgf·m, ft·lb)**  
**T: 7.5 (0.76, 5.5)**

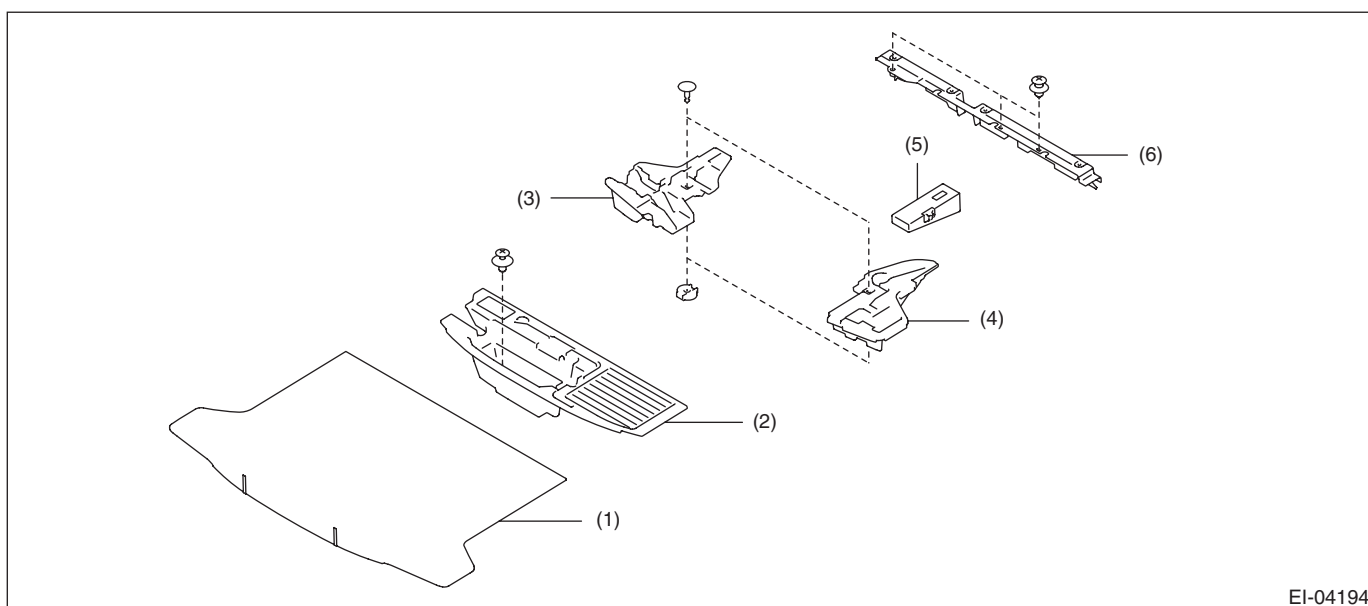


EI-04194

- (1) Mat - rear floor CTR
- (2) Sub-trunk box

- (3) Side spacer LH
- (4) Side spacer RH

- (5) Inverter spacer
- (6) Spacer - rear floor front

## 18.REAR GATE TRIM

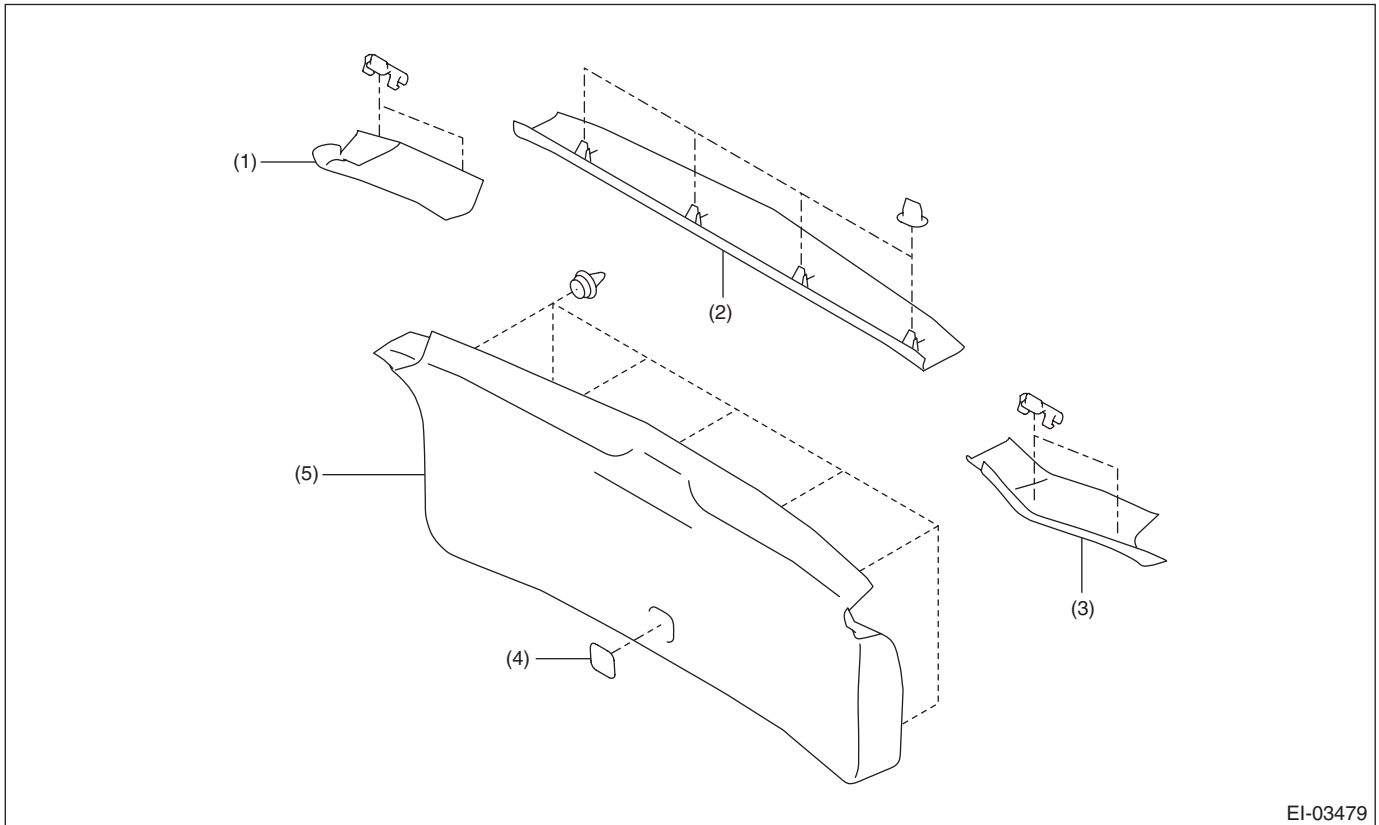


EI-03479

- |   |   |                                |
|---|---|--------------------------------|
| (1) Trim panel - rear gate pillar side RH | (3) Trim panel - rear gate pillar side LH | (5) Trim panel - rear gate LWR |
| (2) Trim panel - rear gate UPR            | (4) Cap                                   |                                |


# General Description

## EXTERIOR/INTERIOR TRIM

### 19.ROOF TRIM

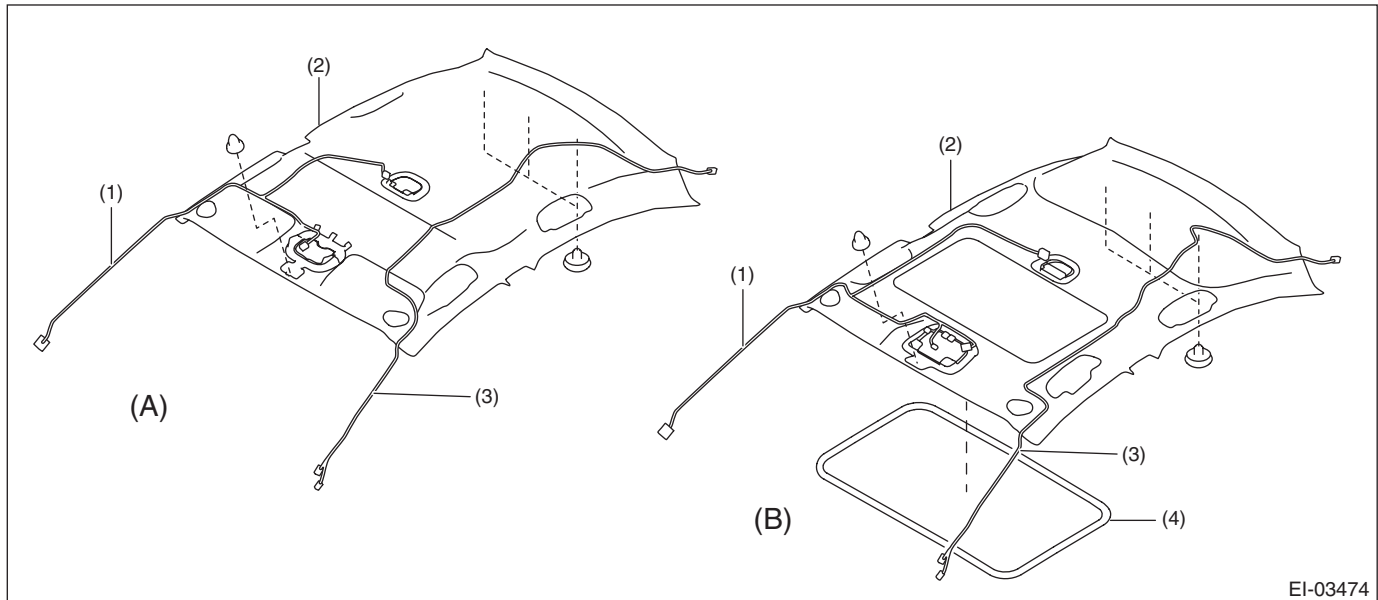

EI-03474

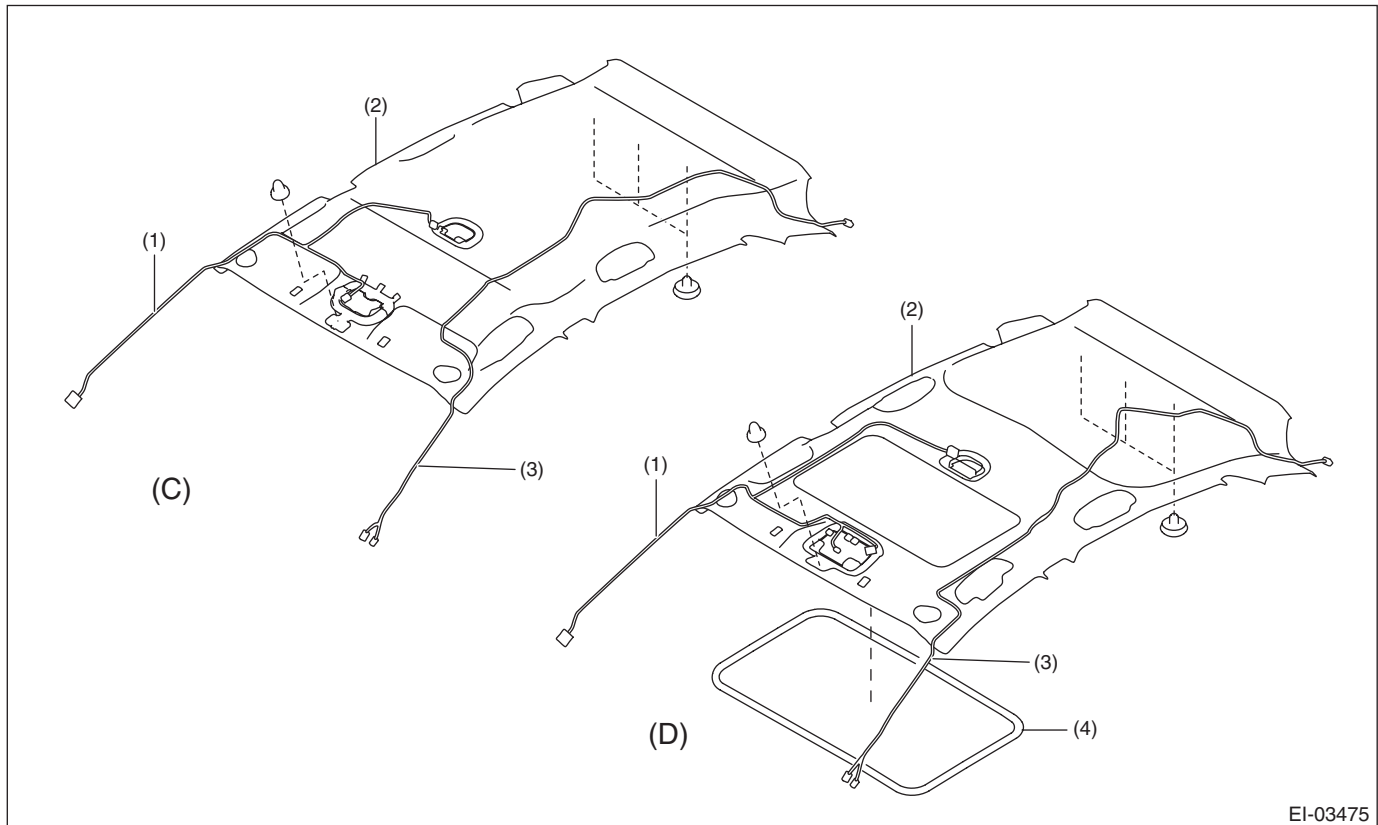

EI-03475

(A) Normal roof type (4 door model)

(B) Sunroof type (4 door model)

(C) Normal roof type  
(5 door model/XV model)

(D) Sunroof type  
(5 door model/XV model)


(1) Cord - roof

(3) Cord ASSY - antenna feeder

(4) Garnish - roof

(2) Trim panel - roof ASSY

## 20.ROOM INNER PARTS

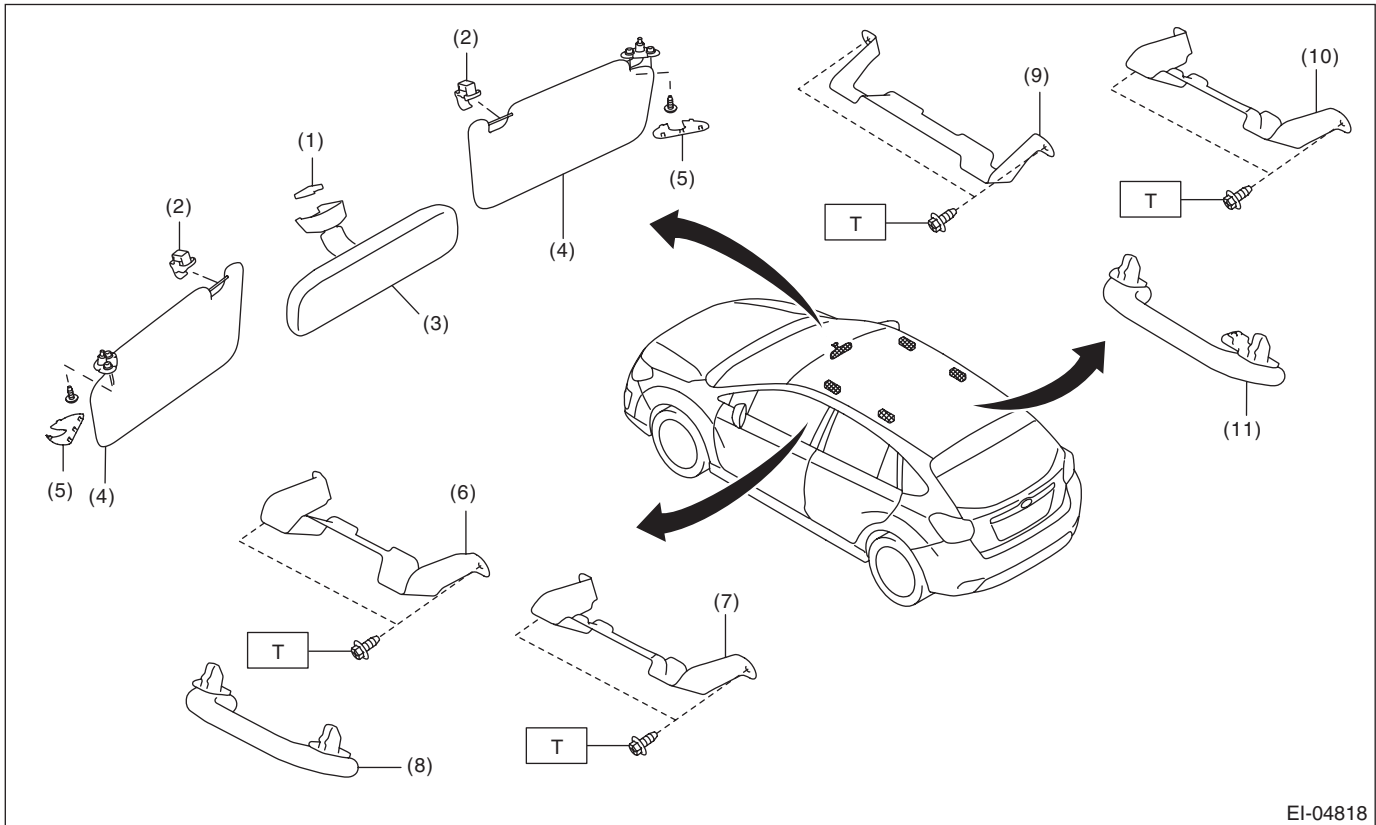

EI-04818

(1) Base - inner mirror

(2) Hook - sun visor

(3) Mirror ASSY rearview inner

(4) Sun visor ASSY

(5) Cap - sun visor

(6) Bracket - assist rail front  
(model with sunroof)

(7) Bracket - assist rail front  
(normal roof)

(8) Assist rail - front

(9) Bracket - assist rail rear  
(model with sunroof)

(10) Bracket - assist rail rear  
(normal roof)

(11) Assist rail - rear


**Tightening torque: N·m (kgf·m, ft·lb)**

**T: 7.5 (0.76, 5.5)**

## General Description

EXTERIOR/INTERIOR TRIM

### 21. TRUNK LID GARNISH

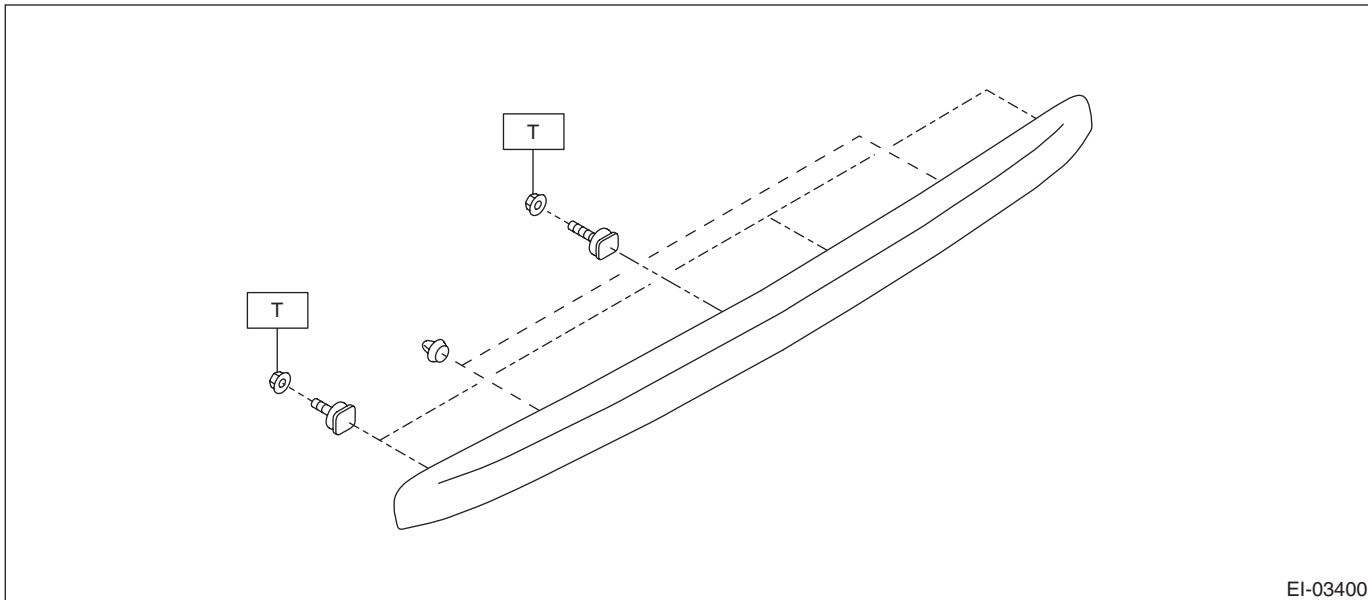


EI-03400

**Tightening torque: N·m (kgf-m, ft-lb)**

**T: 4.5 (0.46, 3.3)**

### 22. REAR GATE GARNISH

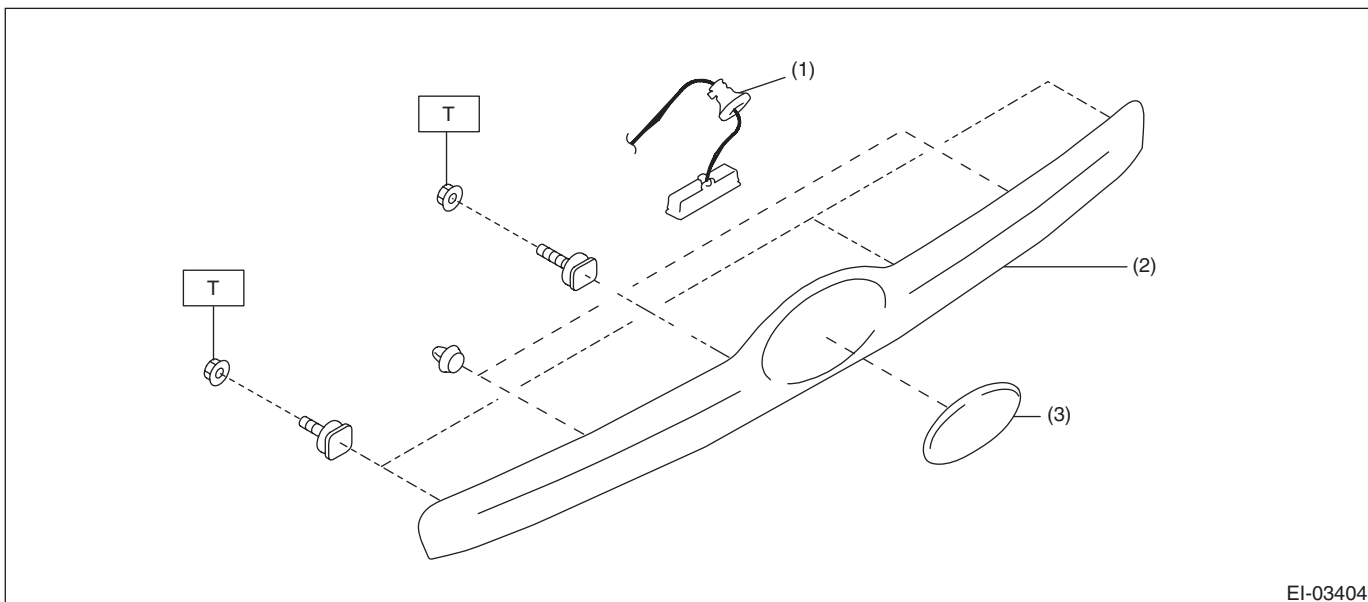

EI-03404

(1) Switch - opener rear gate

(3) Ornament rear

(2) Garnish assembly - rear gate

**Tightening torque: N·m (kgf-m, ft-lb)**

**T: 4.5 (0.46, 3.3)**

## General Description

EXTERIOR/INTERIOR TRIM

### B: PREPARATION TOOL

TOOL NAME	REMARKS
Clip remover	Used for removing trim. <ul style="list-style-type: none"><li>• KTC AP201-10A</li><li>• KTC AP201-N</li><li>• KTC AP203-10A</li><li>• KTC AP20L-10B</li></ul> or equivalent
Clip clamp pliers	Used for removal of various clips and clamps. <ul style="list-style-type: none"><li>• KTC CCP-190</li></ul> or equivalent