


Electrical Component Location

EyeSight (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION

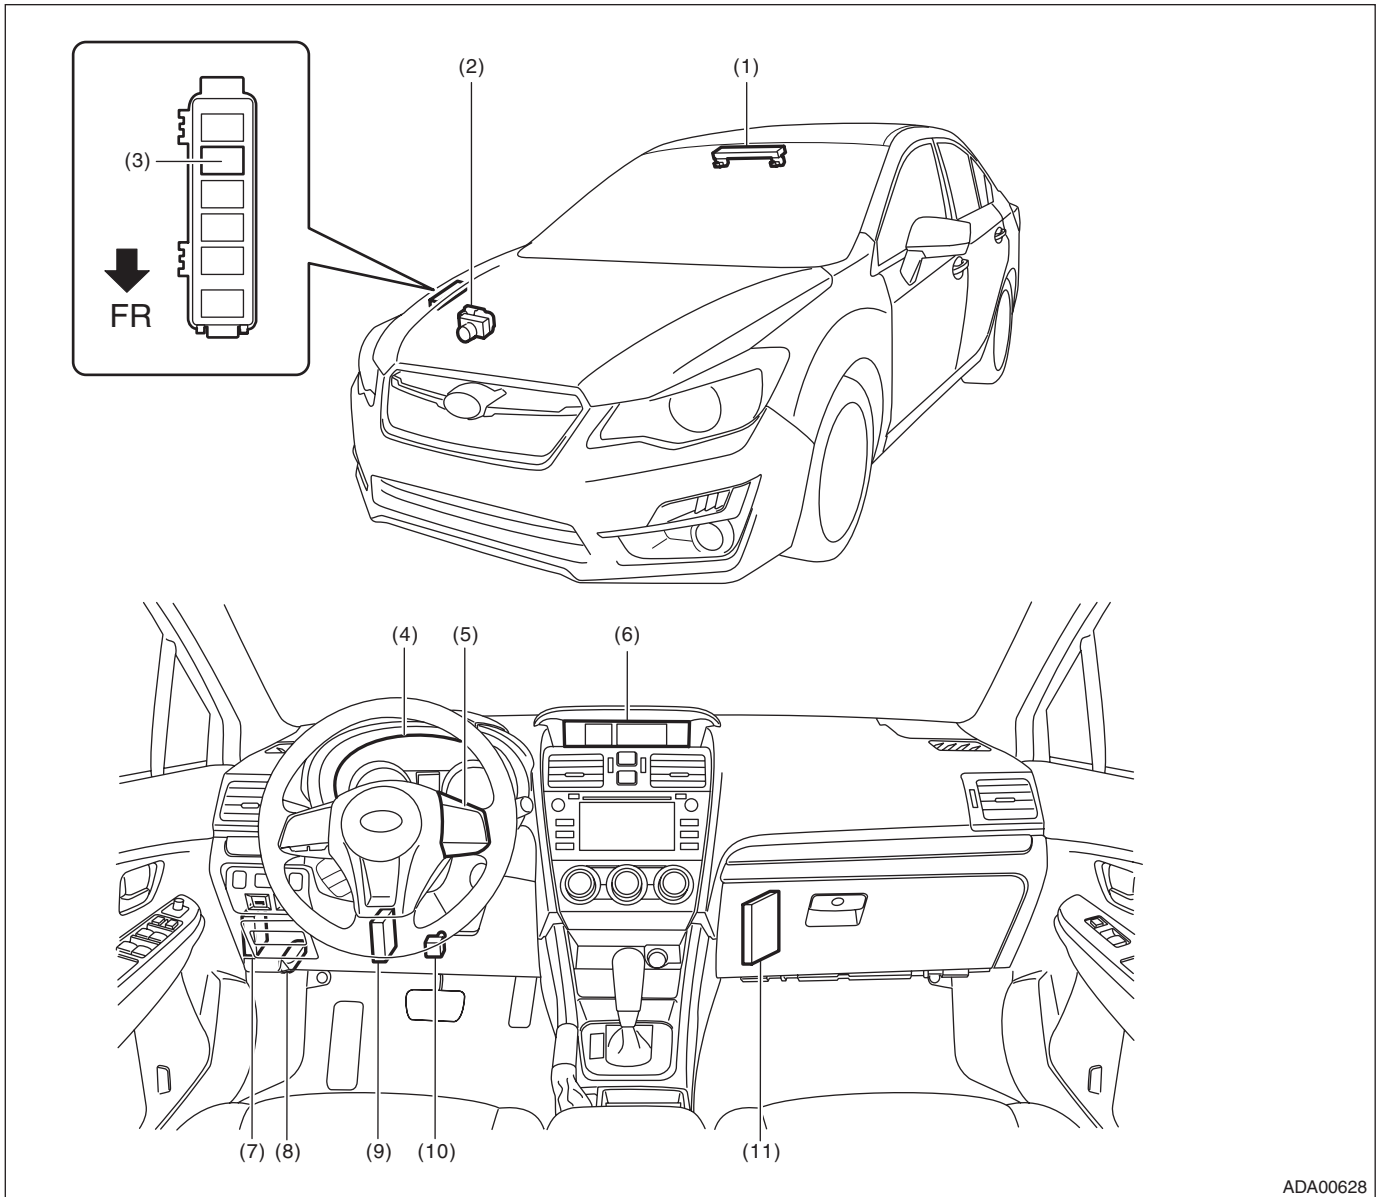


ADA00628

- | | | |
|--------------------------------|----------------------------------|---------------------------------------|
| (1) Stereo camera | (5) EyeSight steering switch | (9) Transmission control module (TCM) |
| (2) VDC control module (VDCCM) | (6) MFD (multi-function display) | (10) Stop light and brake switch |
| (3) Brake light relay | (7) Body integrated unit | (11) ECM |
| (4) Combination meter | (8) Data link connector | |

Electrical Component Location

EyeSight (DIAGNOSTICS)

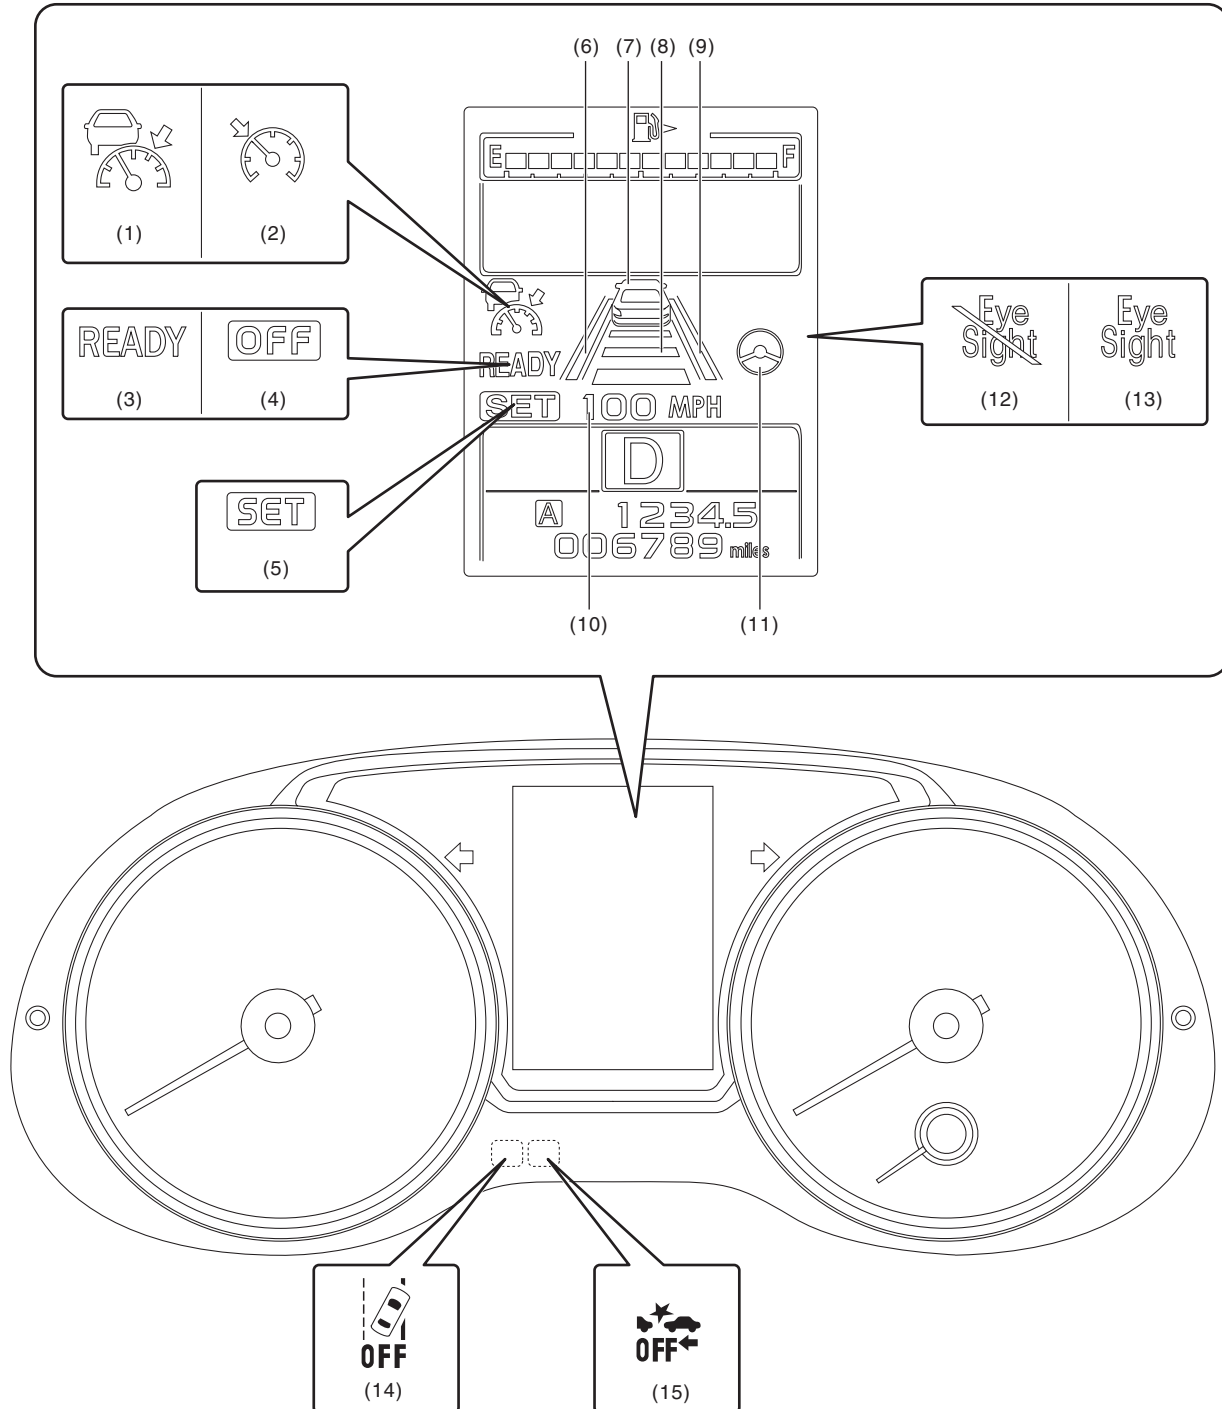


ADA00629

- | | | |
|---------------------------------|--|---|
| (1) Adaptive cruise display | (6) Lane indicator (left) | (11) Steering wheel indicator |
| (2) Conventional cruise display | (7) Preceding vehicle indicator | (12) EyeSight temporary stop indicator |
| (3) READY indicator | (8) Following distance setting indicator | (13) EyeSight warning indicator |
| (4) OFF indicator | (9) Lane indicator (right) | (14) Lane departure warning OFF indicator light |
| (5) SET indicator | (10) Set vehicle speed display | (15) Pre-collision brake OFF indicator light |

Electrical Component Location

EyeSight (DIAGNOSTICS)

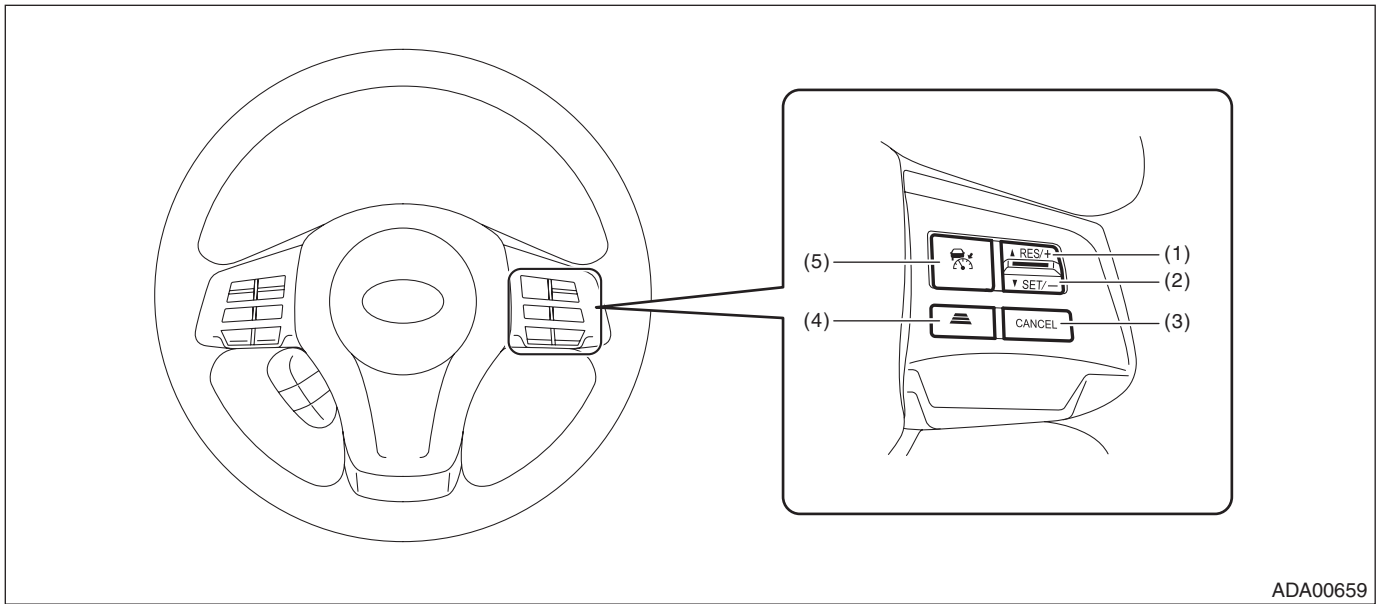

(1) RES/+ (resume/plus) switch

(2) SET/- (set/minus) switch

(3) CANCEL switch

(4) Following distance setting switch

(5) CRUISE switch