



### 25.Fuel Tank Protector

#### A: REMOVAL

- 1) Lift up the vehicle.
  - 2) Remove the bolt and nuts and remove the fuel tank protector.
- Except for XV model

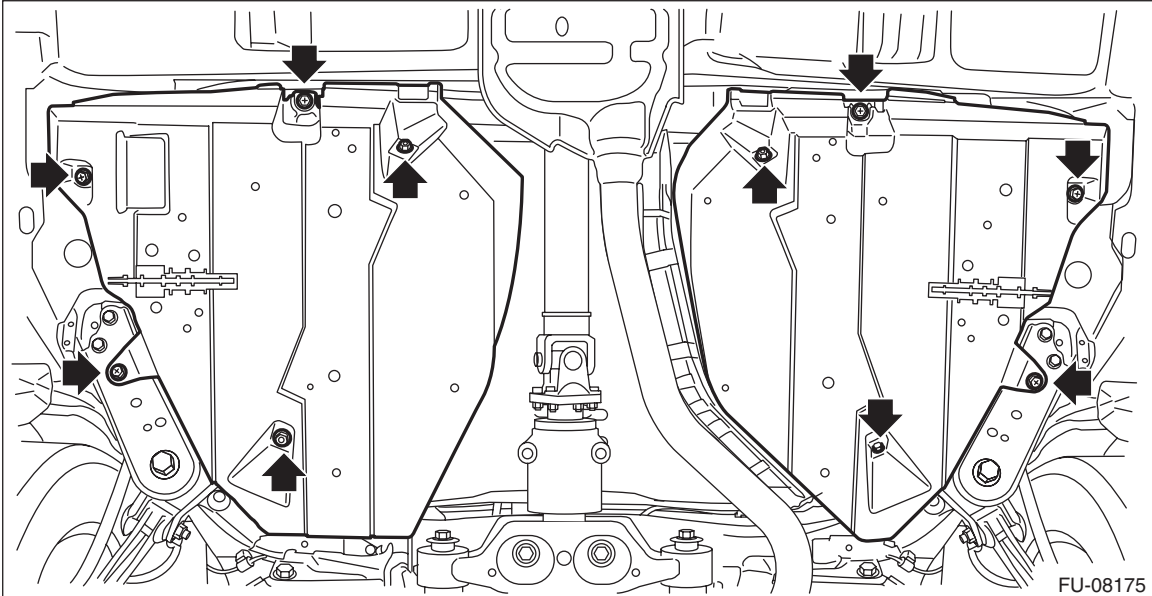

- XV model

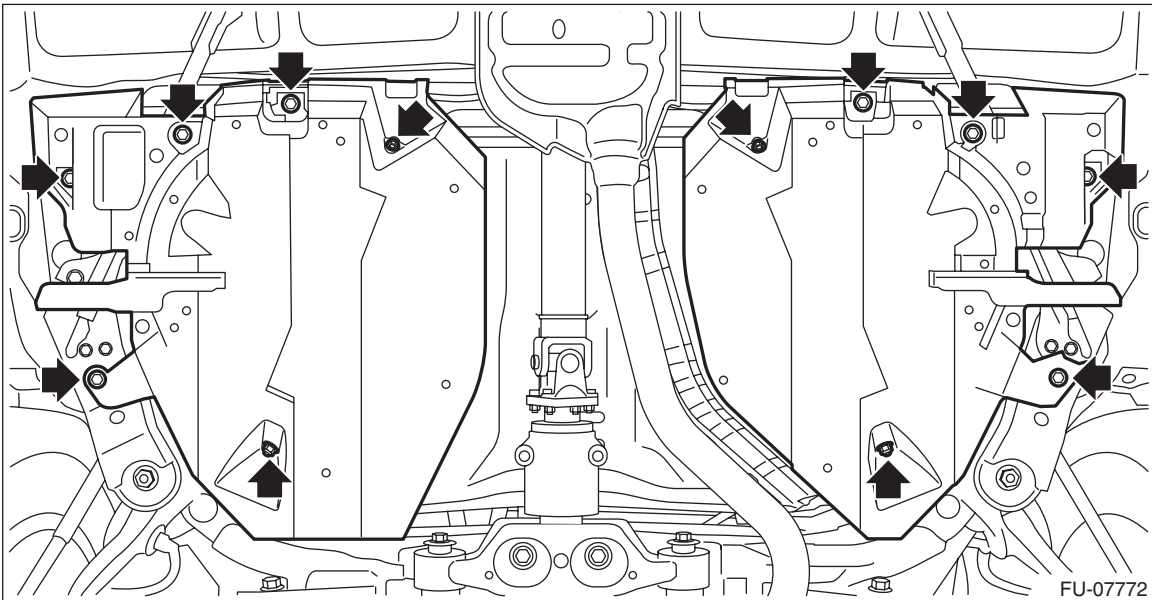

## B: INSTALLATION

Install in the reverse order of removal.

NOTE:


Use a new self-locking nut.

**Tightening torque:**

**T1: 9 N·m (0.9 kgf-m, 6.6 ft-lb)**


**T2: 18 N·m (1.8 kgf-m, 13.3 ft-lb)**

- Except for XV model

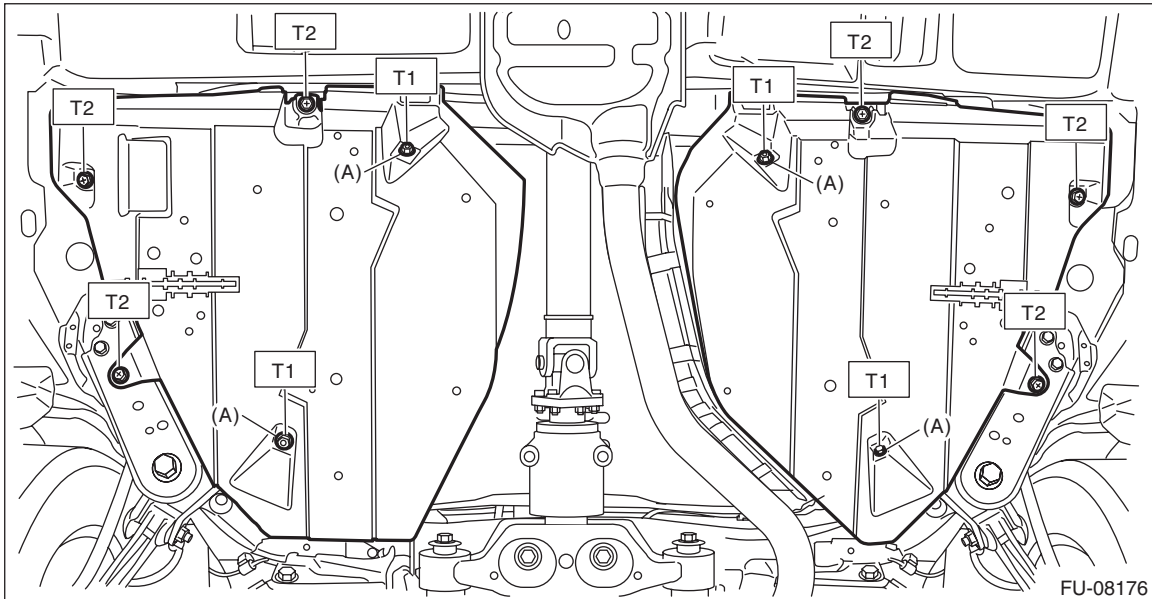

(A) Self-locking nut

- XV model

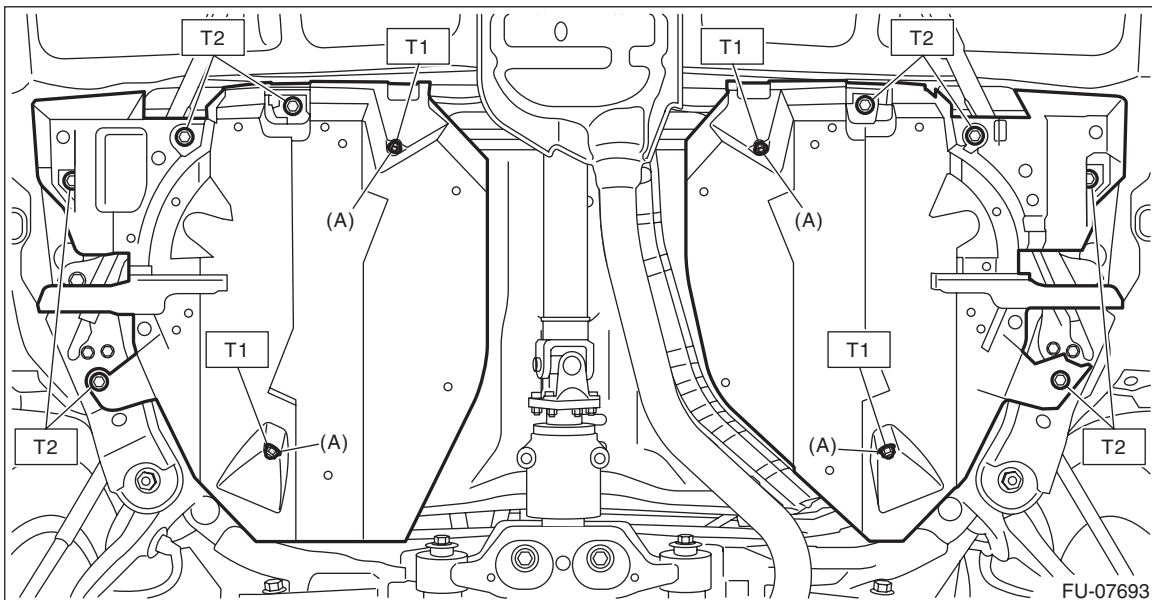

(A) Self-locking nut