


# Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)





## 4. Electrical Component Location

### A: LOCATION

#### 1. CONTROL MODULE

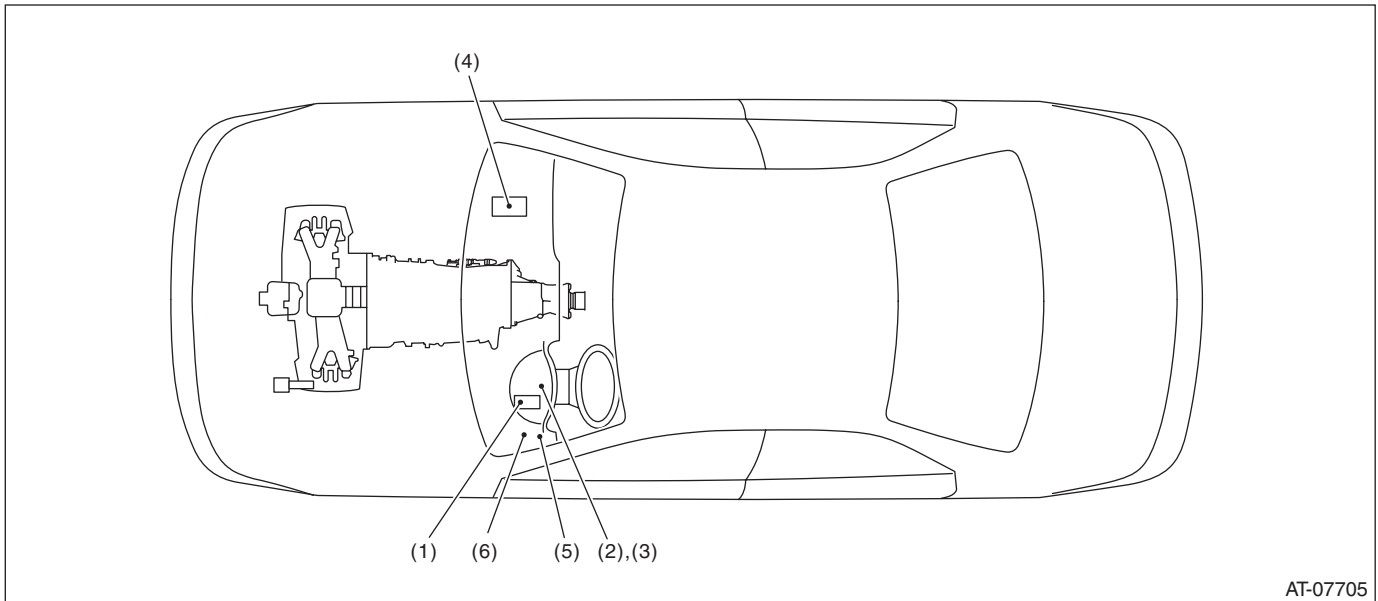


- |                                       |                                 |                          |
|---------------------------------------|---------------------------------|--------------------------|
| (1) Transmission control module (TCM) | (3) AWD light                   | (5) Body integrated unit |
| (2) AT OIL TEMP light                 | (4) Engine control module (ECM) | (6) Data link connector  |

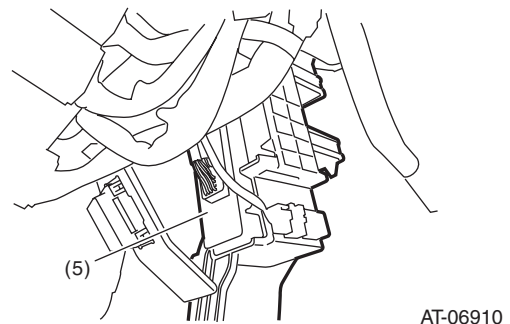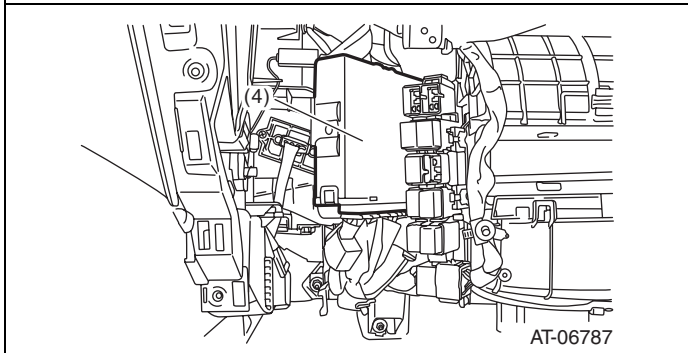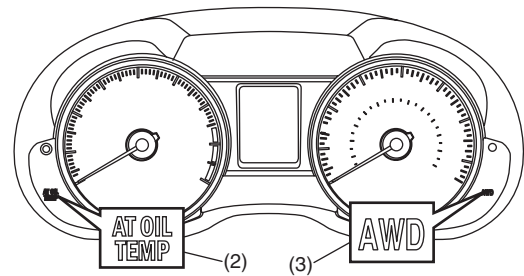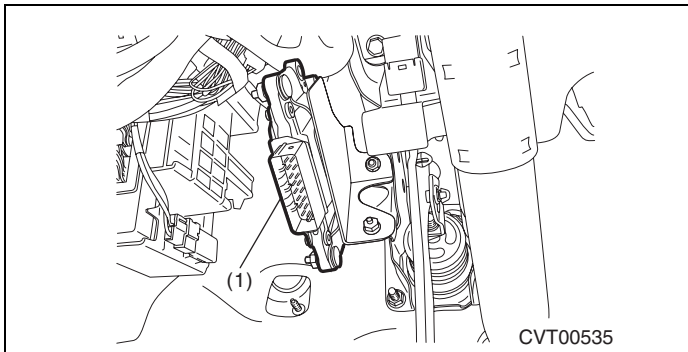


# Electrical Component Location

## CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

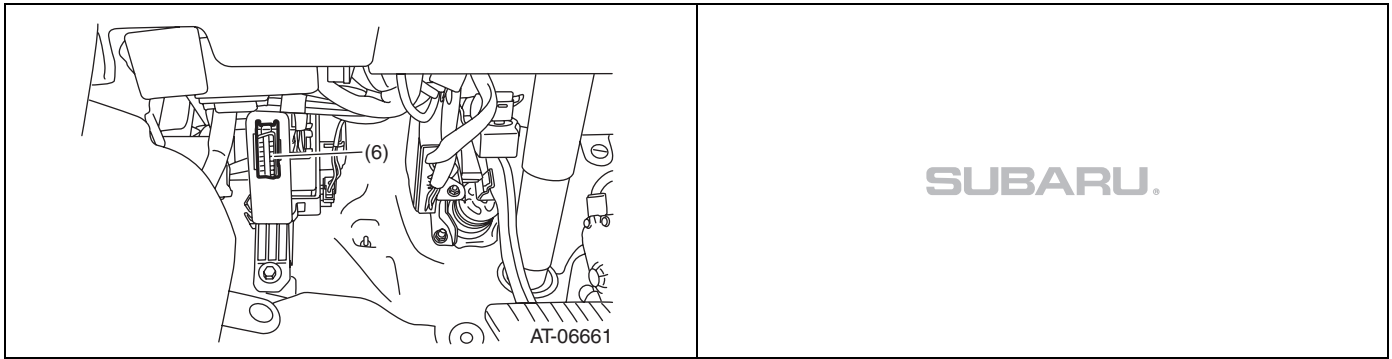

### 2. SENSOR

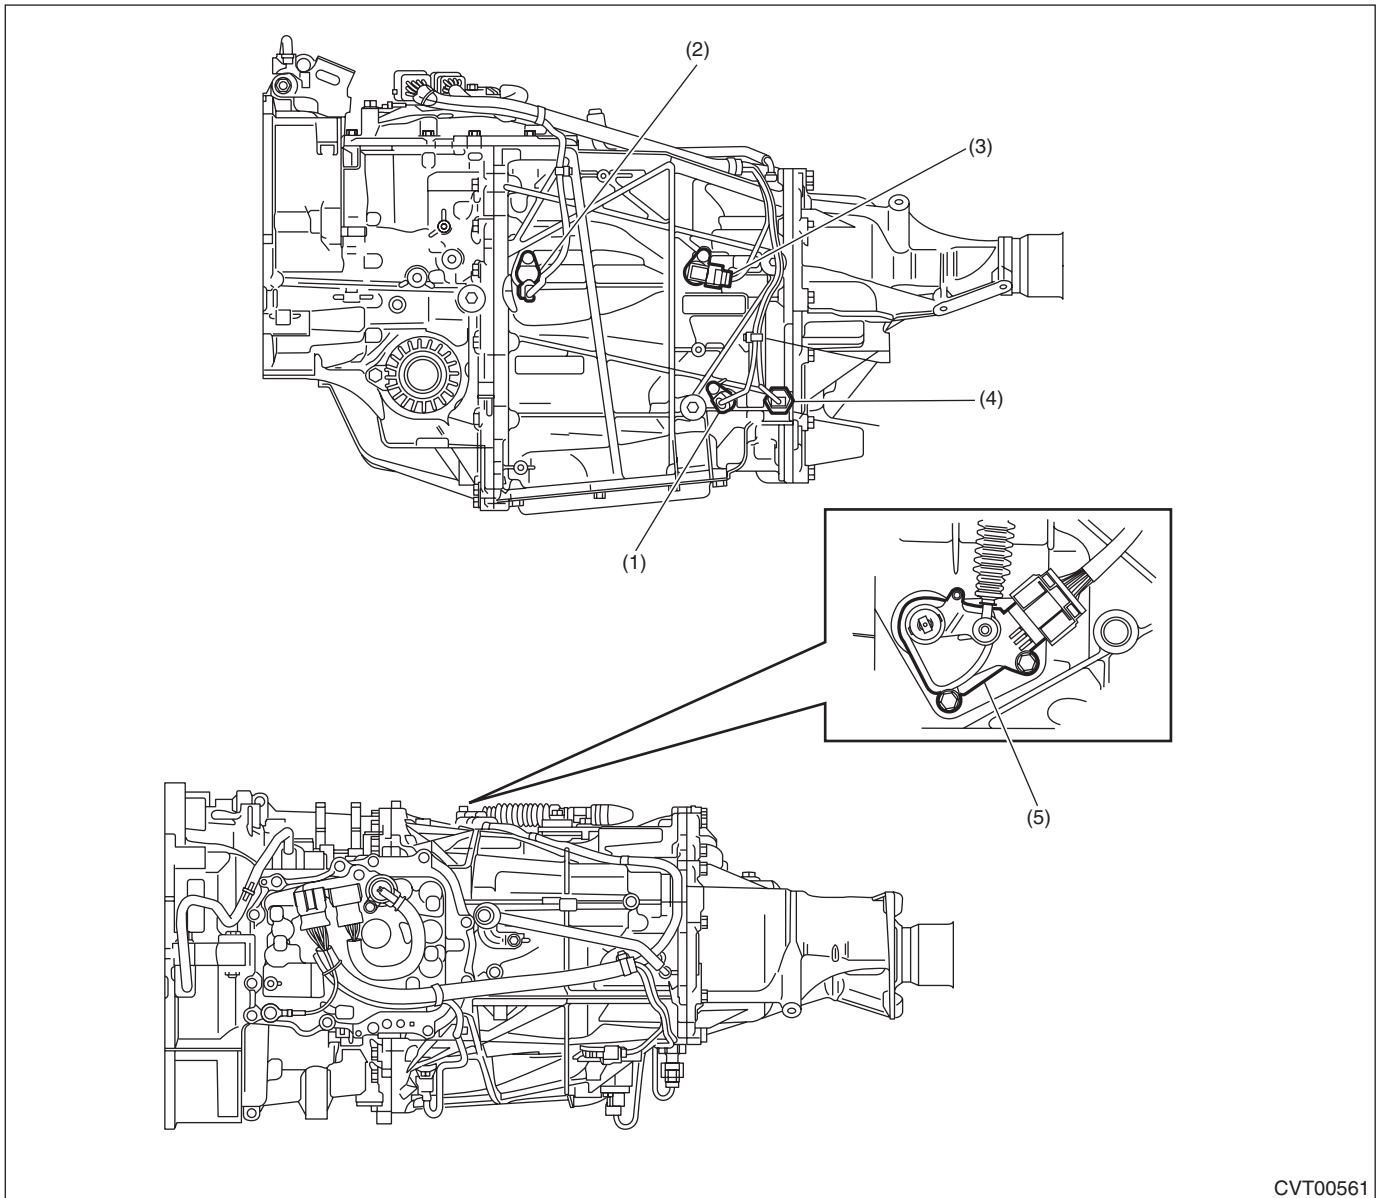

(1) Secondary speed sensor

(3) Primary speed sensor

(5) Inhibitor switch


(2) Turbine speed sensor

(4) Secondary pressure sensor

# Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

## 3. SOLENOID

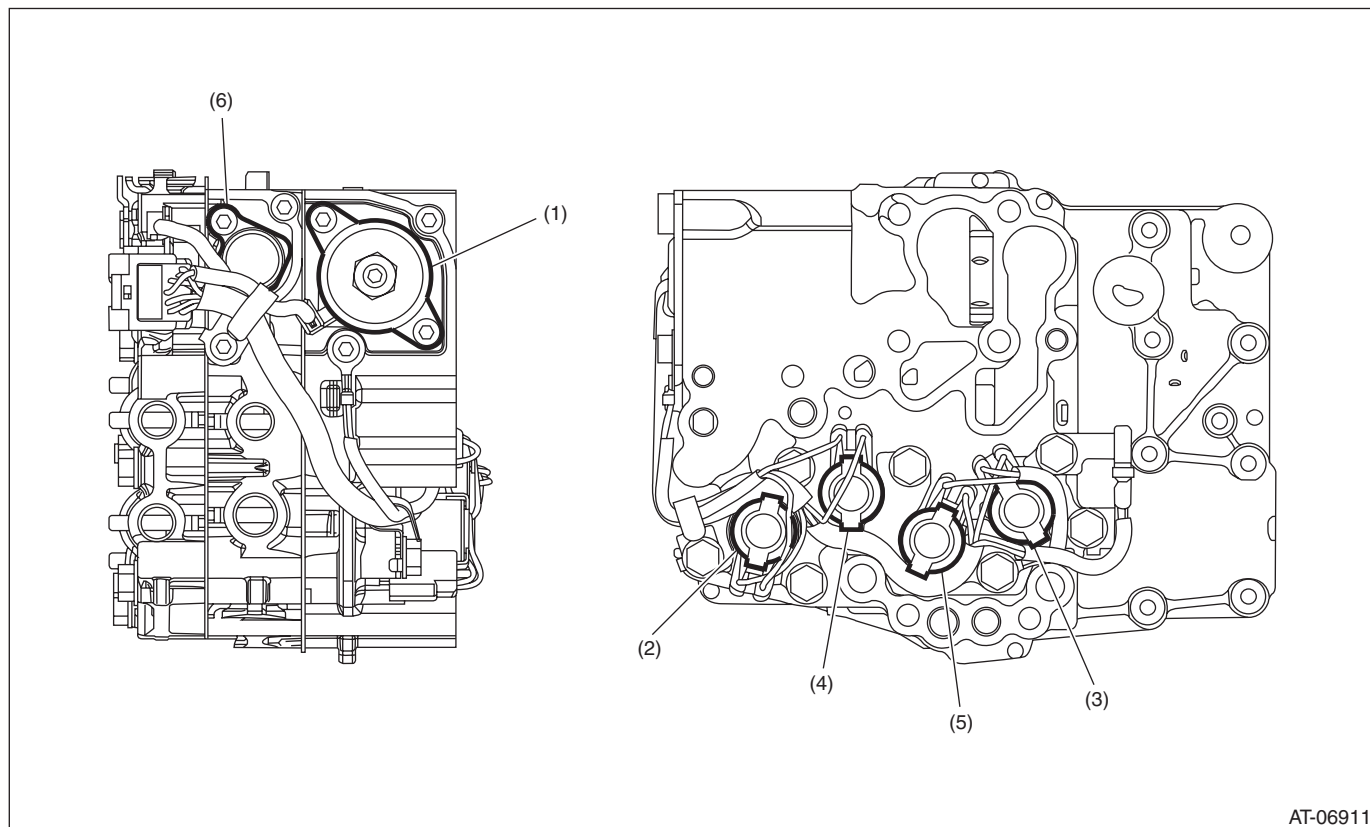

AT-06911

(1) Secondary solenoid

(2) AWD solenoid

(3) Lock-up duty solenoid

(4) Primary DOWN solenoid

(5) Primary UP solenoid

(6) F&R solenoid