



## 42.SRF OFF Switch

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the cover assembly - instrument panel LWR driver. <Ref. to EI-76, REMOVAL, Instrument Panel Lower Cover.>
- 3) Release the claws, and then remove the cover.

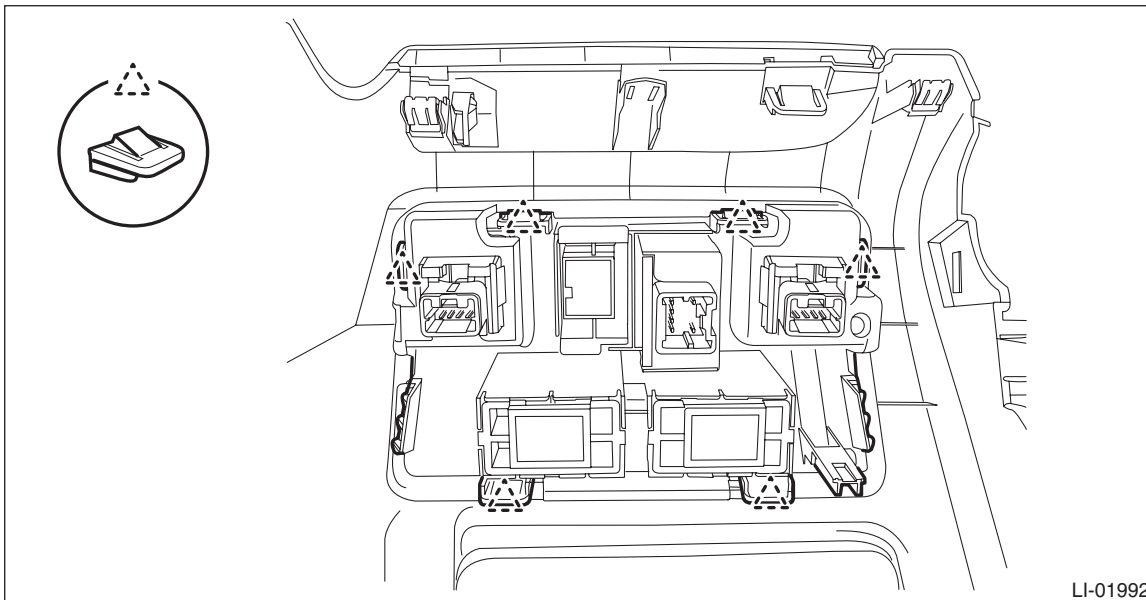

- 4) Release the claws and remove the SRF OFF switch.

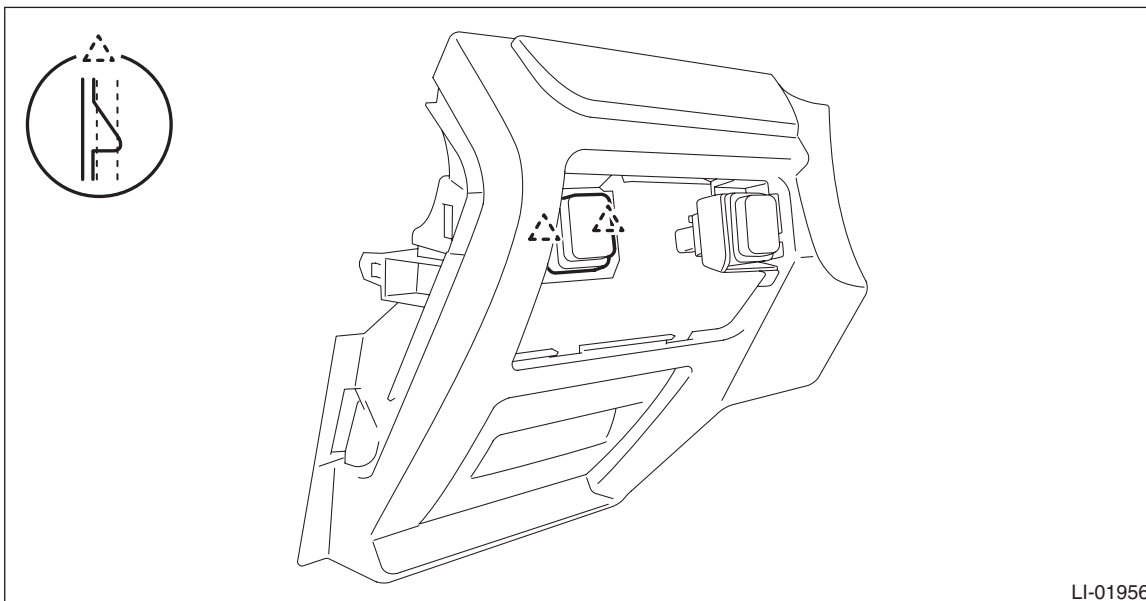

**B: INSTALLATION**


Install each part in the reverse order of removal.

**C: INSPECTION**

1) Measure the resistance between connector terminals.

**Preparation tool:**

**Circuit tester**

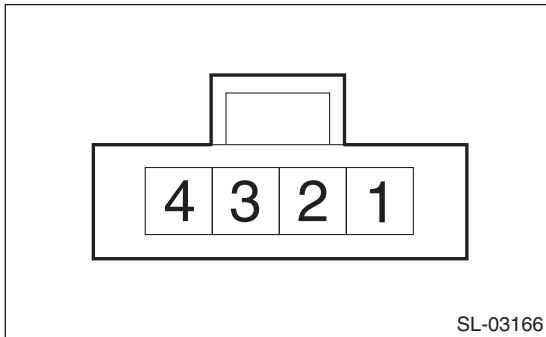

Terminal No.	Inspection conditions	Standard
2 — 3	OFF	1 MΩ or more
	ON	Less than 1 Ω

2) Apply battery voltage between the connector terminals to check lighting condition of illumination inside the switch.

Terminal No.	Inspection conditions	Specification
1 (+) — 4 (—)	Apply battery voltage.	Light ON

3) Replace the SRF OFF switch if the inspection result is not within the standard value.

## SRF OFF Switch

LIGHTING SYSTEM

---

# AUTO HEADLIGHT BEAM LEVELER SYSTEM (DIAGNOSTICS)

## *AL(diag)*

---

	Page
1. Basic Diagnostic Procedure .....	2
2. Check List for Interview .....	3
3. General Description .....	4
4. Electrical Component Location .....	5
5. Control Module I/O Signal .....	6
6. Subaru Select Monitor .....	7
7. Read Diagnostic Trouble Code (DTC) .....	10
8. Clear Memory Mode .....	11
9. Read Current Data .....	12
10. List of Diagnostic Trouble Code (DTC) .....	13
11. Diagnostic Procedure with Diagnostic Trouble Code (DTC) .....	14
12. Diagnostics with Phenomenon .....	18