

Bulkhead Wiring Harness (In Compartment) RH

WIRING SYSTEM

63.Bulkhead Wiring Harness (In Compartment) RH

A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B30	8	Black	C-5	D1	Front door cord RH
B57	4	★	B-2		Power transistor
B83	6	★	B-3		J/C
B87	2	★	B-4		Blower motor
B88	2	Brown	B-2		Evaporator sensor
B90	20	★	A-5	R50	Roof cord
B97	20	★	C-5	R1	Rear wiring harness RH
B98	20	★	C-5	R2	
B116	8	★	D-2		AT select lever
B122	6	★	B-3		J/C
B134	34	★	B-3		ECM
B135	35	★	B-3		
B136	35	★	B-3		
B137	31	★	B-2		
B163	6	Black	B-4		Intake door actuator
B220	44	★	B-3		Relay holder
B239	6	★	B-2		Air mix door actuator (without left/right independent air conditioner)
					Air mix door actuator RH (with left/right independent air conditioner)
B358	2	★	D-2		AT select lever illumination
B386	4	★	B-4		Blower motor relay
B554	2	★	C-2		Heater core sensor
B556	2	★	D-2	AB65	Airbag wiring harness
B579	2	★	D-2		Keyless access interior antenna (front)
B583	12	★	C-3	i237	Instrument panel wiring harness RH
B584	20	★	C-3	i238	
B604	6	★	B-2		J/C
B605	26	★	B-2		HPCM
B606	24	★	B-2		HPCM
B608	5	Gray	C-2		Output clutch relay


★ : White or natural color

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB6	30	Yellow	D-2		Airbag CM
AB9	4	Yellow	D-2		Passenger's airbag module
AB65	2	★	D-2	B556	Bulkhead wiring harness

★ : White or natural color

Bulkhead Wiring Harness (In Compartment) RH

WIRING SYSTEM

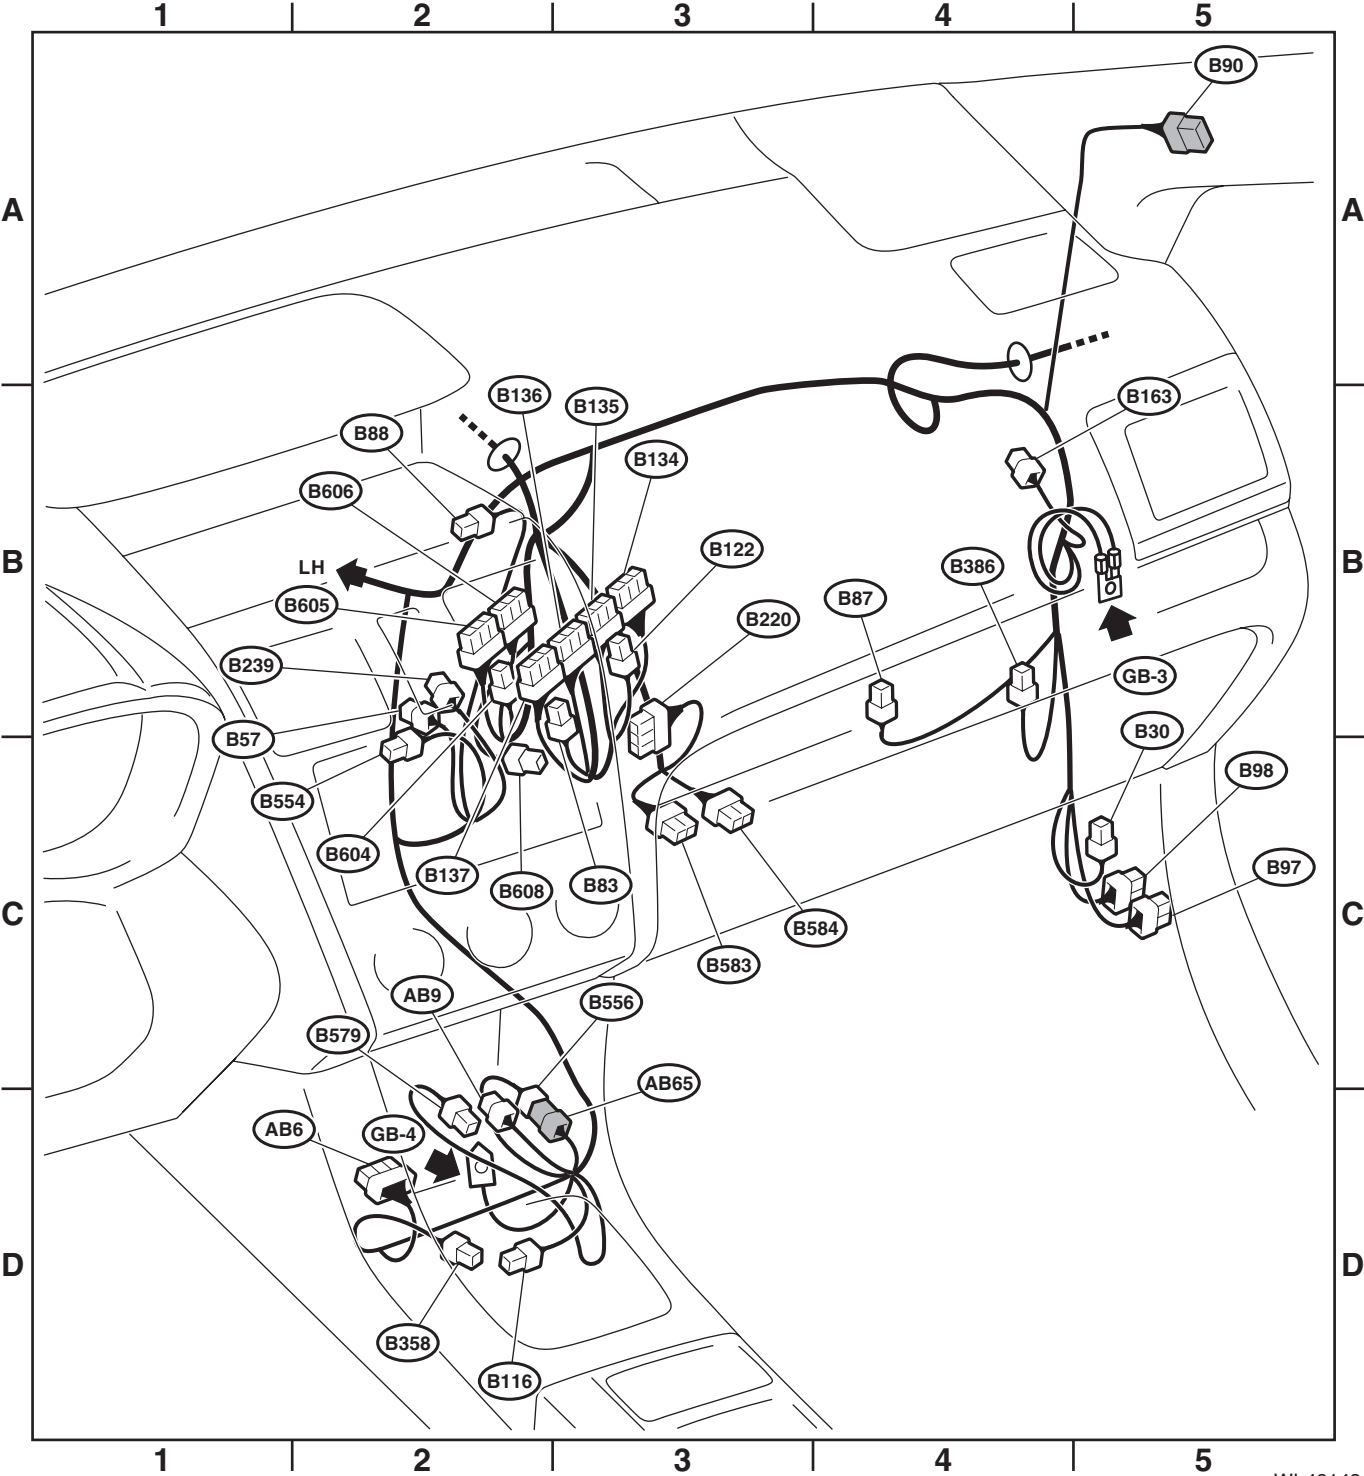

WI-48143