

# Bulkhead Wiring Harness (In Engine Compartment) RH

## WIRING SYSTEM

### 61.Bulkhead Wiring Harness (In Engine Compartment) RH


#### A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B3	5	Black	C-4		Mass air flow and intake air temperature sensor
B6	2	Light gray	C-3		Front ABS wheel speed sensor RH
B11	12	Light gray	C-4	T4	Transmission cord
B12	16	Brown	C-4	T3	
B14	1	Black	C-5		Starter motor
B21	54	Black	C-4	E2	Engine wiring harness
B22	16	Brown	C-3	E3	
B164	2	Black	D-1		Keyless buzzer
B177	2	Gray	B-4		Wiper deicer
B310	38	★	B-2		VDC CM
B321	2	Black	C-2		Hood switch
B450	10	Black	C-3		Power steering CM
B451	6	Gray	C-3		Torque sensor
B452	2	Black	B-3		Power steering CM
B597	2	Light gray	D-1		Pedestrian alert speaker
B598	2	Black	C-2		12V engine restart battery sensor
B599	4	Black	C-2		12V battery relay
B603	20	Gray	C-4	T32	Transmission cord
B609	1	Gray	C-2	B610	Generator cord
B610	1	Gray	C-2	B609	Bulkhead wiring harness
★ : White or natural color					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB16	2	Yellow	D-1		Front sub sensor RH

# Bulkhead Wiring Harness (In Engine Compartment) RH

WIRING SYSTEM

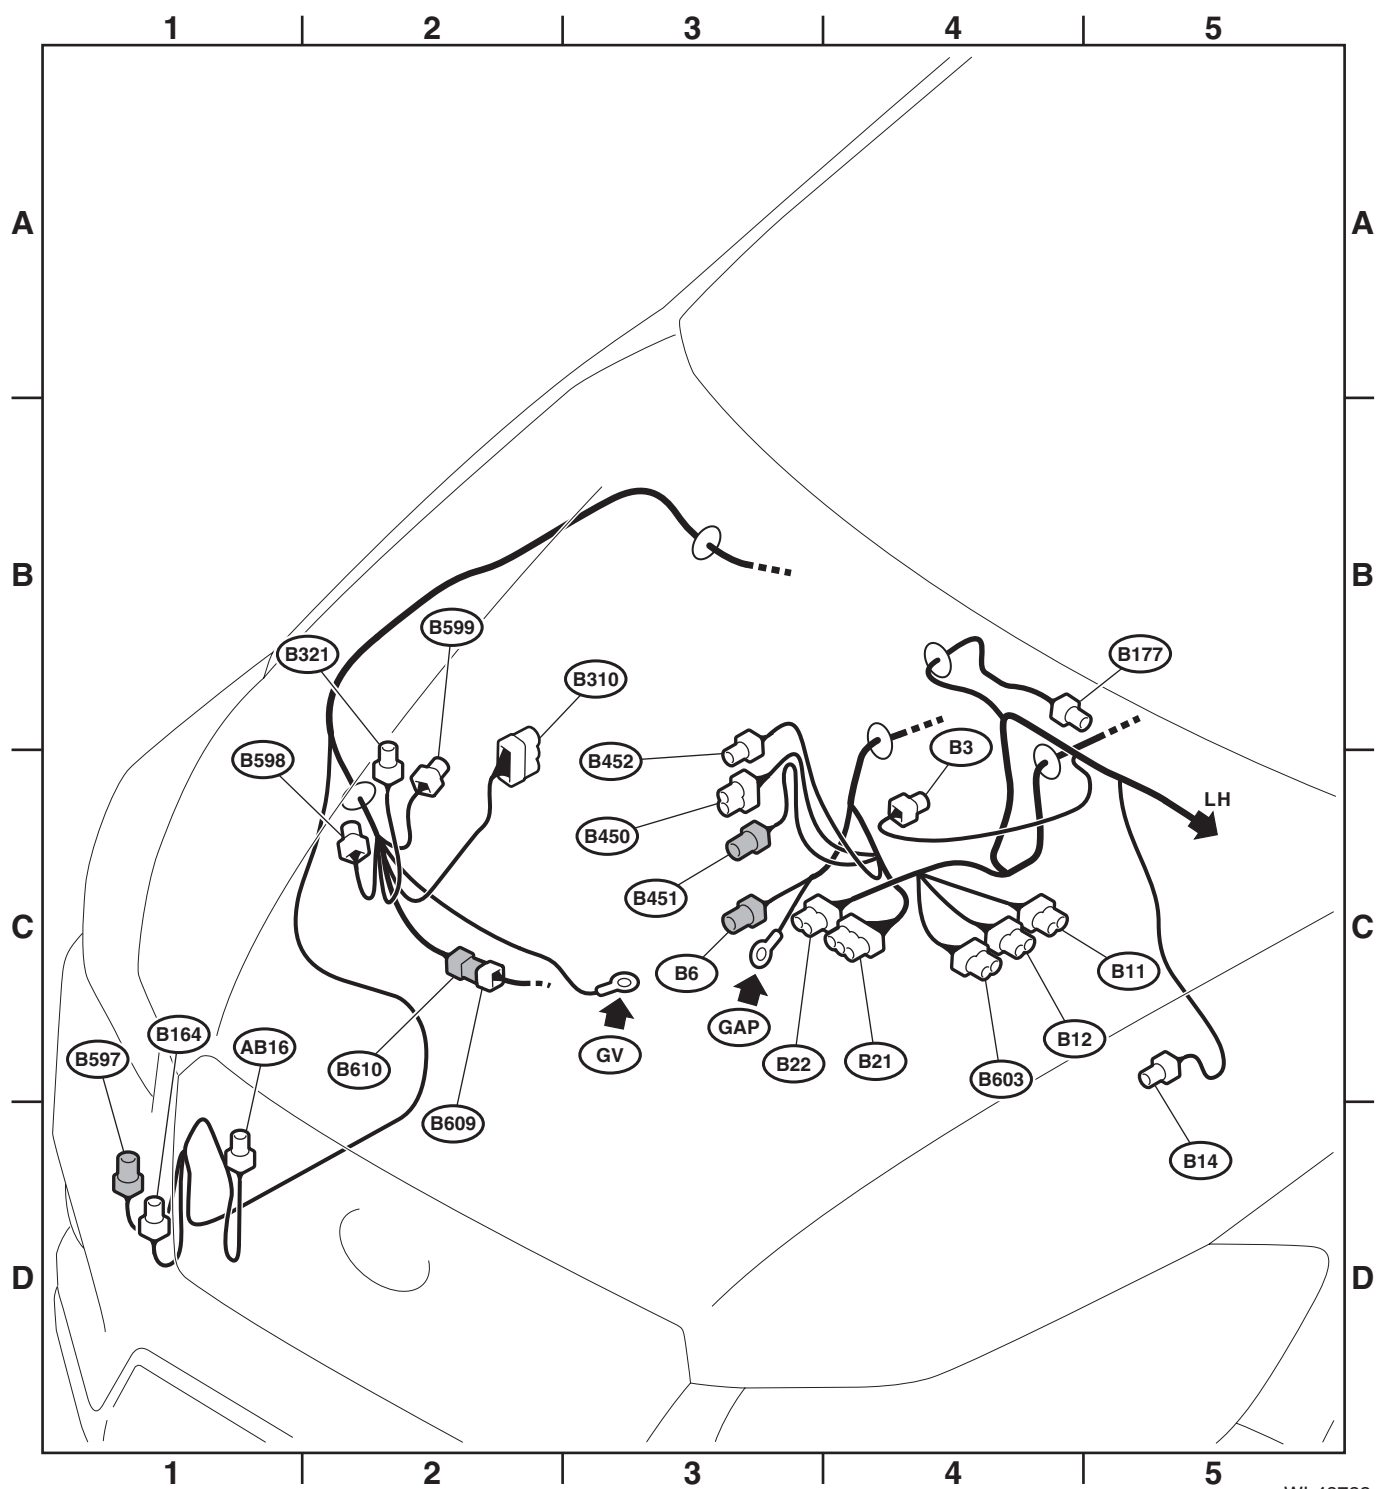

WI-48722