

VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

A: LOCATION




- | | | | | | |
|-----|---|------|-----------------------------------|------|---|
| (1) | VDC control module and hydraulic control unit (VDCCM&H/U) | (7) | VDC OFF indicator light | (12) | ABS wheel speed sensor |
| (2) | Connector | (8) | Steering angle sensor | (13) | Engine control module (ECM) |
| (3) | VDC OFF switch | (9) | Transmission control module (TCM) | (14) | Stop light switch |
| (4) | ABS warning light | (10) | Data link connector | (15) | Hill start assist OFF indicator light / Hill start assist warning light |
| (5) | Brake warning light (EBD warning light) | (11) | Magnetic encoder | (16) | Hybrid powertrain control module (HPCM) |
| (6) | VDC warning light & VDC indicator light | | | | |

Electrical Component Location


VEHICLE DYNAMICS CONTROL (VDC) (DIAGNOSTICS)

- Models without EyeSight

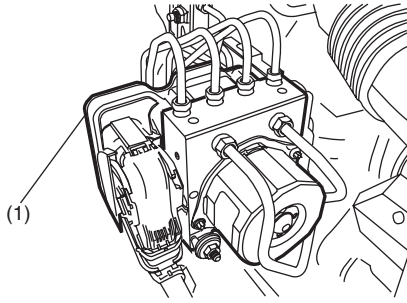


VDC00948

- Models with EyeSight

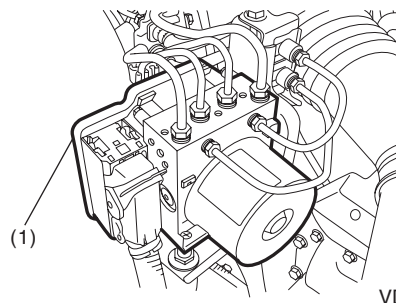


VDC01040

- Gasoline engine model

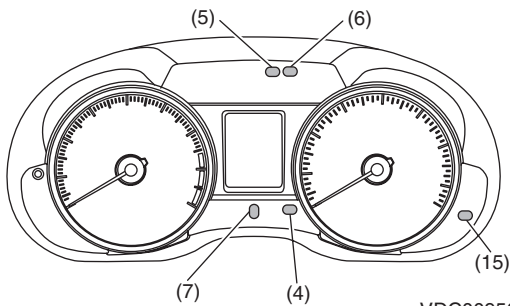


VDC00950


- HEV model

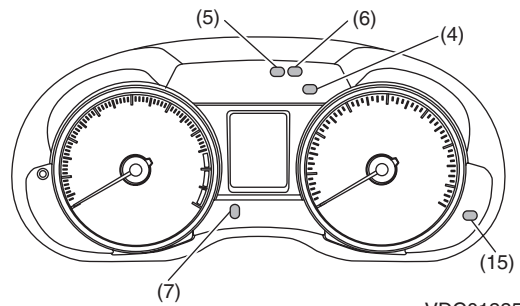


VDC01225

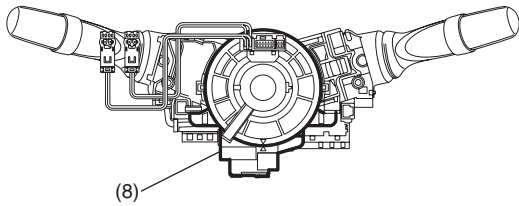

VDC00952

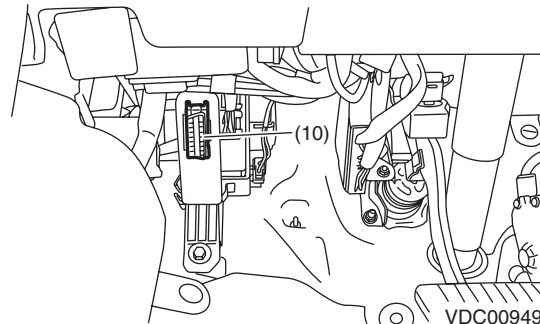

VDC00949

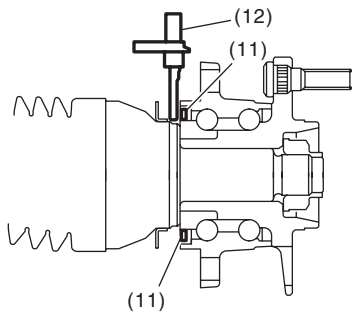

VDC00741

SUBARU