

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

8. Sunshade

A: REMOVAL


- 1) Remove the lid assembly - sunroof.
 - (1) Completely close the lid assembly - sunroof, and open the sunshade assembly.
 - (2) Remove the TORX[®] bolt, and then remove the lid assembly - sunroof.

CAUTION:

Be careful not to damage the lid assembly - sunroof.

PREPARATION TOOL:

TORX[®] T25

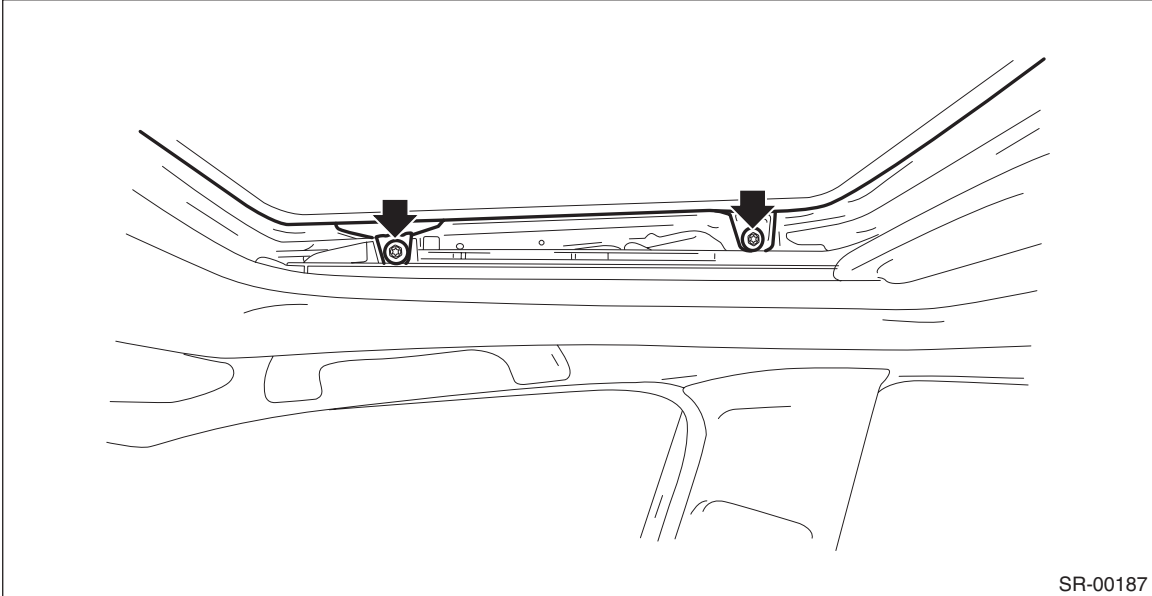

- 2) Remove the trim panel - roof assembly. <Ref. to EI-129, REMOVAL, Roof Trim.>

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)

3) Remove the sunshade assembly.


(1) Attach protective tape (a) on the handle of sunshade assembly.

(2) Remove the left and right stoppers (b).

(3) Remove the sunshade assembly while pulling the center of the brace downward.

CAUTION:

Be careful not to damage the sunshade assembly.

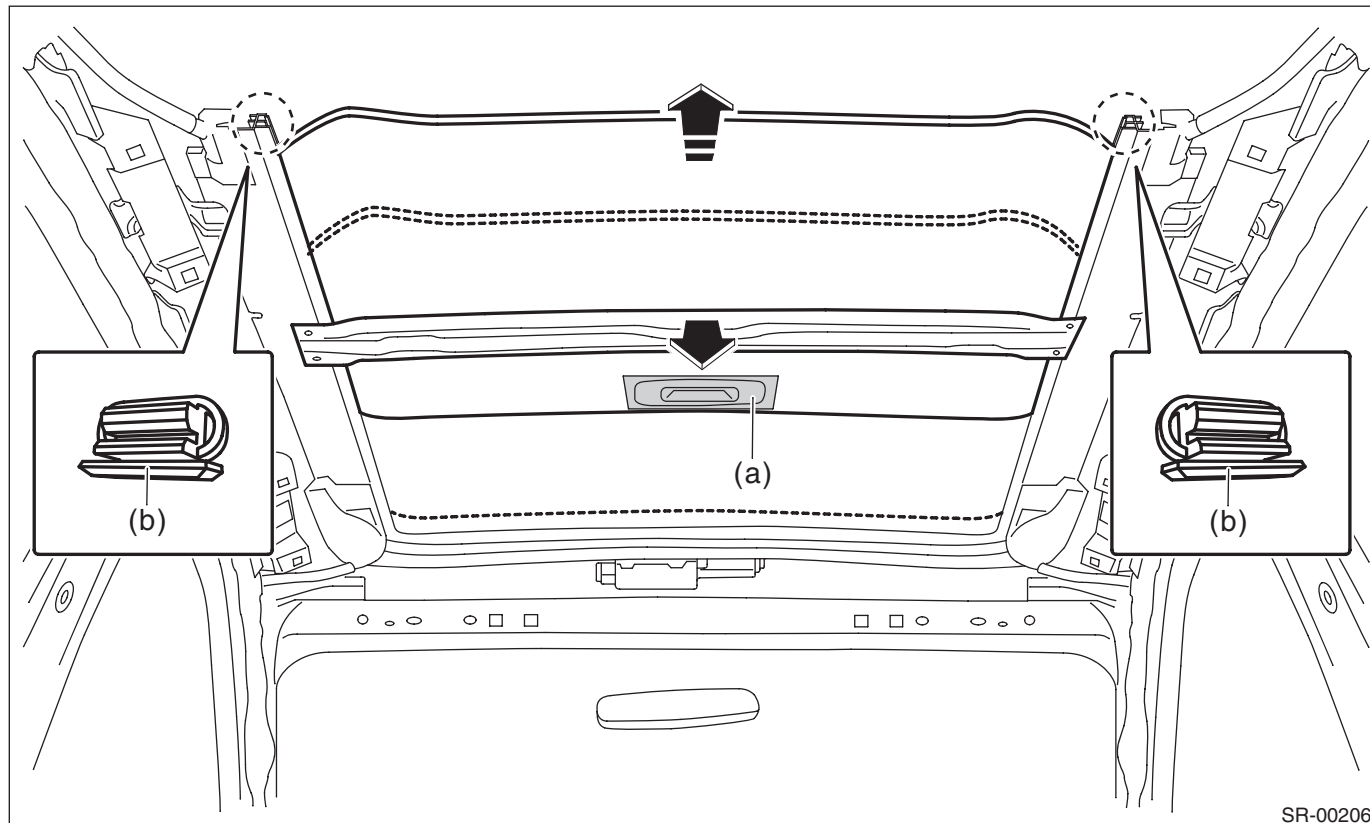

B: INSTALLATION

Install each part in the reverse order of removal.

Tightening torque:

Refer to “COMPONENT” of “General Description”. <Ref. to SR-2, COMPONENT, General Description.>

Sunshade

SUNROOF/T-TOP/CONVERTIBLE TOP (SUNROOF)


C: INSPECTION

1. MOVING LOAD OF SUNSHADE ASSEMBLY

- 1) Attach a spring scale together with a cloth to the edge of sunshade assembly.
- 2) Pull the spring scale to check the moving load of the sunshade assembly.

Moving load of sunshade assembly:

14 ± 6 N (1.43 kgf, 3.1 lbf ± 0.61 kgf, 1.3 lbf)

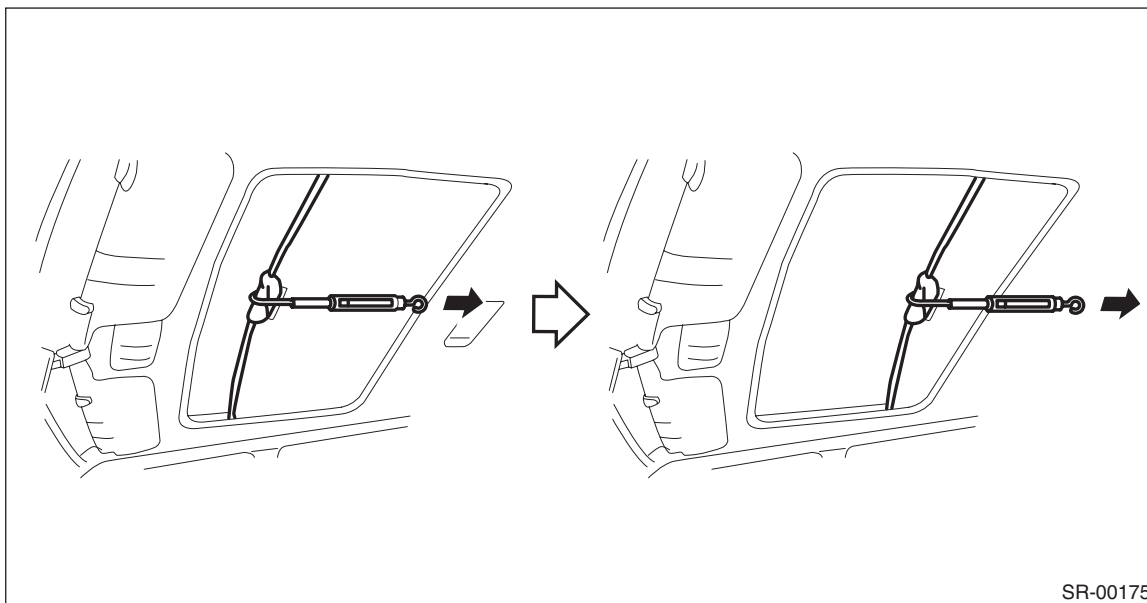

NOTE:

Moving load is larger at the beginning of pulling a spring scale, so take a spring scale reading while the sunshade assembly is sliding smoothly.

- 3) If the inspection result exceeds the standard, check the sunshade assembly or the rail assembly - sunroof for improper installation, and replace if necessary.

EXTERIOR/INTERIOR TRIM



	Page
1. General Description	2
2. Front Under Cover	32
3. Mud Guard	33
4. Floor Under Protector	34
5. Fuel Tank Protector	36
6. Front Grille	37
7. Front Bumper	40
8. Rear Bumper	52
9. Cowl Panel	61
10. Side Garnish	64
11. Roof Molding	66
12. Roof Rail	69
13. Rear Spoiler	70
14. Roof Spoiler	71
15. Door Trim	72
16. Instrument Panel Lower Cover	76
17. Glove Box	78
18. Center Console	80
19. Console Box	81
20. Instrument Panel Assembly	83
21. Lower Inner Trim	102
22. Upper Inner Trim	107
23. Rear Quarter Trim	112
24. Rear Shelf Trim	120
25. Trunk Room Trim	125
26. Sun Visor	127
27. Assist Grip	128
28. Roof Trim	129
29. Rear Gate Trim	158
30. Floor Mat	160
31. Trunk Lid Garnish	162
32. Rear Gate Garnish	163
33. Heat Shield Cover	166
34. Ornament	167