




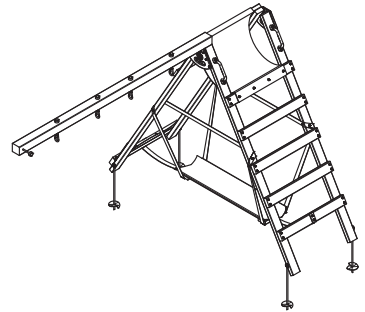

CrazyCoconut

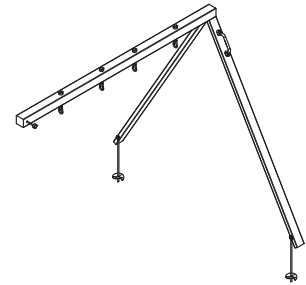

Warning! Choking Hazard - Small parts! Only for domestic use. For outdoor use only.
Product must be assembled by an adult. Customer must keep this information

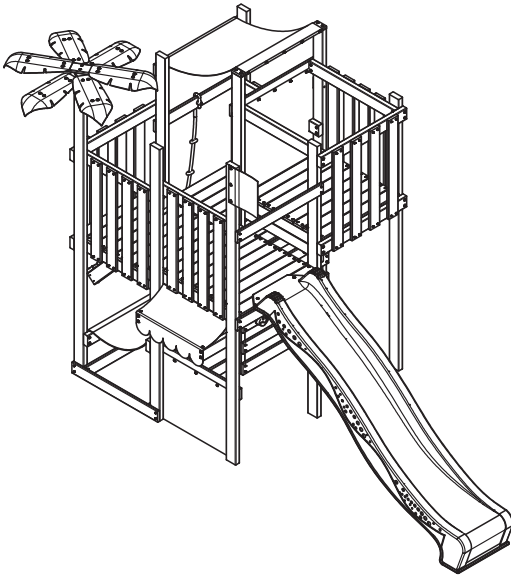

Ages
3-14





General safety information

Congratulations on the purchase of your Wickey climbing frame. The purchased product is expandable at any time, so years of fun are guaranteed. Our systems meet the latest safety requirements: the used materials comply with the European standards, according to ASTM F1148 - Standard Consumer Safety Performance Specification for Home Playground Equipment. All woods are pressure impregnated and thus protected from the elements. Our playground equipment is examined with the utmost care to ensure the necessary safety.

- ▶ Please use only original Wickey components and add-on parts.
- ▶ For domestic use only!
- ▶ Suitable for children between 3 and 14 years old.
- ▶ Maximum load capacity: 220 lbs.
- ▶ For outdoor use only!

Safety instructions for assembly

- ▶ The product may only be assembled by adults.
- ▶ Make sure that no children are present during the installation of the play equipment.
- ▶ children must not use the equipment until properly installed.
- ▶ The climbing frame may only be used after the complete inspection of all attachments.
- ▶ Read the installation instructions carefully and keep these instructions for future adjustments or extensions
- ▶ Wear suitable protective clothing, such as safety glasses, and gloves, during the assembly.
- ▶ Do not step onto the platform until the playground equipment is completely assembled.
- ▶ In order to ensure the stability of the climbing frame, you should use ground anchors and fix them in concrete.
- ▶ Make sure that the ground anchors disappear into the ground

completely, to prevent tripping hazards.

- ▶ Tighten the nuts on bolts securely, and flush to the the component.
- ▶ Caps which go over the exposed bolts shall be put on snug to the nut.

Swing Clearance Distances

- ▶ The distance between the swing seat and the ground should be at least 14".
- ▶ The distance between the individual swing seats and other swinging products should be at least 18".
- ▶ The clearance distance between swings and frame should be at least 12".

Surroundings and underground

- ▶ Do not install home playground equipment over concrete, asphalt, packed earth, grass, carpet, or any other hard surface. A fall onto a hard surface can result in serious injury or death to the equipment user.
- ▶ Place the equipment on level ground, not less than 6 ft from any structure or obstruction such as a fence, garage, house, overhanging branches, laundry lines, or electrical wires.

Inappropriate use

Improper use or the attachment of inappropriate or foreign materials such as heavy chains, poles or ropes release the manufacturer from his responsibility. The same applies to incorrect assembly. Do not deviate from the assembly instructions and do not change the design and implementation.

Supervision

Keep in mind that adult supervision is mandatory and essential while children play on these devices. Children under 3 years of age are not allowed to use the playground equipment.

Maintenance

At the beginning of each play session and every two weeks during the season, check the strength of the screws and hooks. Note, however, that overtightened screws can cause cracks in the wood.

Also check the fastening material, fittings and swing hooks for any signs of wear or rust. Also check the anchors and replace them in case of defects. In addition, all moving metal parts must be lubricated on a regular basis. Also check all the screw covers and sharp edges and replace them or grind them off if necessary. Check the wooden parts for splinters and cracks, which can naturally occur during the drying process. Remove any splinters that may have developed during this process. Swing seats, chains, ropes and other accessories must be checked for signs of wear. Defective parts must be replaced in accordance with the manufacturer's instructions. Lack of inspection can cause the climbing frame to overturn or can have other dangerous effects.

Wood treatment







Since all wooden parts are pretreated (pressure impregnated) there is no need for further treatment against weathering or decay. Under no circumstances should you paint the wood or use a paint that could result in a slippery/smooth surface.

Maintenance of plastics

For cleaning the plastic parts, we recommend tap water with detergent. In wintertime, you should store the plastic parts in the house or garage to slow down the natural aging process of the materials.


Wickey's play equipment is intended for private use only, as additional safety requirements are required for public play equipment. Spare parts can be ordered via our webshop: www.wickey.com

Marking predrilling

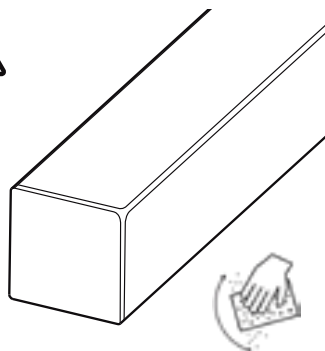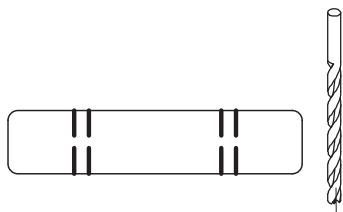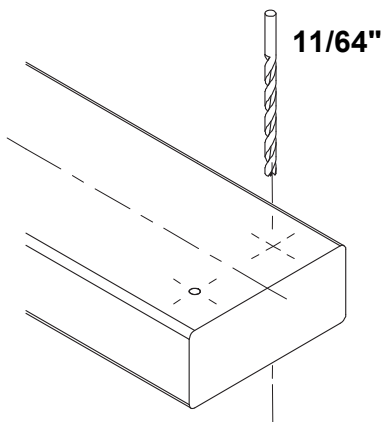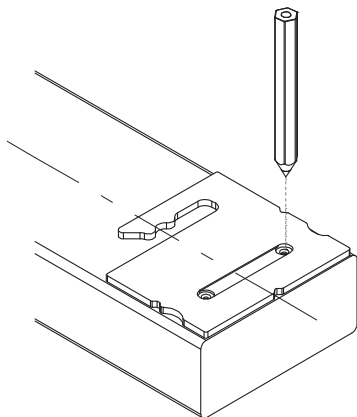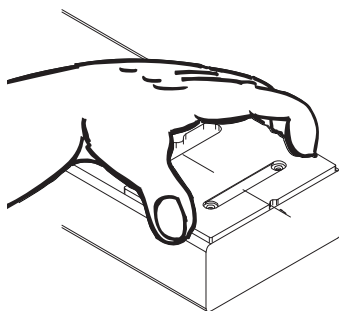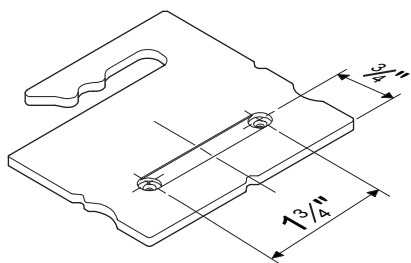

Sand end cut to Radius $\frac{1}{8}"$


Tools

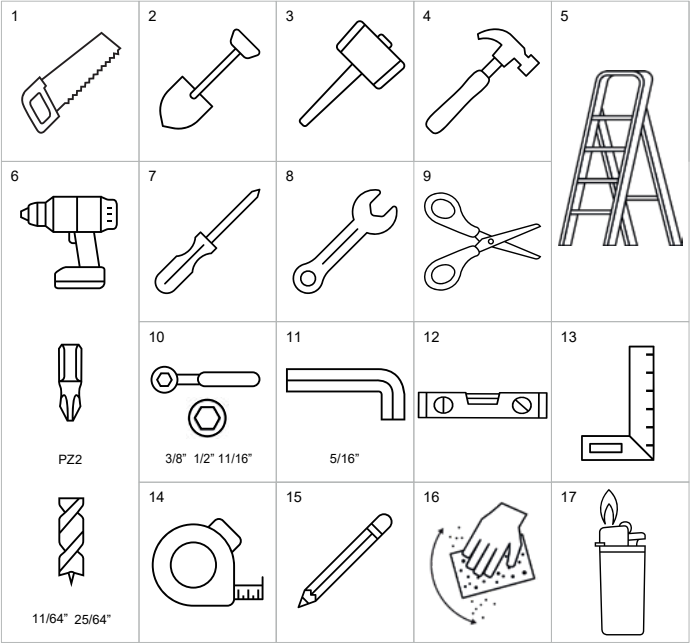




1. Handsaw	10. Ratchet
2. Shovel	11. Hex Key
3. Rubber Mallet	12. Bubble Level
4. Hammer	13. Square
5. Ladder	14. Tape Measure
6. Drilling Set	15. Pencil
7. Phillips Screw	16. Sand-paper, grit size: 1/8"
8. Wrench	17. Lighter
9. Scissors	

Anchoring

- ⊙ Required Anchor (Included)
- Optional Anchor (Sold Separately)

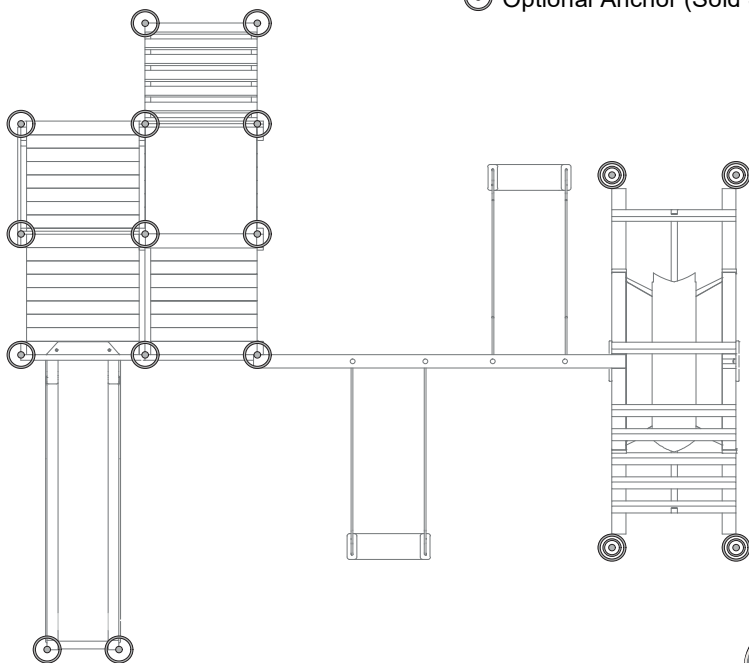


Top View

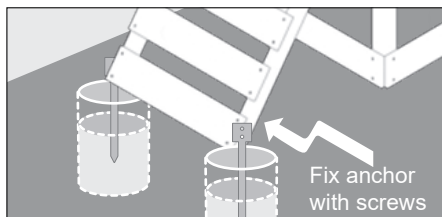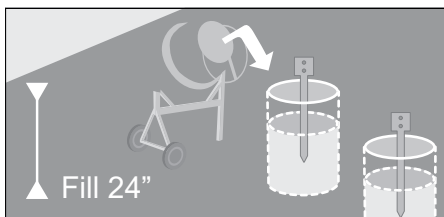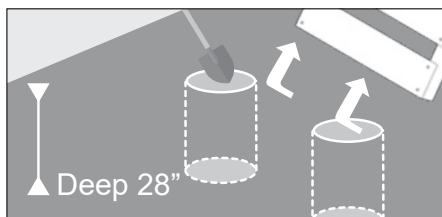


all anchoring devices must be placed below the level of the playing surface to prevent tripping or injury resulting from a fall

Woodlist

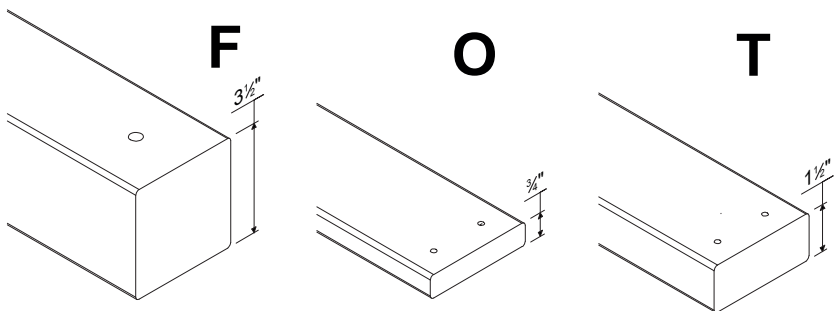

	°	°	°	°	F95B
	94.5" x3.5"x3.5"				
					T95
	94.5" x1.5"x3.5"				
					T87A
	86.5" x1.5"x3.5"				
					T87
	86.5" x1.5"x3.5"				
					T42A
	41.5" x1.5"x3.5"				
					T32A
	31.5" x1.5"x3.5"				
					T10
	10" x1.5"x3.5"				
					O42A
	41.5" x0.75"x3.5"				
					O42
	41.5" x0.75"x3.5"				
					O32A
	31.5" x0.75"x3.5"				
					O29A
	28.5" x0.75"x3.5"				

Mounting Materials



Screw, 6x70mm, T30, (length: 2-3/4")



Washer, M10



Screw, 4,5x50mm, T20, (length: 2")





Washer




Screw, 5x20mm, PZ2, (length: 3/4")




Lock Nut, M10




Carriage Bolt, M10x40mm, (length: 1-5/8")

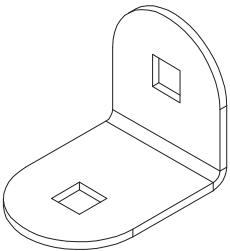


Mounting Bracket, 55x45mm




Hexagon Head Wood Screw, 10x80mm, (length: 3-1/4")



Carriage Bolt, M10X190mm, (length: 7-1/2")

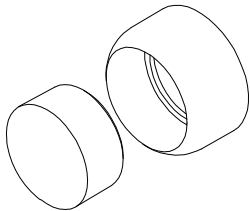

Cap

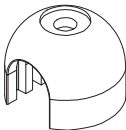

Special Cap