

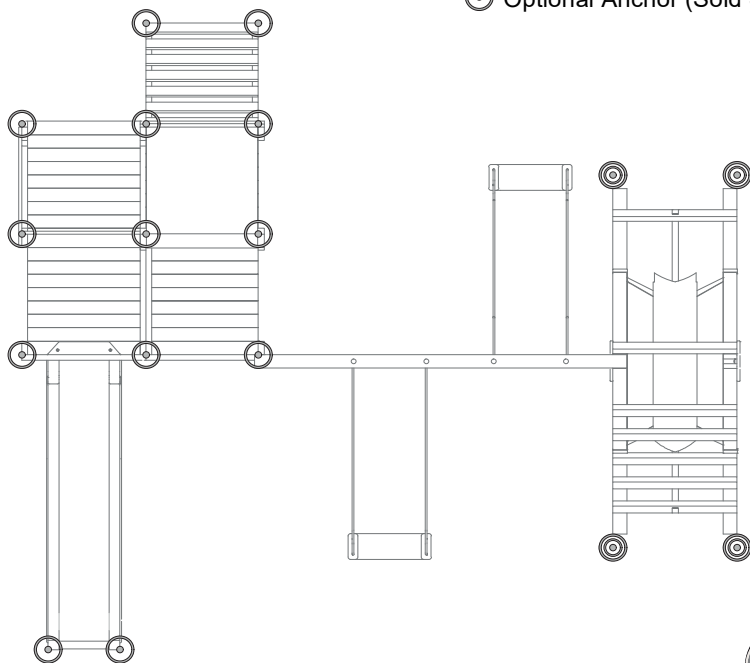
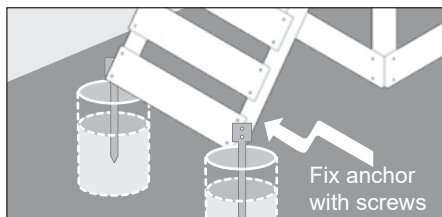


- ⊙ Required Anchor (Included)
- ⊙ Optional Anchor (Sold Separately)

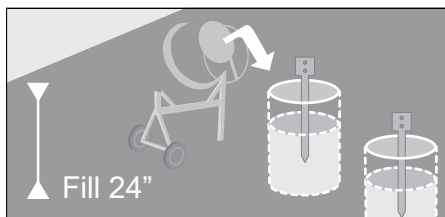

Top View

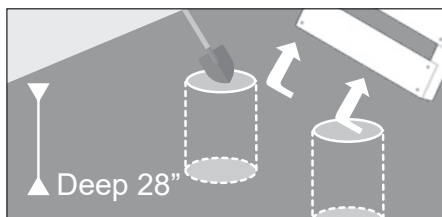

all anchoring devices must be placed below the level of the playing surface to prevent tripping or injury resulting from a fall