




CRAZY COCONUT

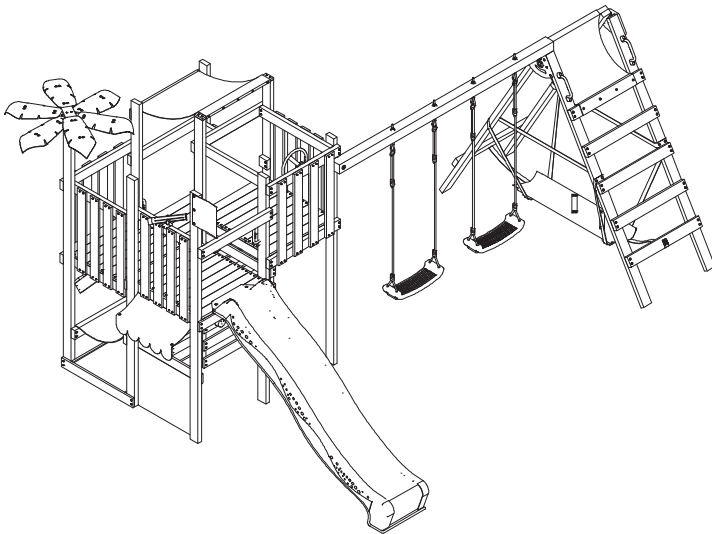



EN

General safety information

Congratulations on the purchase of your Wickey climbing frame. The purchased product is expandable at any time, so years of fun are guaranteed. Our systems meet the latest safety requirements: the used materials comply with the European standards, according to **EN 71 parts 1 and 8 for private use**. All woods are pressure impregnated and thus protected from the elements. Our playground equipment is examined with the utmost care to ensure the necessary safety.

- Please use only original Wickey components and add-on parts.
- For domestic use only!
- Suitable for children between **3 and 14 years old**.
- Maximum load capacity: **100 kg**.
- For outdoor use only!

Safety instructions for assembly

- The product may only be assembled by adults.
- Make sure that no children are present during the installation of the play equipment.
- The climbing frame may only be used after the complete inspection of all attachments.
- Read the installation instructions carefully and keep these instructions for future adjustments or extensions
- Wear suitable protective clothing, such as safety glasses, and gloves, during the assembly.
- Do not step onto the platform until the playground equipment is completely assembled.
- In order to ensure the stability of the climbing frame, you should use ground anchors and fix them in concrete.
- Make sure that the ground anchors disappear into the ground completely, to prevent tripping hazards.

Safety distances

- The distance between the swing seat and the floor should be at **least 35 cm**.
- The distance between the individual swing seats and other swinging products should be at **least 45 cm**.
- The distance to the frame should be at least **30 cm**.
- Surroundings and underground
- Make sure that the surface is not too hard in terms of shock absorption. Loosen it, if necessary, or equip the ground with fall protection mats, which are also available in our shop.
- All hard floors such as concrete surfaces, asphalt, etc. are unsuitable as there is a high risk of injury for your children.
- Also check the immediate surroundings of the climbing frame (a radius of at least **2 meters**) for hazards such as branches, clothes lines or other obstacles.

Inappropriate use

Improper use or the attachment of inappropriate or foreign materials such as heavy chains, poles or ropes release the manufacturer from his responsibility. The same applies to incorrect assembly. Do not deviate from the assembly instructions and do not change the design and implementation.

Supervision

Keep in mind that adult supervision is mandatory and essential while children play on these devices. **Children under 3 years of age are not allowed to use the playground equipment.**

Maintenance

At the beginning of each season and every two weeks during the season, check the strength of the screws and hooks. Note, however, that overtightened screws can cause cracks in

the wood. Also check the fastening material, fittings and swing hooks for any signs of wear or rust. Also check the anchors and replace them in case of defects. In addition, all moving metal parts must be lubricated on a regular basis. Also check all the screw covers and sharp edges and replace them or grind them off if necessary. Check the wooden parts for splinters and cracks, which can naturally occur during the drying process. Remove any splinters that may have developed during this process. Swing seats, chains, ropes and other accessories must be checked for signs of wear. Defective parts must be replaced in accordance with the manufacturer's instructions. Lack of inspection can cause the climbing frame to overturn or can have other dangerous effects.

Wood treatment

Since all wooden parts are pretreated (pressure impregnated) there is no need for further treatment against weathering or decay. Under no circumstances should you paint the wood or use a paint that could result in a slippery/smooth surface.


Maintenance of plastics

For cleaning the plastic parts, we recommend tap water with detergent. In wintertime, you should store the plastic parts in the house or garage to slow down the natural aging process of the materials.

Wickey's play equipment is intended for private use only, as additional safety requirements are required for public play equipment. Spare parts can be ordered via our webshop: www.wickey.com


We wish you and your children a lot of fun with your Wickey product. If you have any questions, please do not hesitate to contact us.

Your Wickey Team



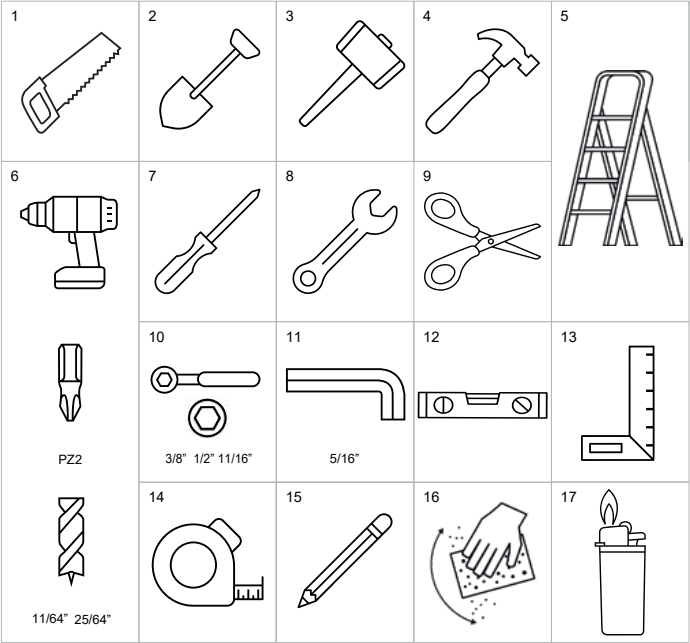


1. Handsaw	10. Ratchet
2. Shovel	11. Hex Key
3. Rubber Mallet	12. Bubble Level
4. Hammer	13. Square
5. Ladder	14. Tape Measure
6. Drilling Set	15. Pencil
7. Phillips Screw	16. Sand-paper, grit size: 1/8"
8. Wrench	17. Lighter
9. Scissors	


- ⊙ Required Anchor (Included)
- Optional Anchor (Sold Separately)

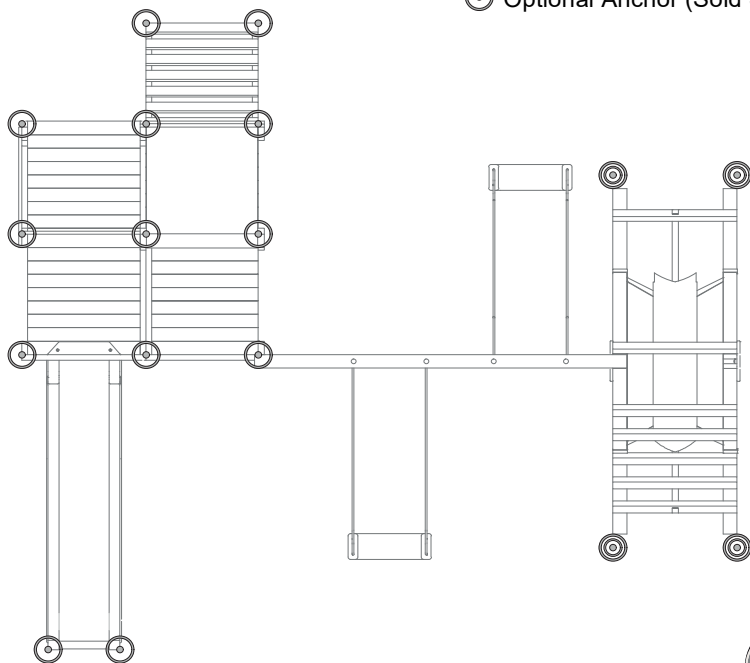


Top View

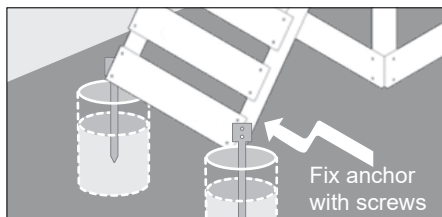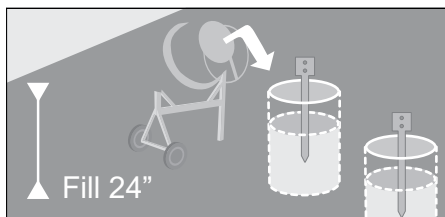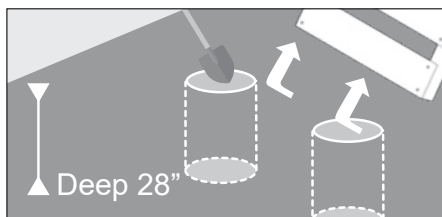

all anchoring devices must be placed below the level of the playing surface to prevent tripping or injury resulting from a fall

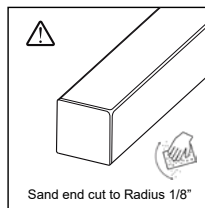
[illegible]



5/8" X 2 7/8" Washer Head Screw T30 (6X70mm)



Washer M10



3/8" X 2" Washer Head Screw T20 (4.5X50mm)





Washer H12




3/8" X 3/4" Wood Screw (5X20mm)




Nut M10





1" X 1 3/4" Carriage Bolt (M10X40mm)

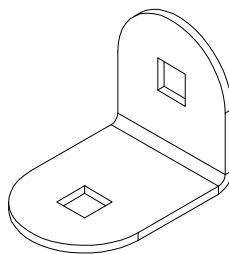


Mounting Bracket (55x45mm)




3/4" X 3 3/8" Hexagon Head Wood Screw (10x80mm)



1" X 7 3/4" Carriage Bolt (M10X190mm)

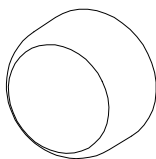

Cap Pro


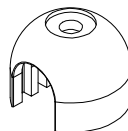


Special Cap

0

Tarp Cuts



Canvas 80.3" x 104.8"

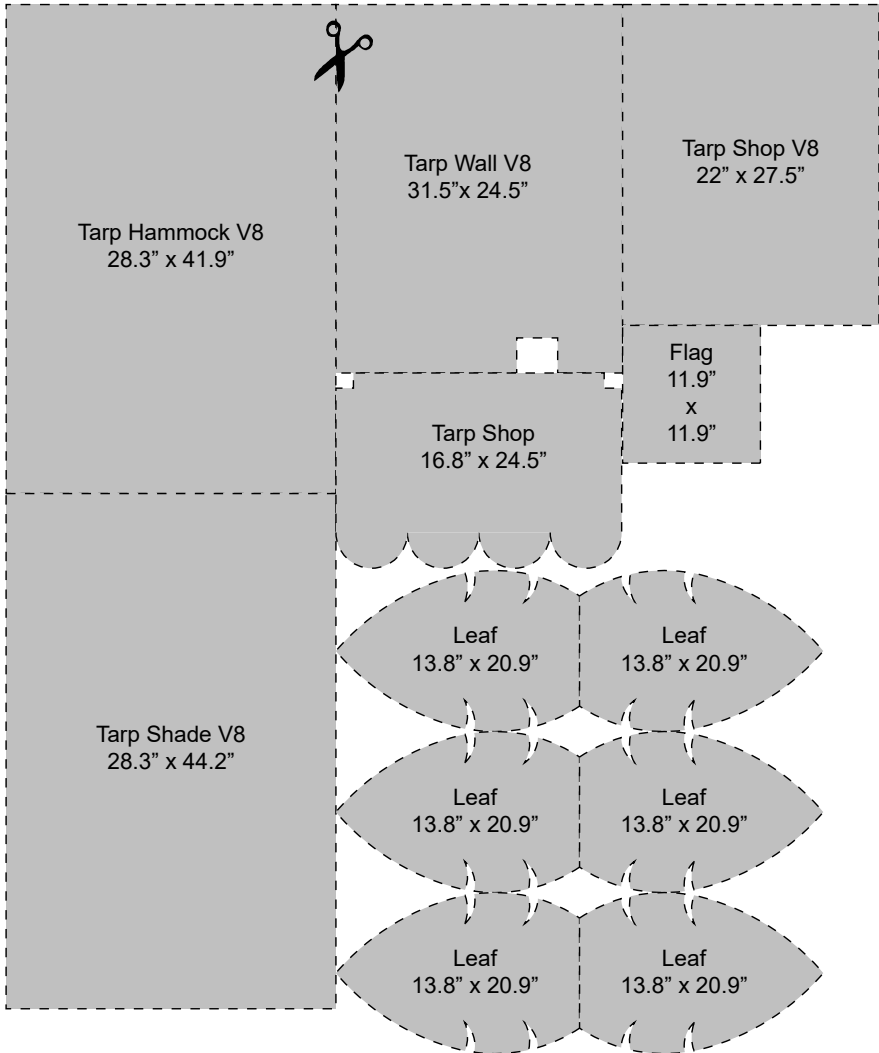**1x**

0

Tarp Cuts

Canvas 80.3" x 104.8"

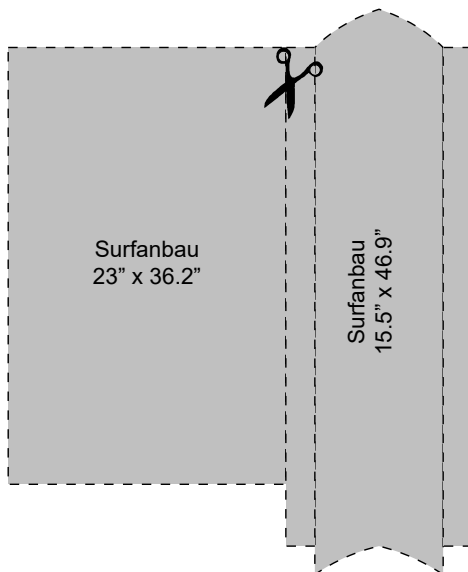**1x**

x

x

x

x

x

x

x