


Calibrate the servo again

Turn on the power, the Penguin Bot will start his opening dance and once the dance is over, all the servos of the penguin bot will stay at 90 degree angle and if not you will need to remove the screw and calibrate the servo position as shown in the image.

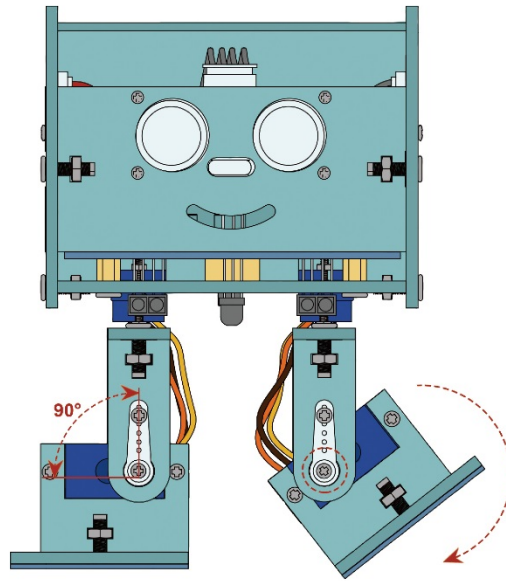

Note:

the angle of each teeth on micro servo is 15 degree and if you install it on the middle of the direction of 90 degree, it will rotate to left or right by 15 degree, which means the actual degree of installing the micro servo is 75 degree or 105 degree.

