

# Fault code: 4011 heating failure

Type


Error Code

Solution

4011 heating failure:

1. Enter the equipment test, find the burner heating, and click on "On" to see if the temperature of the burner has increased.
2. If the temperature has not increased, check the color of the indicator light on the heating panel behind, with red light indicating normal power supply, green light indicating heating, and yellow light indicating that the burner coil is disconnected.
3. Turn on the yellow light on the heating panel, and check whether the burner coil is blackened and whether the burner cooling fan is rotating.

Modify Back PCB to match this:

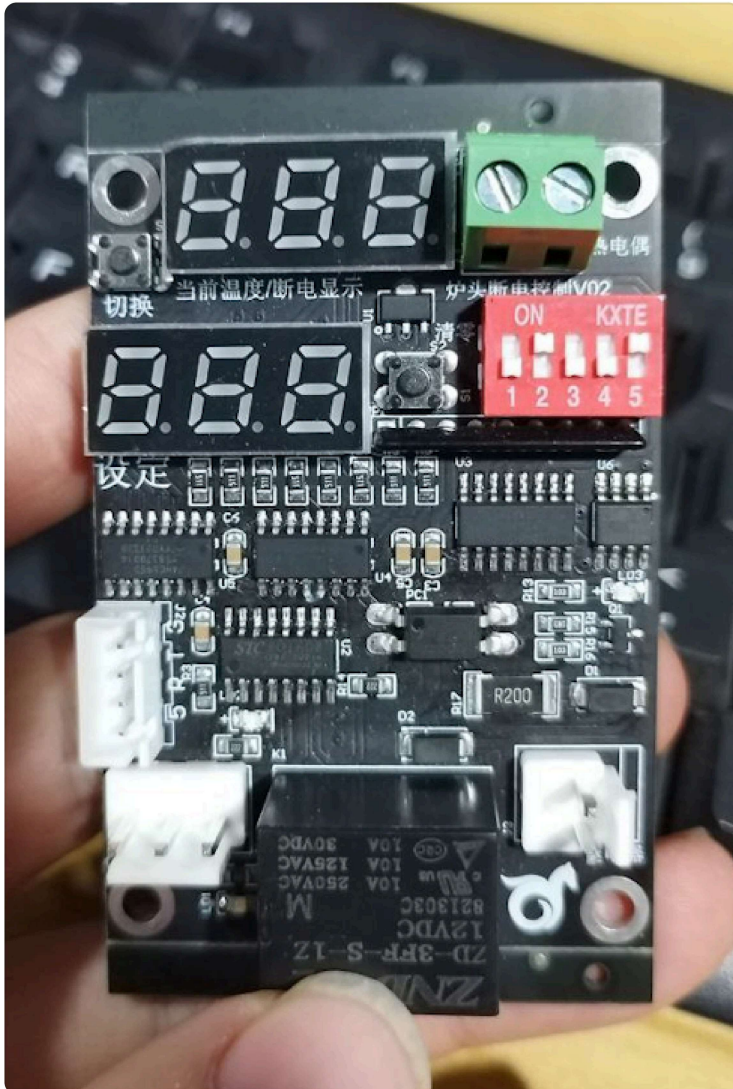

Created by

 Jason Lopez