

# SETUP GUIDE

## COTTON CANDY VX

After the machine is unboxed...


### 1. INSTALL LIGHTS

- Take screws out of "Cotton Candy" sign.
- Slide "Star" pieces through slots in cloud and screw in.
- Connect all available electrical connections.
- Screw back together and mount to machine.



### 2. FILL TOPPINGS, SUGAR, AND STRAWS

- Chocolate sprinkles in left container, rainbow in the right.
- Fill sugar containers marked with corresponding colors.
- Fill straw holder with straws.

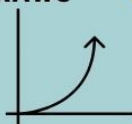

### 3. FILL WATER BUCKET

- Fill the water bucket on the right with clean water to about 90% capacity.
- The bucket on the left will be the "waste" bucket.



### 4. PLUG IN MACHINE

- Plug in your machine.
- Make sure you have the appropriate amperage capacity for your machine.
- (See manual for details).



### 5. CONNECT TO INTERNET

- Press and hold the top right corner of the touch screen until the keypad menu pops up. (Enter "123456").
- Press Settings - Wifi (find your wifi) - Go back to Sweet Robo app.
- See manual for SIM card instructions if no wifi.



### 6. WEAK NETWORK MODE (OFFLINE MODE)

- Once wifi is turned on from Step 5, hold the top right corner of the screen again (Enter "123456").
- Press "System Settings" - make sure "Weak Network Mode" is enabled.



### 7. MAKE YOUR FIRST COTTON CANDY

- Follow the steps on your screen as if you are your customer.
- Grab your first delicious cotton candy from your new robot.



### 8. SET YOUR TIMER

- Set your machine for when it starts up and shuts down for the day.
- See Chatbot or manual for details on how to set your timer if assistance is needed.

