

Setting up the Timer KG316

Unlocking the Timer

The Timer has to be unlocked to make any changes to it.

The Timer is locked when this icon is visible.

To unlock the timer press RESET 4 times.

This icon should disappear.



Setting the Current Time (CLOCK):

Click on the CLOCK button. Press Hour, Minute and Week until the current time is set. Then you can lock the timer if no other changes are to be made.

Setting the MACHINE TIMER MODE:

On – The machine will always be on regardless of timers.

Auto – The machine will be controlled with the timers.

Off – The machine will stay off.




Setting a time for the Machine to TURN ON:

Press TIMER button, you will see numbers on the left

The ON near the number means the machine will turn ON using this timer.

Press Hour, Minute and Week until the desired time is set.

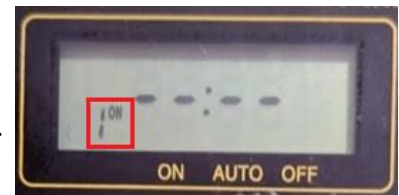


When complete you can press CLOCK to return to last screen or TIMER to continue setting OFF time for the timer.

Setting a time for the Machine to TURN OFF:

Press TIMER button, you will see numbers on the left

The OFF near the number means the machine will turn OFF using this timer. Press Hour, Minute and Week until the desired time is set.

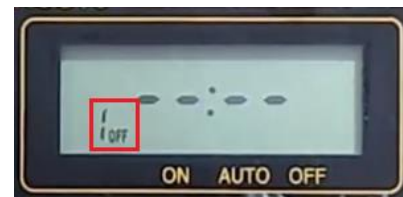

When complete you can press CLOCK to return to last screen or TIMER to continue setting ON time for the next available timer.

Locking the TIMER:

When finished making changes please LOCK the timer to prevent any unwanted changes.

To LOCK the timer press RESET 4 times.