

No Water/Humidity


Type

Issue

Solution

Troubleshooting and solutions:

1. Remove the "sprinkler" next to the burner.
2. After removing the "spray head", enter the "device test" interface of the management background; click "humidifier".
3. Click "Humidifier" and check whether the humidification component sprays water.
- 3.1. If there is water spray: if the nozzle is blocked, open the tool kit and replace it with a new "nozzle".
3. 2. If there is no water spray: check whether the water level in the bucket is too low or the suction pipe is not put in the bottom; check whether the humidifier pump line is loose.

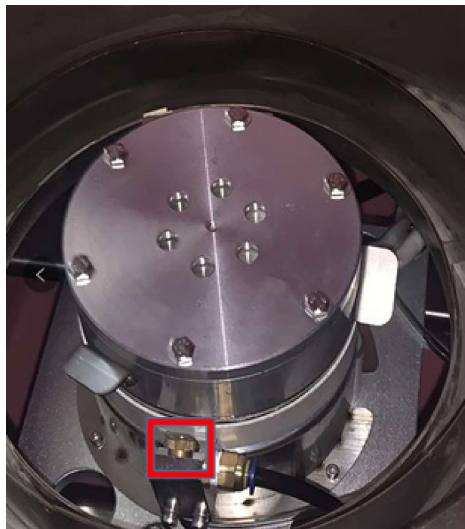

The location of the "sprinkler"

Created by

J Jason Lopez