



CLUTCH

Ensure the free-play of the clutch lever is between 10-20 mm. Pull in the clutch lever fully to check if gear changing can be done smoothly. Adjustments need to be made at regular periods.

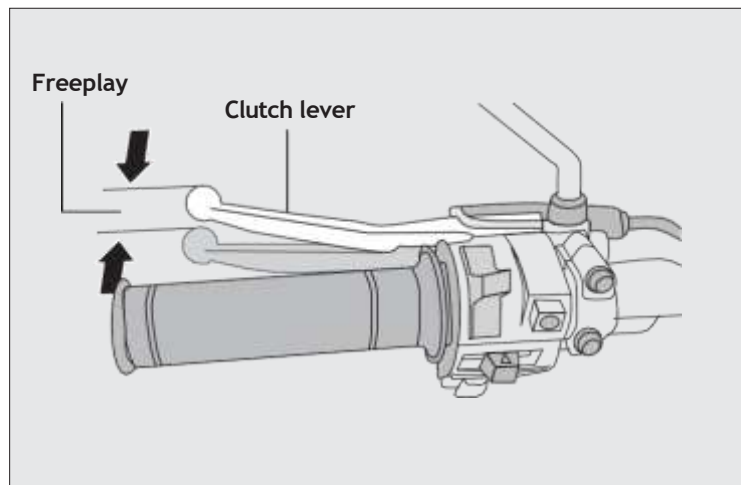

LIGHTS

Lights, indicators & hazard light - Turn them on to check that all are working properly. Replace any fused bulb. Clean all lamp covers. Do not ride if any of your motorcycle's headlamps, tail lamps and direction indicators are not working.

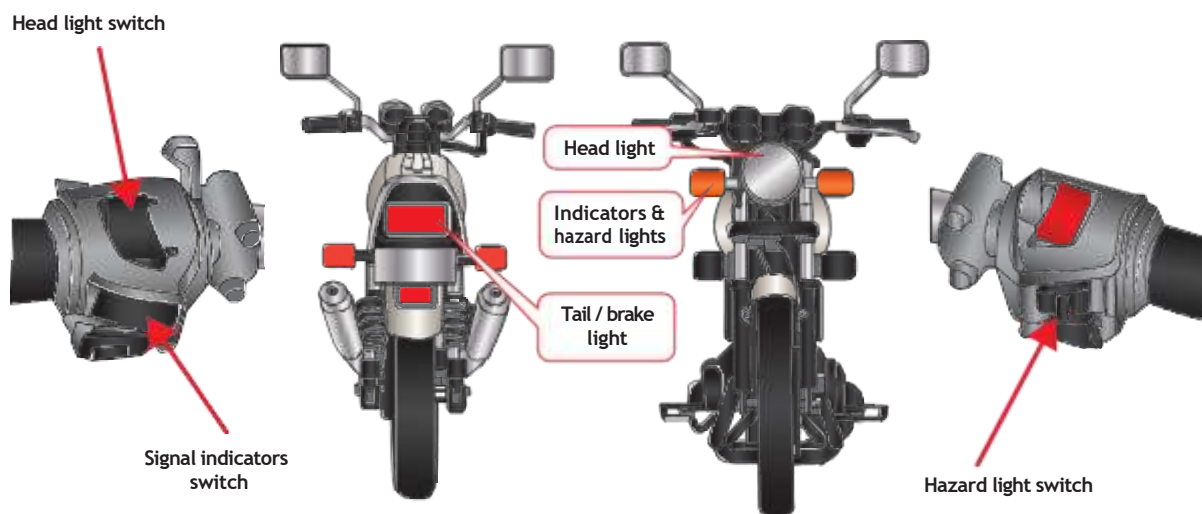

ILLEGAL MODIFICATION

43. A modification refers to replacing, adding or removing a vehicle's components or systems, such that the vehicle is different from the original manufacturer's specifications. Before making any modifications to your vehicle, check if they comply with LTA's guidelines.

The LTA's guidelines for vehicle modifications ensure that road safety, vehicle exhaust gas and noise emissions standards are not compromised. This is to help protect the environment against air pollution for the benefit of vehicle owners, road users and our environment. For example an illegally modified or removing the motorcycle catalytic converter will not reduce exhaust emission.

To avoid committing an offence, do not carry out unauthorised modifications to your vehicle. Otherwise, you may be fined up to \$2,000 or face up to 6 months' imprisonment.