


OPERATION OF VEHICLE CONTROLS

Meters And Warning Indicators

Signal Indicators

- 58 The indicator lights will flicker when the indicator is activated in the desired direction. However, when the hazard lights are switched on, both signal indicator lights will flash on and off simultaneously.

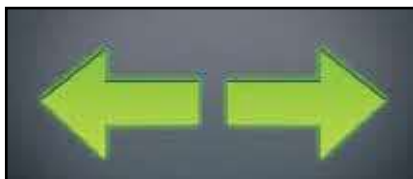

Tachometer Or Rev Counter

- 59 Indicates the number of engine revolutions per minute.



Fuel Gauge

- 60 The pointer indicates the amount of fuel in the fuel tank.



Temperature Gauge

- 61 The pointer of the gauge will move from C to H as the temperature of the engine rises. If the pointer swings beyond the normal range, it means that the engines is over-heating.

