


Resetting the Serial Number


From the setup icon, select the Arduino or ESP32 as appropriate

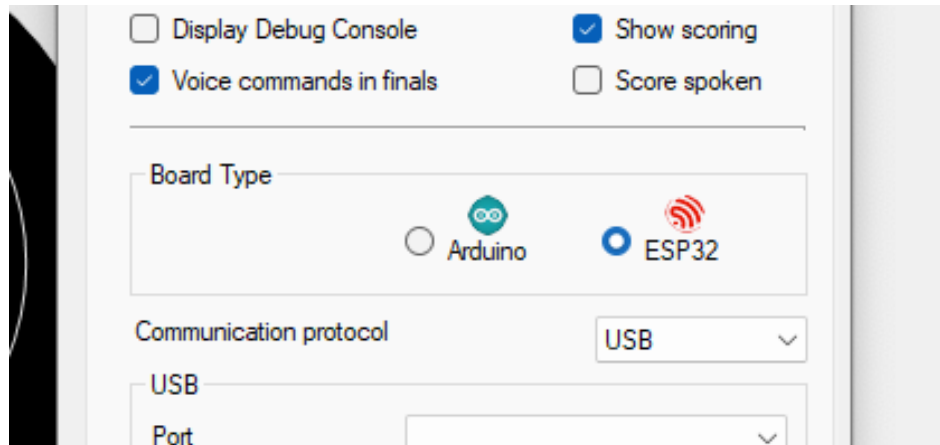

Connect to the target and select the ESP icon




You will see number scrolling.

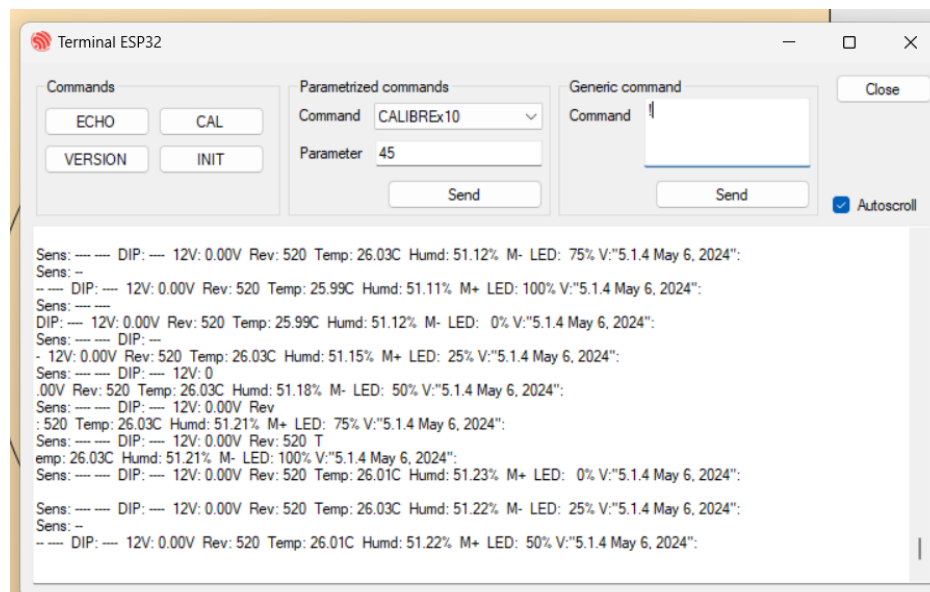

In the Command box type ! then SEND

You will be prompted to enter the serial number.

In the command box type in the serial number and !. Press SEND

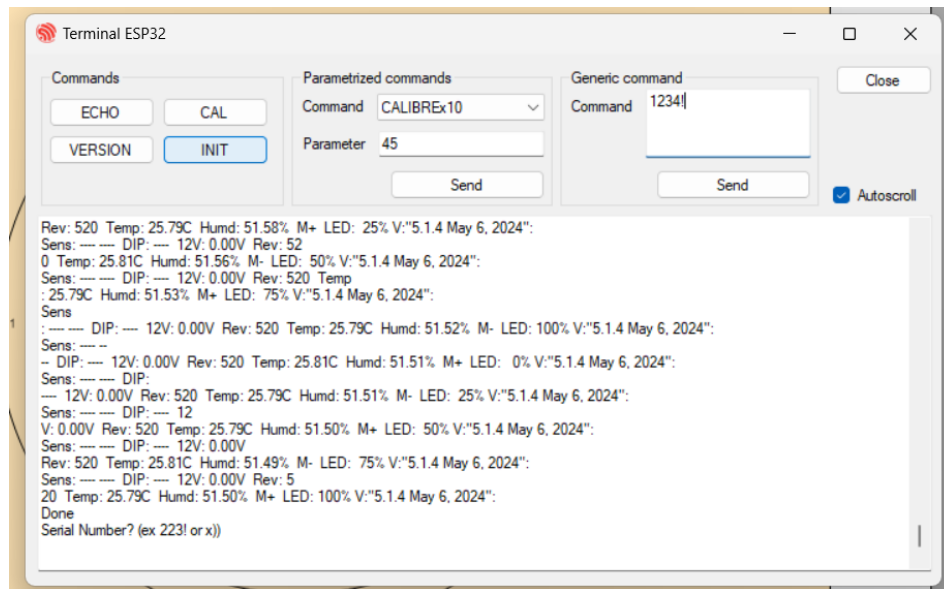

The board will reset and go into service.