


Mounting tool

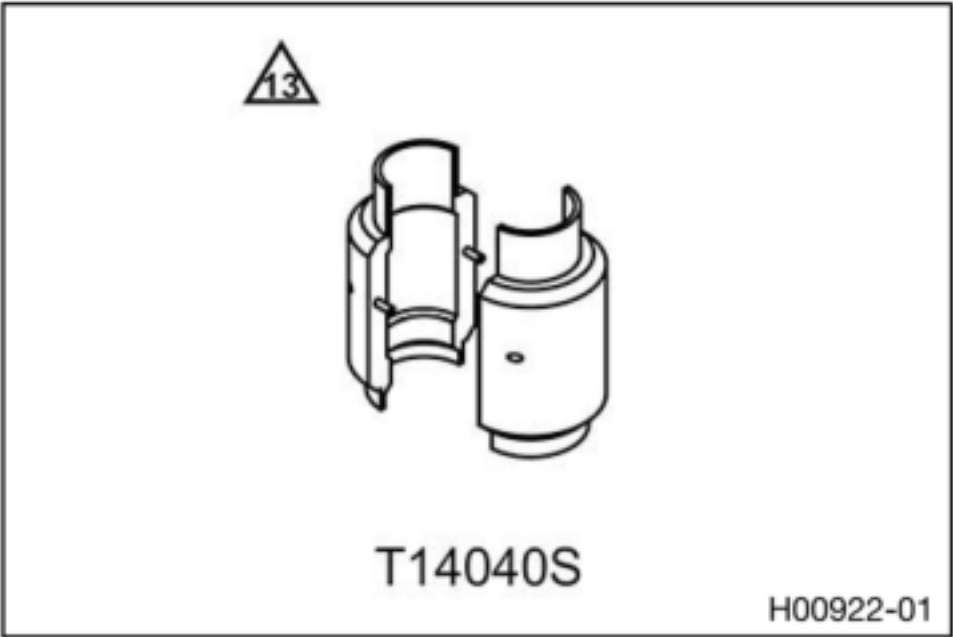


Art. no.: T14040S

Feature

Diameter	48 mm (1.89 in)
----------	-----------------

Mounting sleeve

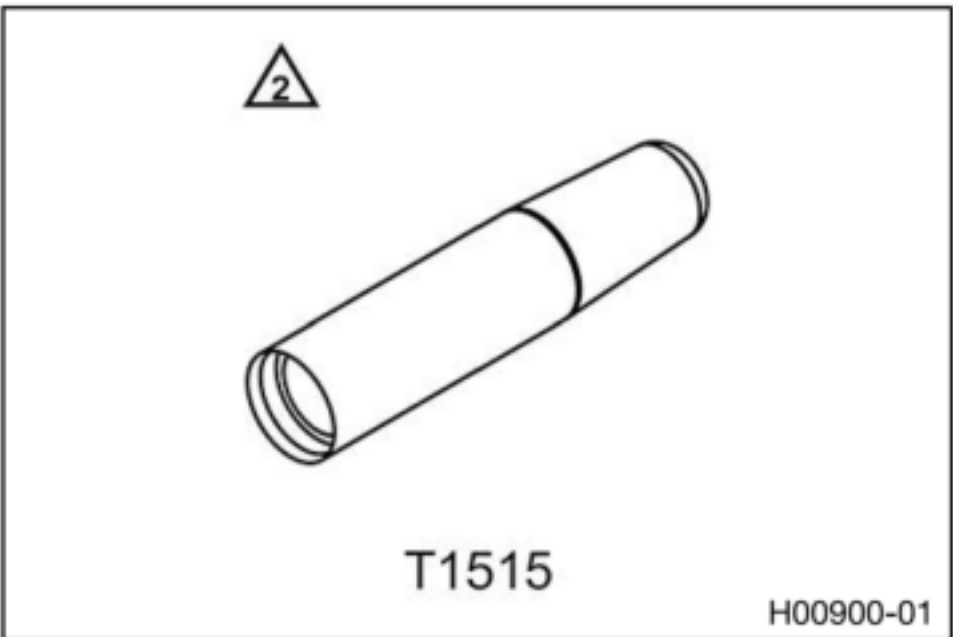


Art. no.: T1515

Feature

Diameter	18 mm (0.71 in)
----------	-----------------

Filling tool

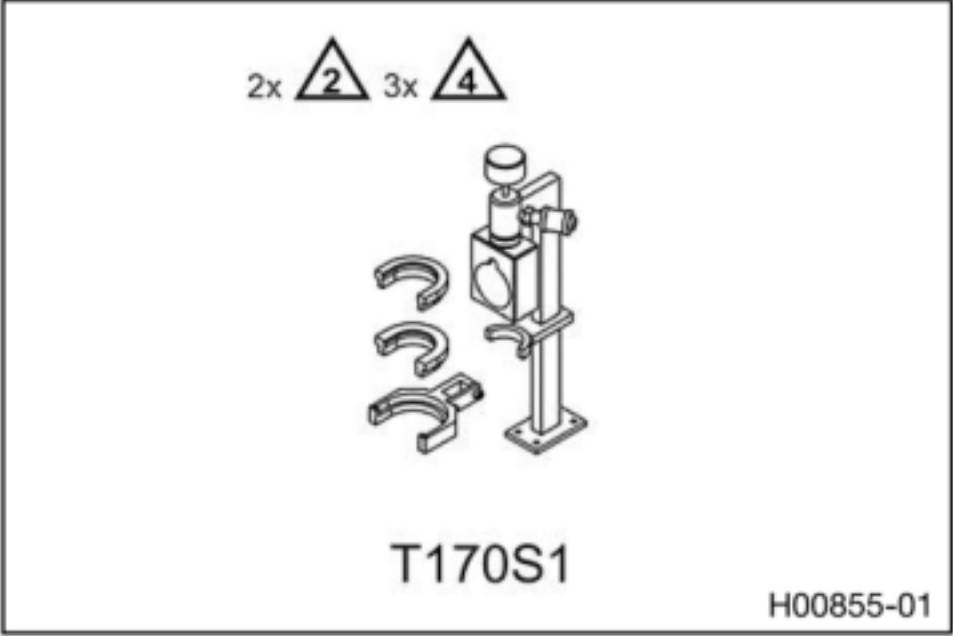

Art. no.: T170S1

JASO T903 MA2

Different technical development directions required a separate specification for motorcycles – the **JASO T903 MA2** standard.

Earlier, engine oils from the automobile industry were used for motorcycles because there was no separate motorcycle specification.

Whereas long service intervals are demanded for automobile engines, the focus for motorcycle engines is on high performance at high engine speeds.

In most motorcycle engines, the transmission and clutch are lubricated with the same oil.

The **JASO T903 MA2** standard meets these special requirements.

SAE

The SAE viscosity classes were defined by the Society of Automotive Engineers and are used for classifying oils according to their viscosity. The viscosity describes only one property of oil and says nothing about quality.

ABS	Anti-lock braking system	Safety system that prevents locking of the wheels when driving straight ahead without the influence of lateral forces
PA	Preload adjuster	Device on the suspension components that enables the adjustment of the spring preload

Art. no.	Article number
ca.	circa
cf.	compare
e.g.	for example
etc.	et cetera
i.a.	inter alia
no.	number
poss.	possibly

1

12-V battery

charging	142
connecting	142
disconnecting	141
installing	140
removing	139

A

ABS	151
------------	-----

ABS fuses

changing	148
----------	-----

Accessories	9
--------------------	---

Air filter

installing	86
removing	86

Air filter box

installing	89
removing	87

Alternator

stator winding, checking	297
--------------------------	-----

Anti-lock braking system	151
---------------------------------	-----

Assembling the engine

clutch cover, installing	249
locking lever, installing	245
oil screens, installing	266
shift drum locating, installing	246
shift shaft, installing	246
spacer and spring, installing	249
taking engine off universal mounting rack	267
thermostat, installing	263
valve cover, installing	265
water pump cover, mounting	252

Auxiliary substances	9
-----------------------------	---

B

Brake disc

front brake, changing	118
of rear brake, changing	129

Brake discs

checking	112
----------	-----

Brake fluid

front brake, adding	156
front brake, changing	157
of rear brake, adding	163
of rear brake, changing	164

Brake fluid level

front brake, checking	155
rear brake, checking	162

Brake linings

front brake, changing	153
front brake, checking	153
of rear brake, changing	159
rear brake, checking	159

C

Capacity

coolant	283, 286, 318
engine oil	184, 295, 318
fuel	318

Chain

checking	131
cleaning	135
opening	134
riveting	134

Chain guide

checking	131
setting	131

Chain tension

adjusting	130
checking	130

Changing the headlight bulb	172
------------------------------------	-----

Charging voltage

checking	144
----------	-----

Clutch

fluid level, checking/correcting	268
fluid, changing	269

Combination instrument

adjusting the kilometers or miles	167
service display, setting	168
setting the clock	167
wheel circumference, adjusting	168

Coolant

antifreeze and coolant level, checking	283
changing	285
draining	282
level, checking	284

Cooling system

filling/bleeding	282
------------------	-----

Cylinder - Nikasil® coating	213
------------------------------------	-----

D

Diagnostics connector	150
------------------------------	-----

Disassembling the engine

alternator cover, removing	187
clutch cover, removing	195
crankshaft and balancer shaft, removing	202
engine oil, draining	185
locking lever, removing	199

shift drum locating, removing	199	drive gear wheel of the balancer shaft, installing	211
spacer and spring, removing	196	drive gear wheel of the balancer shaft, removing	208
spacer, removing	187	freewheel, checking	240
spark plugs, removing	186	freewheel, removing	240
transmission shafts, removing	202	main shaft, assembling	237
valve cover, removing	186	oil pumps, checking for wear	216
Drivetrain kit		piston ring end gap, checking	216
changing	137	section of the engine case, left	205
E		section of the engine case, right	203
Engine		shift mechanism, checking	232
installing	178	valves, installing	227
removing	174	water pump impeller	207
Engine - Work on individual parts		Engine assembly	
crankshaft run-out at bearing pin, checking .	211	alternator cover, installing	265
cylinder head, checking	226	camshafts, installing	256
piston, checking/measuring	214	clutch basket, installing	247
piston/cylinder mounting clearance, determin- ing	216	clutch push rod, installing	266
shift shaft, preassembling	233	crankshaft and balancer shaft, installing . . .	243
timing chain tensioner, preparing for installa- tion	218	crankshaft speed sensor distance, adjusting	251
valve spring retainer, checking	226	crankshaft speed sensor, installing	250
valve springs, checking	226	cylinder head, installing	255
valves, checking	225	engine, setting to top dead center	252
Engine – work on the individual parts		gear position sensor, installing	264
axial clearance of crankshaft and balancer shaft, measuring	212	left engine case, installing	243
cam lever and rocker arm, installing	228	oil filter, installing	263
camshaft bearing and balancer shaft bearing, changing	221	oil pumps, installing	244
clutch cover	207	piston, installing	253
connecting rod, conrod bearing, and crank pin, changing	208	primary gear wheel, installing	247
crankshaft bearing inner race, installing . . .	212	resonator, installing	267
crankshaft bearing inner race, removing . . .	208	rotor, installing	251
cylinder - Nikasil ® coating	213	spacer, installing	264
freewheel, installing	241	spark plugs, installing	266
main shaft, disassembling	234	starter drive, installing	246
starter drive, checking	239	starter motor, installing	266
timing assembly, checking	219	timing chain rails, installing	250
transmission, checking	235	timing chain tensioner, installing	258
valves, removing	225	transmission shafts, installing	241
Engine – working on the individual parts		valve clearance, adjusting	260
antihopping clutch, disassembling	229	valve clearance, checking	259
antihopping clutch, preassembling	231	Engine disassembly	
cam lever and rocker arm, demounting	220	camshafts, removing	190
clutch, checking	229	clutch basket, removing	196
countershaft, assembling	238	clutch push rod, removing	186
countershaft, disassembling	235	crankshaft speed sensor, removing	195
cylinder, checking/measuring	213	cylinder head, removing	191
		engine, clamping into the engine assembly stand	184
		engine, positioning at ignition top dead center	189
		gear position sensor, removing	187

- left engine case, removing 201
- oil filter, removing 188
- oil pumps, removing 200
- piston, removing 192
- primary gear wheel, removing 198
- resonator, removing 185
- rotor, removing 194
- shift shaft, removing 199
- starter drive, removing 198
- starter motor, removing 186
- thermostat, removing 188
- timing chain tensioner, removing 189
- timing chain, removing 194
- water pump impeller, removing 193
- Engine electronics control unit**
 - resetting 311
- Engine number** 11
- Engine oil**
 - adding 296
 - changing 293
- Engine oil level**
 - checking 290
- Engine sprocket**
 - checking 131
- F**
- Figures** 9
- Foot brake lever**
 - basic position, adjusting 162
 - free travel, checking 161
- Fork**
 - compression damping, adjusting 18
 - dust boots, cleaning 19
 - rebound, adjusting 18
- Fork bearing**
 - changing 78
 - checking 75
- Fork legs**
 - assembling 26
 - checking 25
 - disassembling 22
 - installing 21
 - removing 20
- Fork part number** 12
- Fork protector**
 - installing 20
 - removing 20
- Frame**
 - checking 44
- Front fender**
 - installing 109
 - removing 109
- Front wheel**
 - installing 116-117
 - removing 114-115
- Fuel filter**
 - changing 101
- Fuel pressure**
 - checking 98
- Fuel pump**
 - changing 105
- Fuel screen**
 - changing 100
- Fuel tank filler cap**
 - closing 92
 - opening 92
- Fuel, oils, etc.** 9
- Fuse**
 - individual power consumers, changing 147
- G**
- Gear position sensor**
 - changing 279
 - programming 281
- H**
- Hand brake lever**
 - basic position, adjusting 155
- Handlebar position** 38
 - adjusting 38
- Headlight**
 - light range, adjusting 170
 - setting, checking 169
- Headlight mask with headlight**
 - installing 171
 - removing 170
- Heim joint**
 - checking 51
- I**
- Ignition coil**
 - primary winding, checking 300
- Implied warranty** 9
- Initialization run**
 - performing 311
- K**
- Key number** 11

L

Link fork

checking	75
installing	77
removing	76

Lower triple clamp

installing	34
removing	33

M

Main fuse

changing	146
----------	-----

Main silencer

installing	85
removing	84

Manifold

installing	83
removing	82

Manufacturer warranty

	9
--	---

Motorcycle

cleaning	324
lifting with front lifting gear	13
raising with the rear lifting gear	13
removing from work stand	15
removing the rear from the wheel stand	13
taking off front lifting gear	14
work stand, raising with	14

O

Oil circuit

	288
--	-----

Oil filter

changing	293
----------	-----

Oil nozzle for clutch lubrication

checking/cleaning	289
-------------------	-----

Oil pressure

checking	290
----------	-----

Oil screens

cleaning	293
----------	-----

P

Parking light bulb

changing	172
----------	-----

Preparing for use

after storage	328
---------------	-----

R

Rear fairing

installing	97
removing	96

Rear hub damping rubber pieces

checking	136
----------	-----

Rear sprocket

checking	131
----------	-----

Rear sprocket carrier

changing the bearing	128
----------------------	-----

Rear wheel

installing	122, 124
removing	120-121

Riding sag

adjusting	50
-----------	----

Rim run-out

checking	113
----------	-----

S

Seat

mounting	93
removing	93

Service schedule

	329-331
--	---------

Servicing the shock absorber

	60
--	----

Shock absorber

damper, assembling	67
damper, bleeding and filling	70
damper, checking	63
damper, disassembling	61
damper, filling with nitrogen	73
heim joint, changing	55
heim joint, installing	65
heim joint, removing	64
high-speed compression damping, adjusting	45
installing	53
low-speed compression damping, adjusting	46
piston rod, assembling	66
piston rod, disassembling	62
rebound damping, adjusting	47
removing	52
riding sag, checking	49
shock absorber, servicing	60
silent block, changing	57
spring preload, adjusting	49
spring, installing	74
spring, removing	60
static sag, checking	48

Shock absorber article number

	12
--	----

Shock absorber linkage

checking	57
----------	----

Side cover

mounting	94
removing	93

Side cover, rear left

- installing 96
- removing 95

Side cover, rear right

- installing 95
- removing 94

Spare parts 9

Spark plugs

- changing 301

Spoke tension

- checking 112

Starting 15

- for checking the function 17

Steering head bearing

- changing 36

Steering head bearing play

- adjusting 32
- checking 31

Storage 327

T

Technical data

- capacities 318
- chassis 318
- chassis tightening torques 321
- electrical system 319
- engine 313
- engine tightening torques 315
- engine tolerance, wear limits 314
- fork 319
- shock absorber 320
- tires 319

Throttle grip

- changing 39

Tire condition

- checking 110

Tire pressure

- checking 110

Turn signal bulb

- changing 173

Type label 10

V

Valve clearance

- adjusting 308
- checking 303

Vehicle identification number 10

W

Wheel bearing

- checking 111
- of front wheel, changing 119
- of the rear wheel, changing 126

Winter operation

- checks and maintenance steps 325

Wiring diagram 332-375

- Page 01 of 11 332, 354
- Page 02 of 11 334, 356
- Page 03 of 11 336, 358
- Page 04 of 11 338, 360
- Page 05 of 11 340, 362
- Page 06 of 11 342, 364
- Page 07 of 11 344, 366
- Page 08 of 11 346, 368
- Page 09 of 11 348, 370
- Page 10 of 11 350, 372
- Page 11 of 11 352, 374

Work rules 8

PIONEERING SINCE 1903



3403093en

08/2018



Husqvarna Motorcycles GmbH
Stallhofnerstraße 3 | 5230 Mattighofen | Austria
www.husqvarna-motorcycles.com



Photo: Mitterbauer,
Husqvarna Motorcycles GmbH