



Components:

A11	Engine electronics control unit
B13	Ambient air pressure sensor
B26	Rollover sensor
B30	Side stand sensor
B34	Gear position sensor
B41	Induction manifold pressure sensor cylinder 1

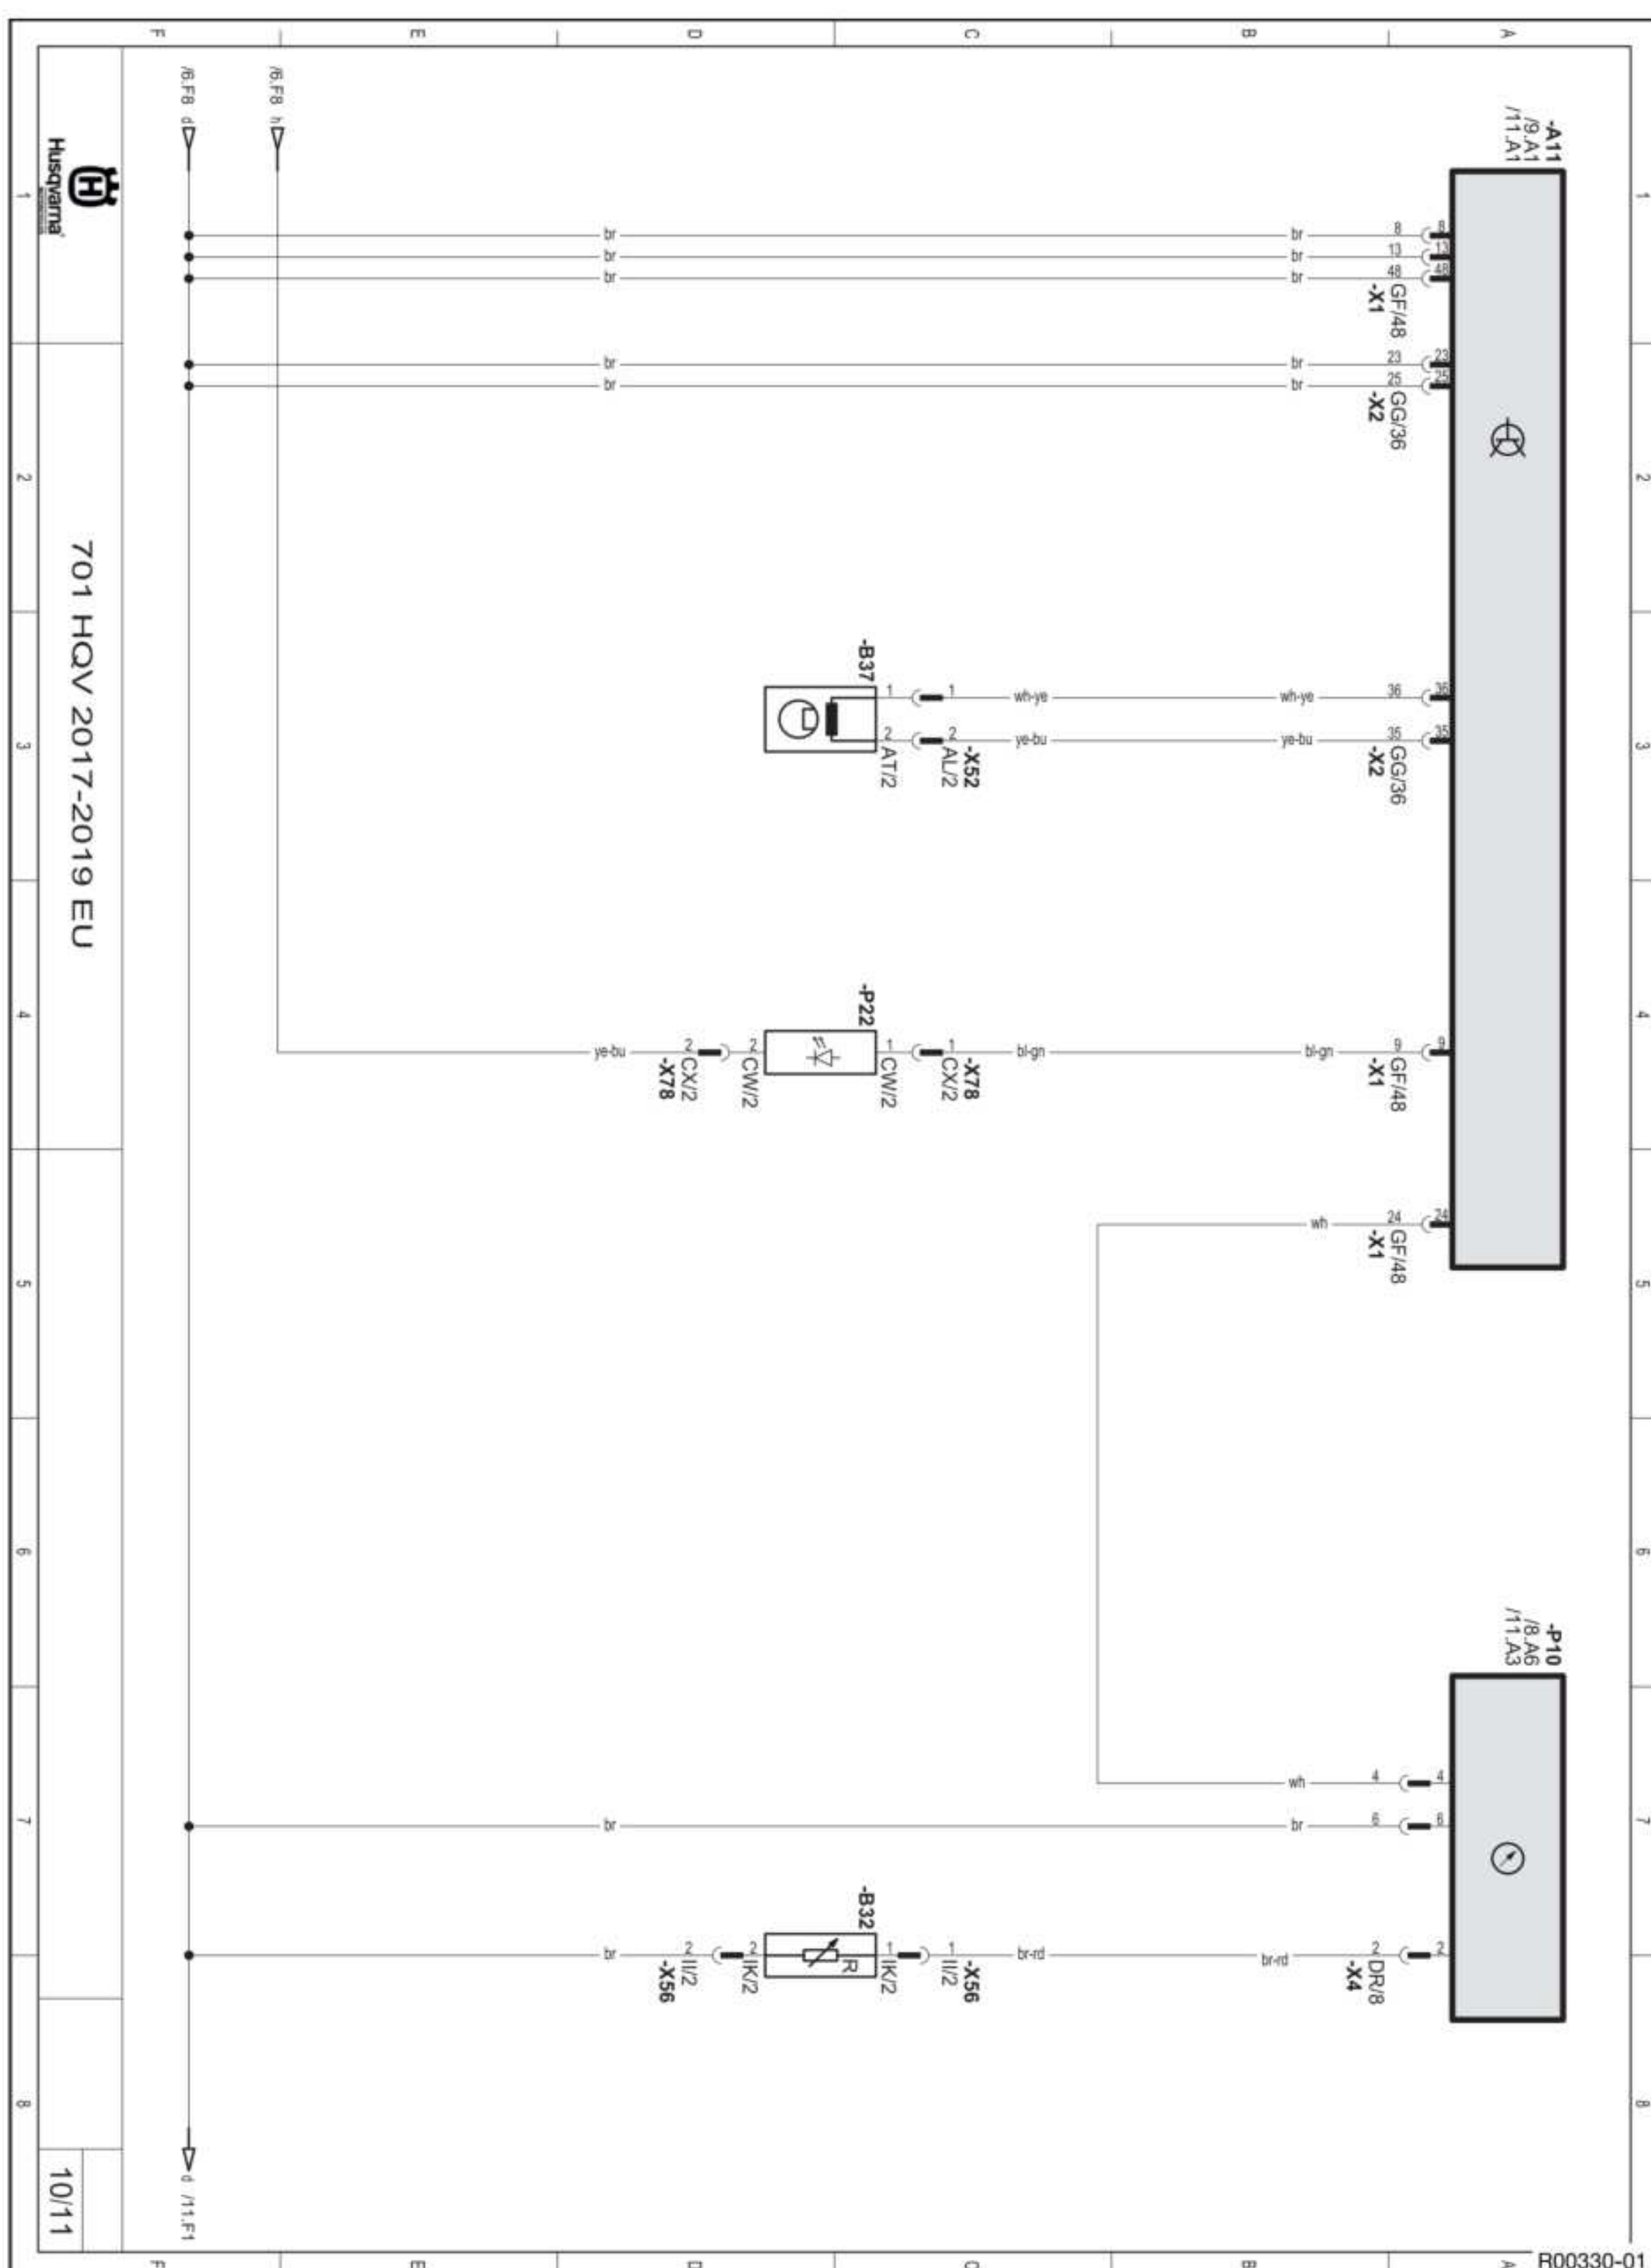

Components:

A11	Engine electronics control unit
B32	Fuel level sensor
B37	Crankshaft speed sensor
P10	Combination instrument
P22	Idle indicator lamp

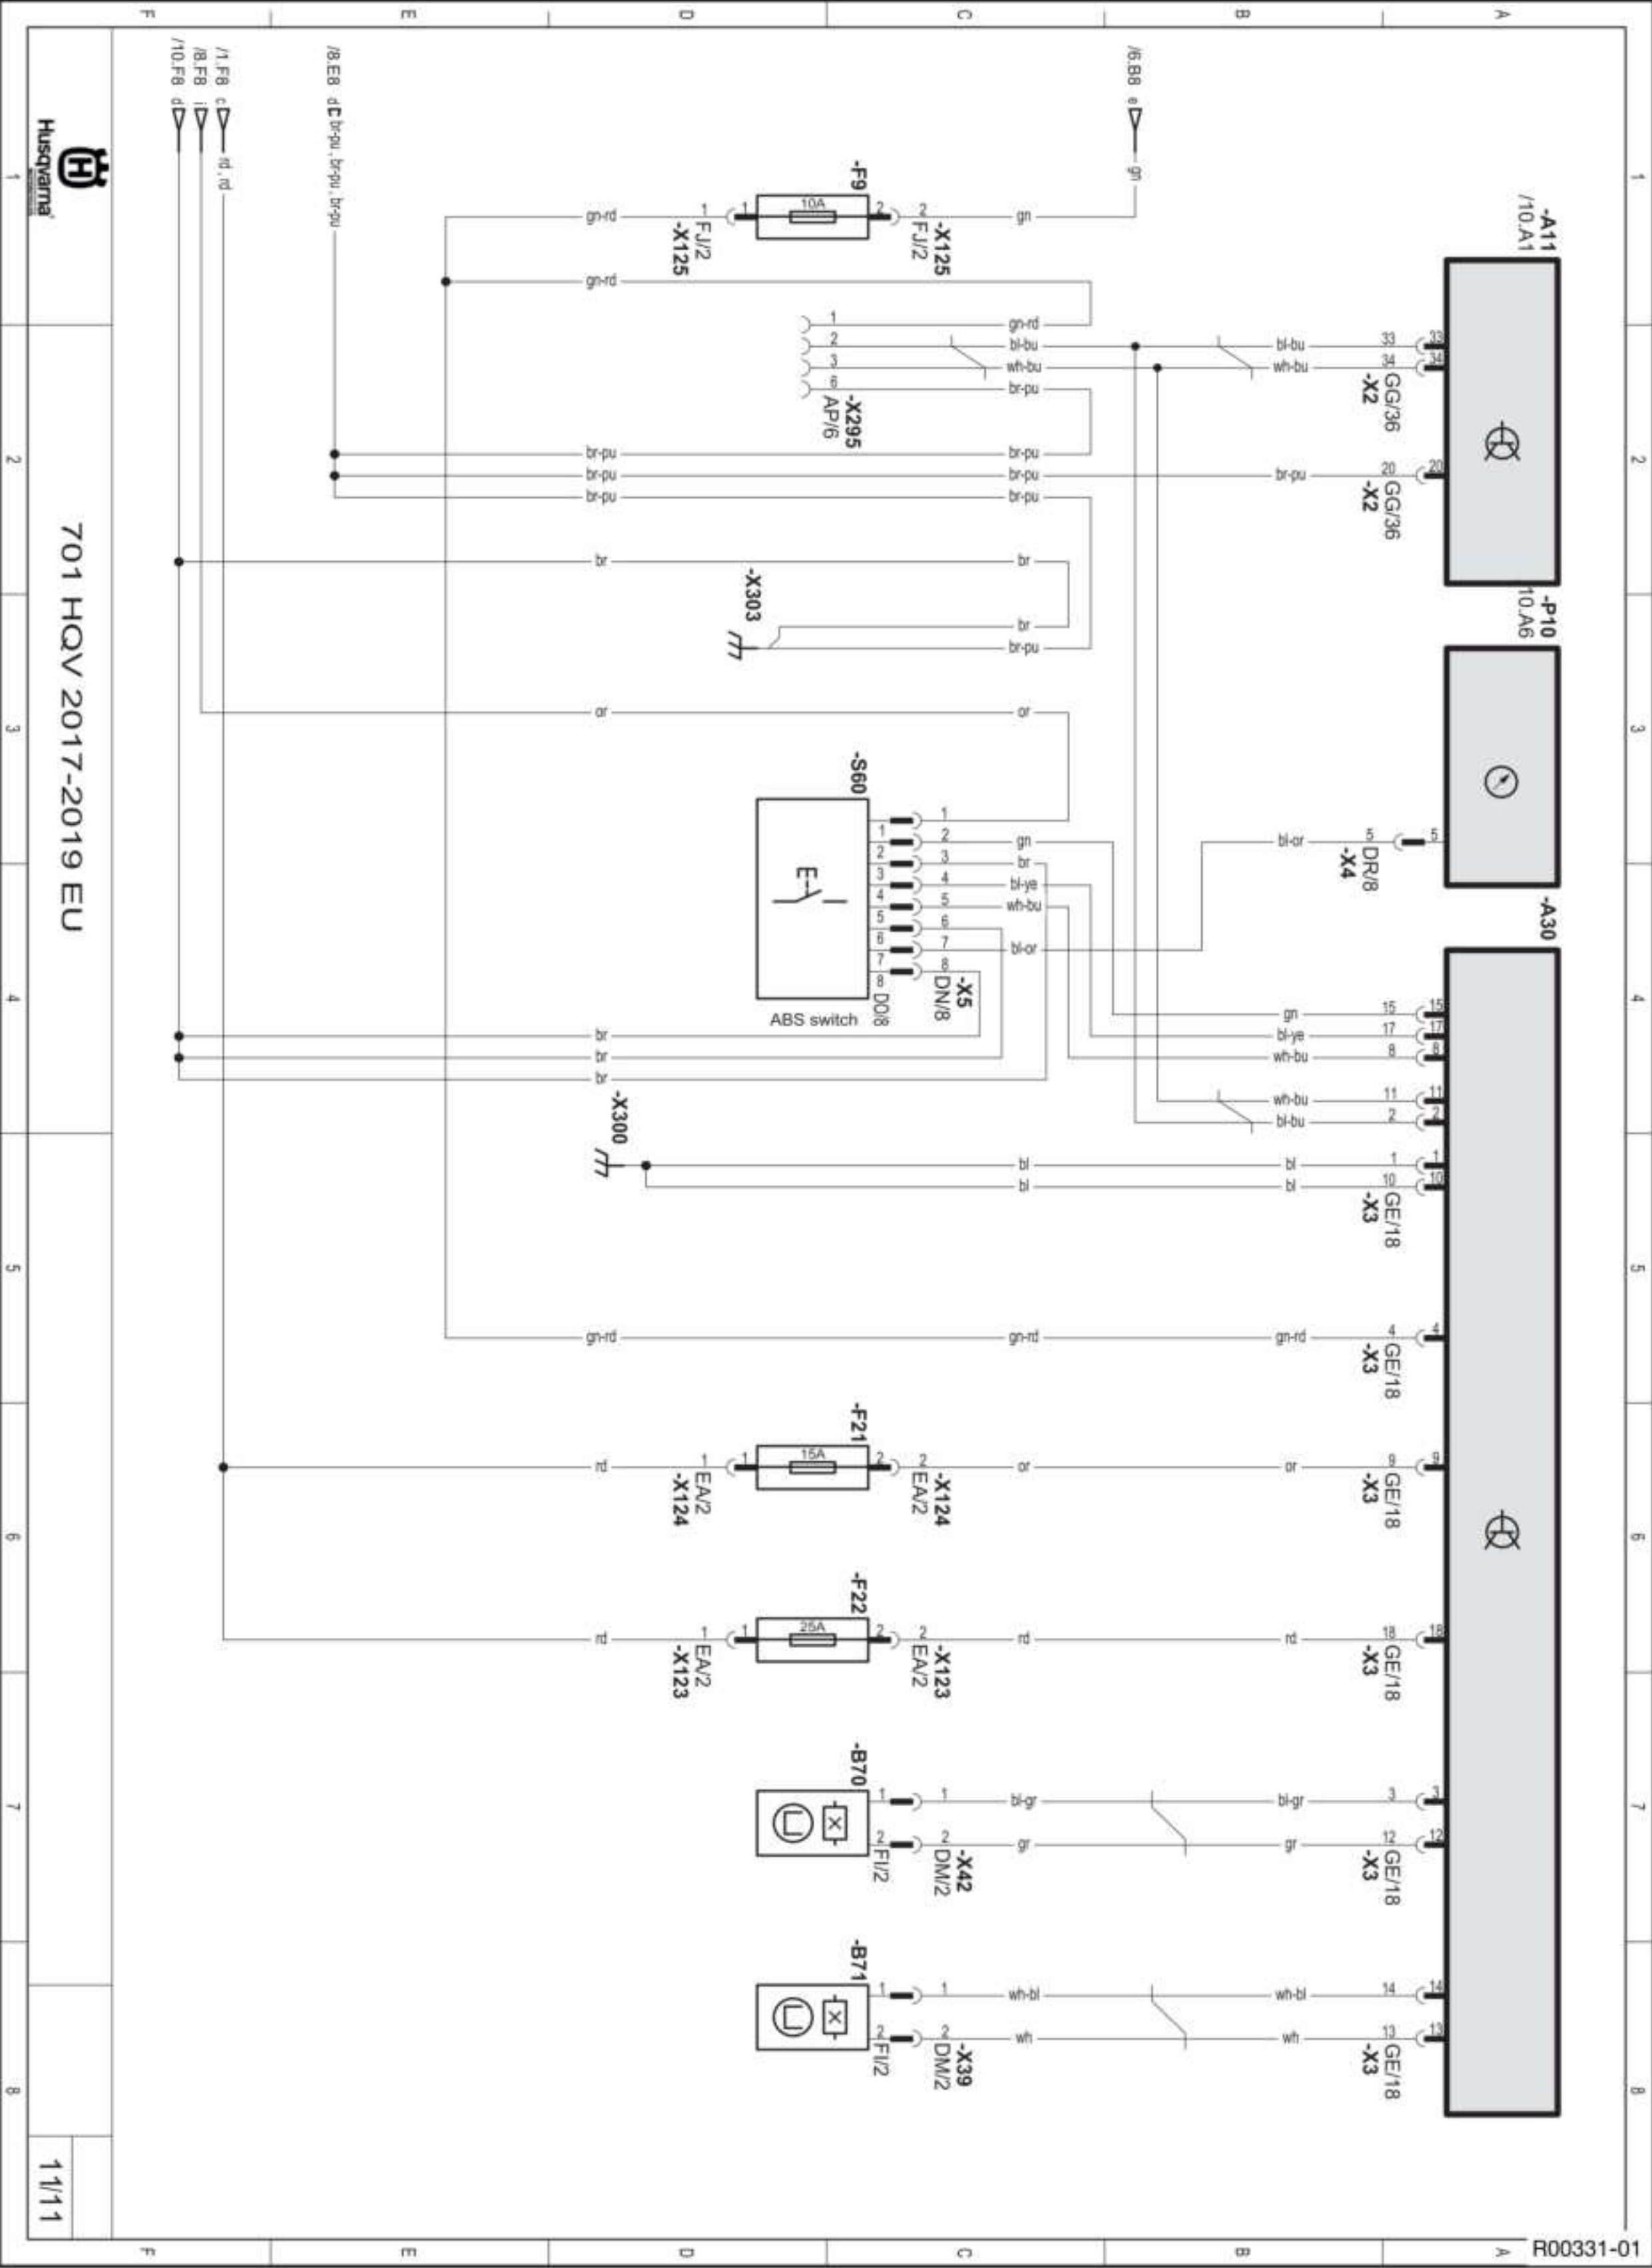


Components:

A11	Engine electronics control unit
A30	ABS control unit
B70	Front wheel speed sensor
B71	Rear wheel speed sensor
F9	Fuse
F21	ABS fuse
F22	ABS fuse
P10	Combination instrument
S60	ABS switch
X295	Diagnostics connector


Cable colors:

bl	Black
br	Brown
bu	Blue
gn	Green
gr	Gray
lbu	Light blue
or	Orange
pk	Pink
pu	Violet
rd	Red
wh	White
ye	Yellow

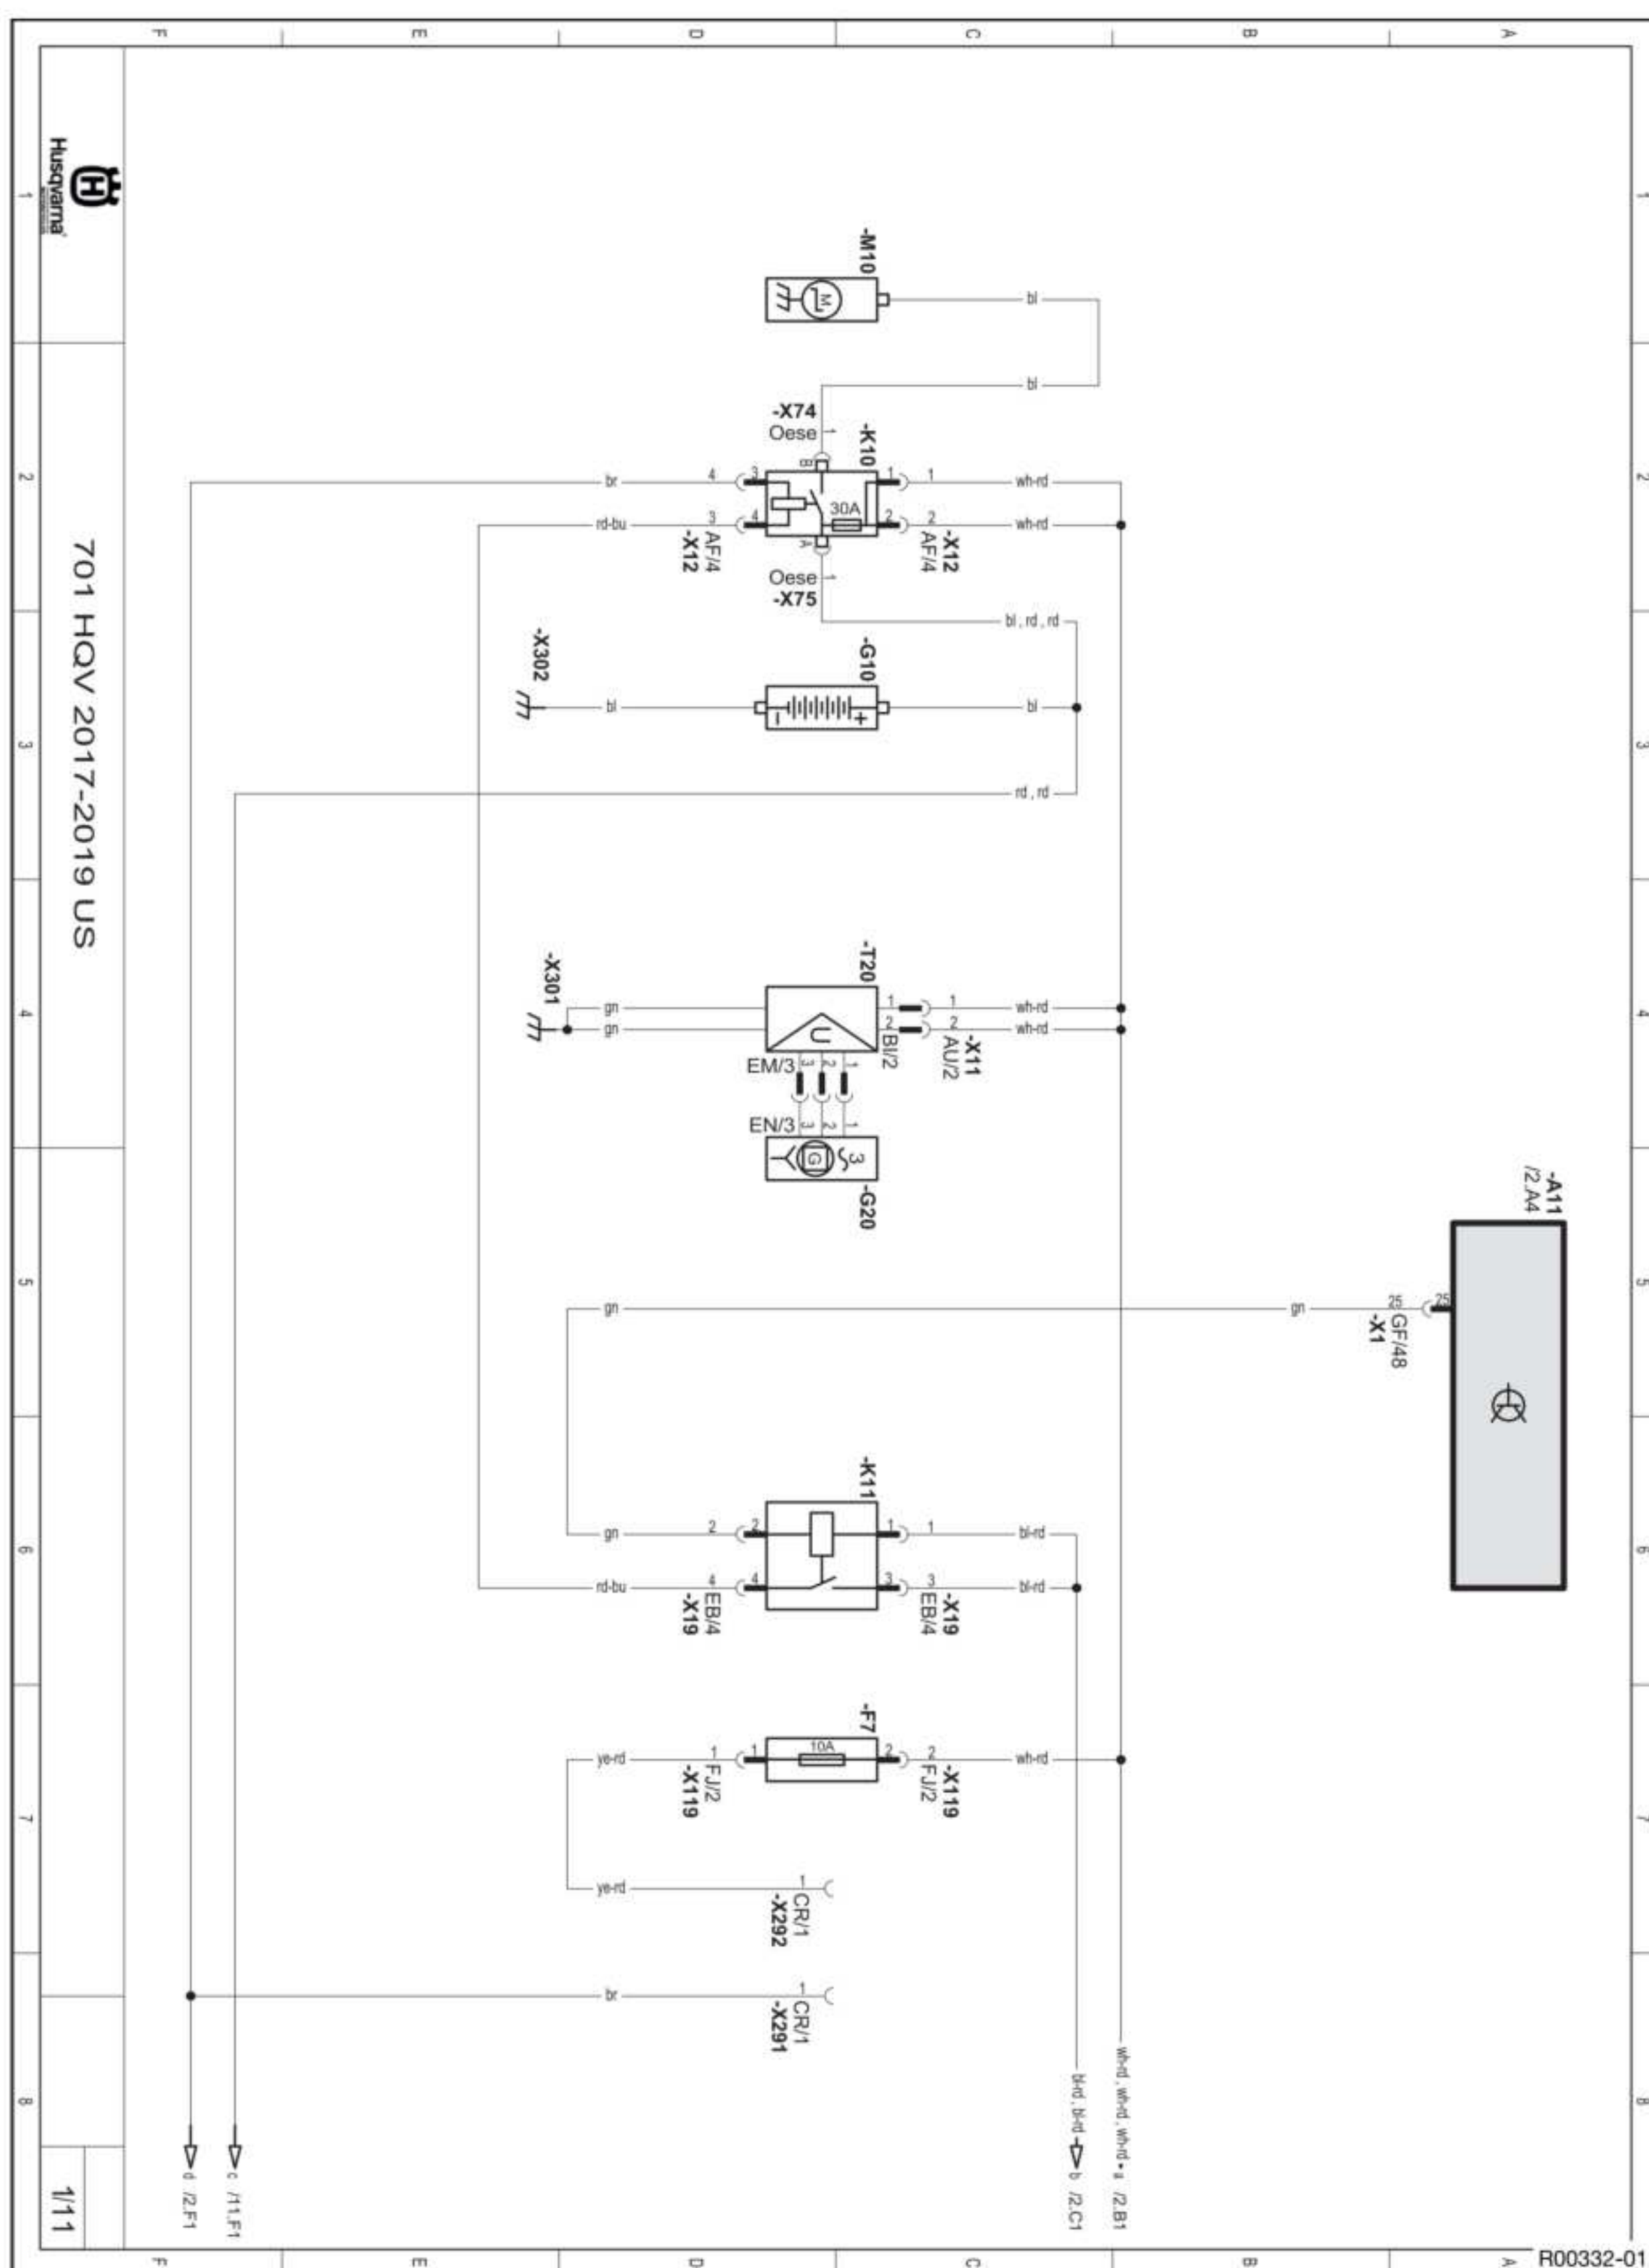

Components:

A11	Engine electronics control unit
F7	Fuse
G10	12-V battery
G20	Alternator
K10	Starter relay with main fuse
K11	Start auxiliary relay
M10	Electric starter system
T20	Voltage regulator
X291	Connector for accessory ground (terminal 31) ACC 1 (not assigned)
X292	Connector for accessory plus (terminal 30) ACC 1 (not assigned)

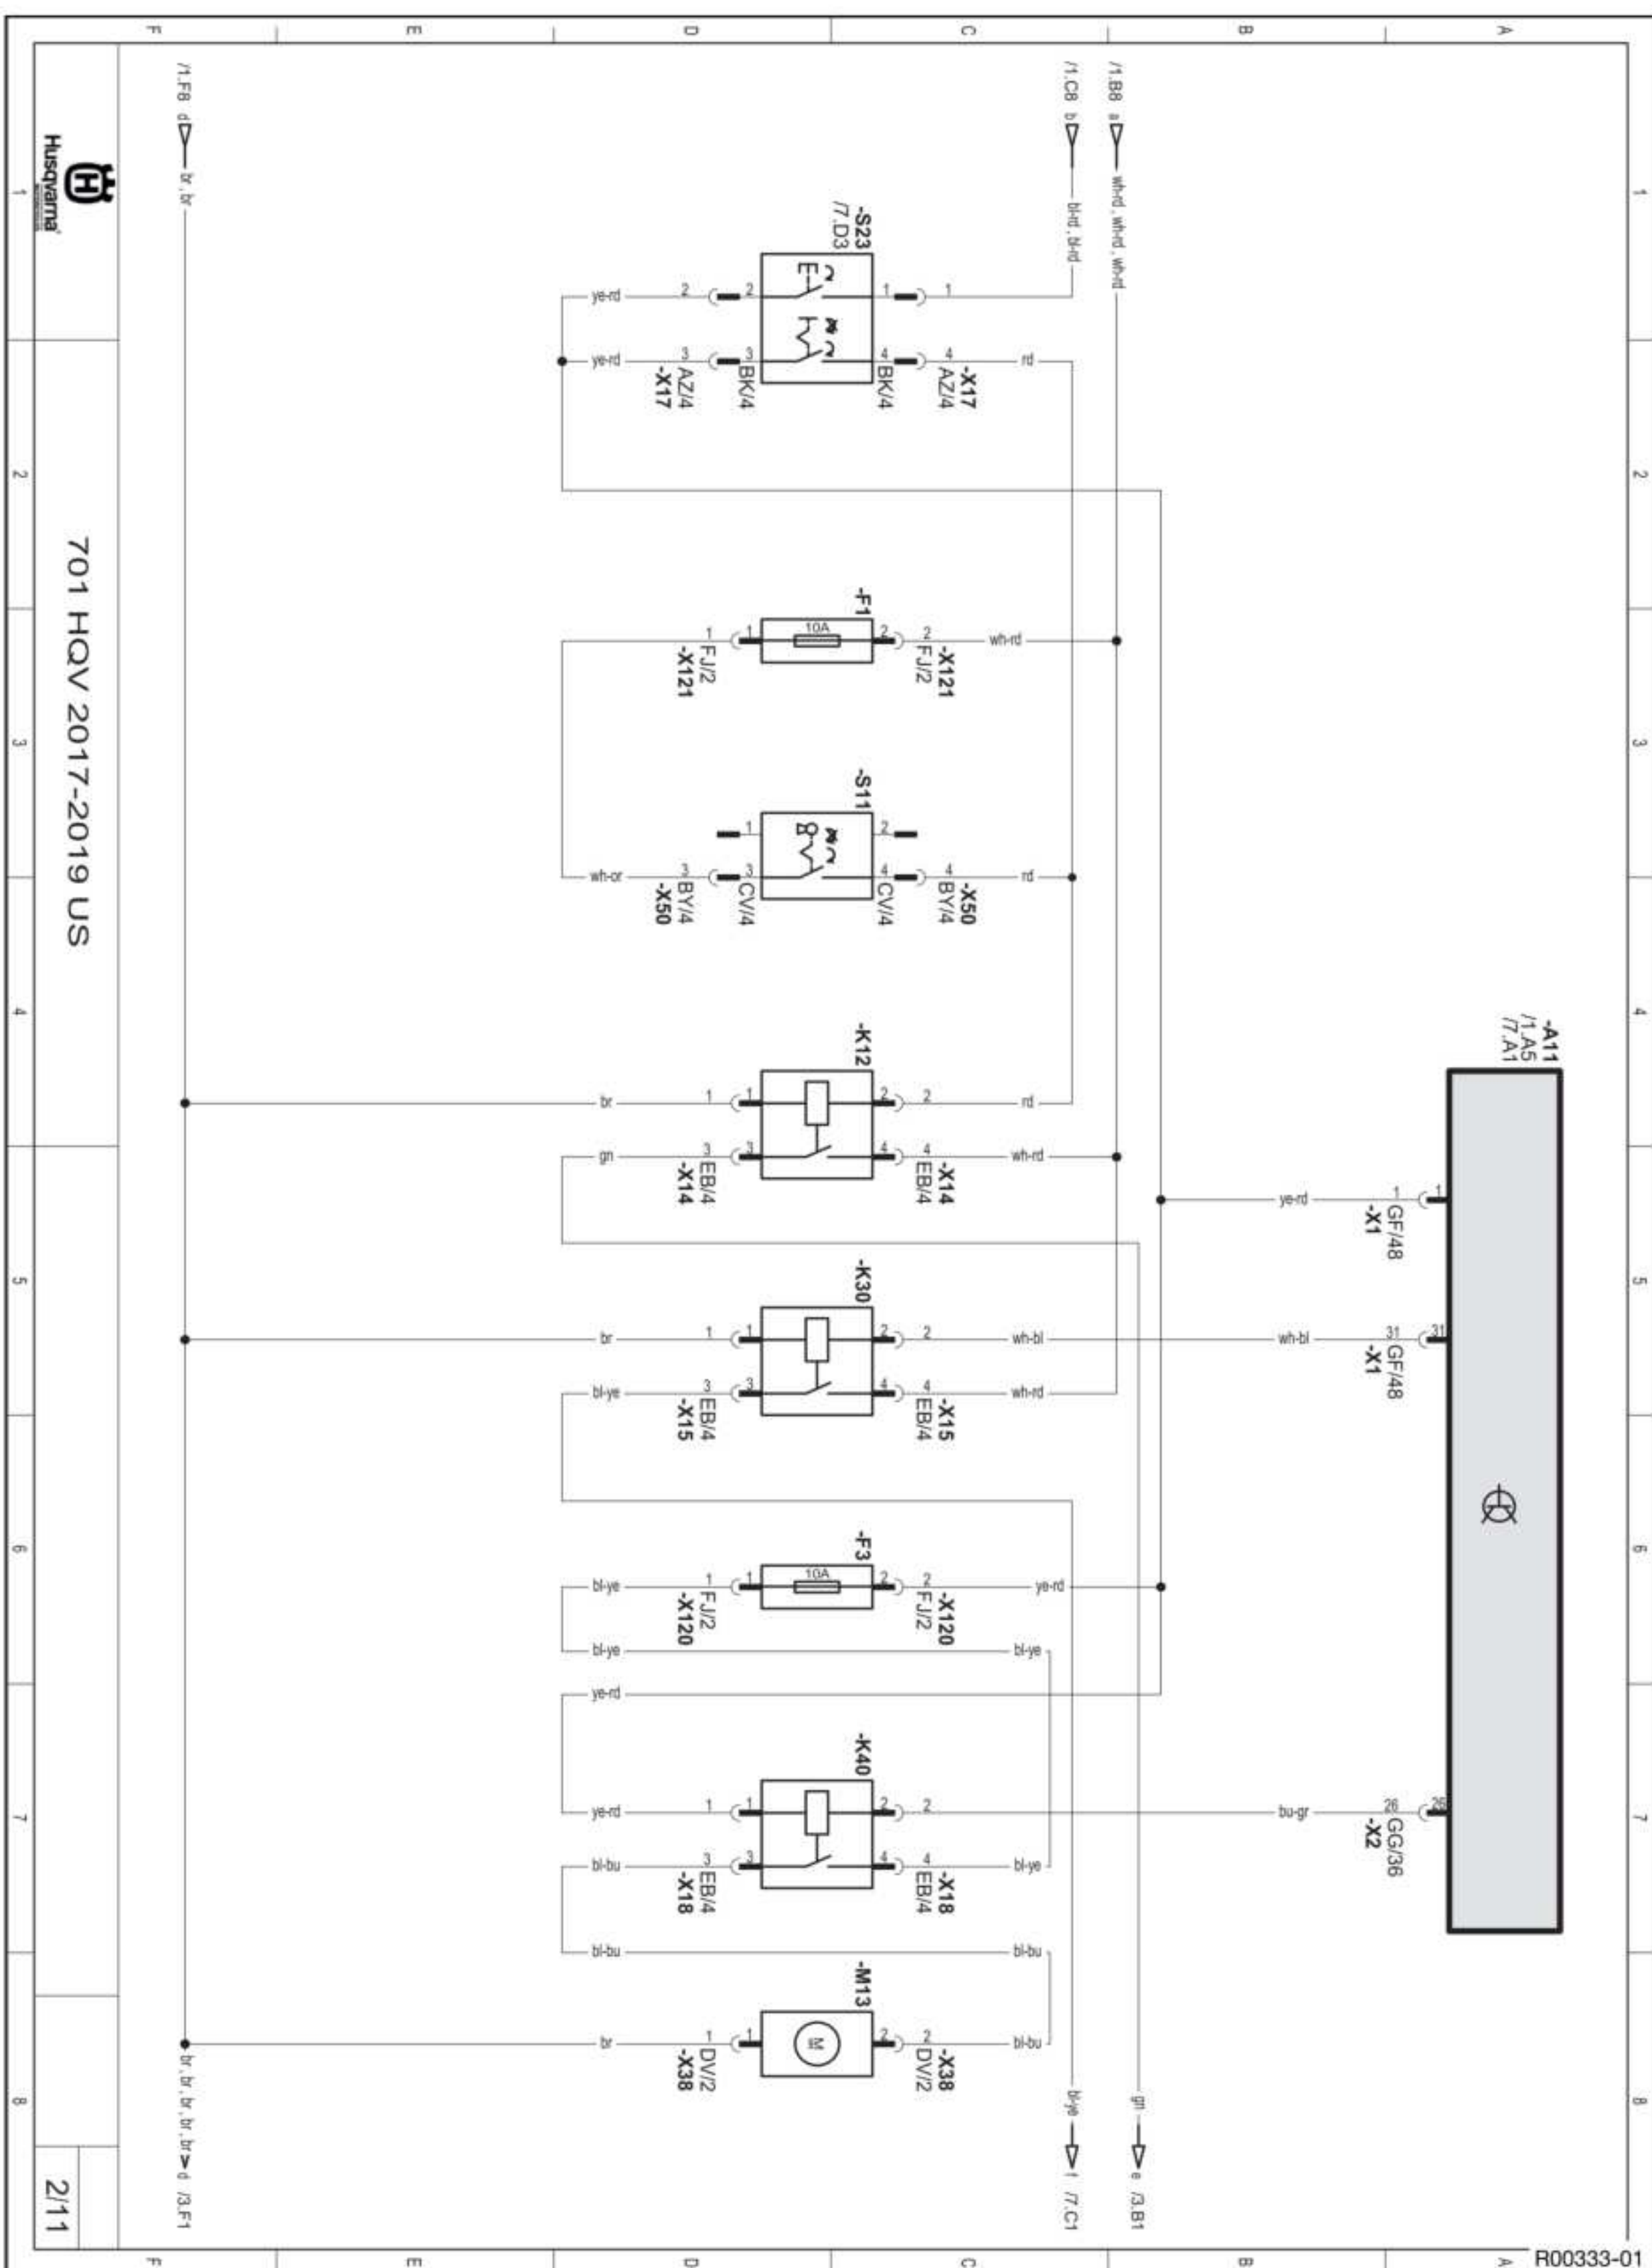

Components:

A11	Engine electronics control unit
F1	Fuse
F3	Fuse
K12	Light relay
K30	Power relay
K40	Fuel pump relay
M13	Fuel pump
S11	Ignition and steering lock
S23	Emergency OFF switch, tip switch

