

REPAIR MANUAL 2019



701 Supermoto

Art. no. 3403093en

Read this repair manual carefully and thoroughly before beginning work.

The vehicle will only be able to meet the demands placed on it if the specified service work is performed regularly and properly.

This repair manual was written to correspond to the latest state of this model series. We reserve the right to make changes in the interest of technical advancement without updating this repair manual at the same time. We shall not provide a description of general workshop methods. Likewise, safety rules that apply in a workshop are not specified here. It is assumed that the repair work will be performed by a fully trained mechanic.

All specifications are non-binding. Husqvarna Motorcycles GmbH specifically reserves the right to modify or delete technical specifications, prices, colors, forms, materials, services, designs, equipment, etc., without prior notice and without specifying reasons, to adapt these to local conditions, as well as to stop production of a particular model without prior notice. Husqvarna accepts no liability for delivery options, deviations from figures and descriptions, as well as misprints and other errors. The models portrayed partly contain special equipment that does not belong to the regular scope of supply.

© 2018 Husqvarna Motorcycles GmbH, Mattighofen Austria

All rights reserved

Reproduction, even in part, as well as copying of all kinds, is permitted only with the express written permission of the copyright owner.



REG.NO. 12 100 6061

ISO 9001(12 100 6061)

Husqvarna Motorcycles applies quality assurance processes that lead to the highest possible product quality as defined in the ISO 9001 international quality management standard.

Issued by: TÜV-Management Service

Husqvarna Motorcycles GmbH
Stallhofnerstraße 3
5230 Mattighofen, Austria

This document is valid for the following models:

701 SUPERMOTO EU (F2603S3)

701 SUPERMOTO US (F2675S3)



TABLE OF CONTENTS

1	MEANS OF REPRESENTATION.....	7	6.8	Disassembling the fork legs.....	22
1.1	Symbols used	7	6.9	Checking the fork legs	25
1.2	Formats used	7	6.10	Assembling the fork legs	26
2	SAFETY ADVICE	8	6.11	Checking steering head bearing play	31
2.1	Repair Manual.....	8	6.12	Adjusting steering head bearing play	32
2.2	Safety advice	8	6.13	Removing the lower triple clamp	33
2.3	Degrees of risk and symbols	8	6.14	Installing the lower triple clamp	34
2.4	Work rules.....	8	6.15	Changing the steering head bearing	36
3	IMPORTANT NOTES	9	7	HANDLEBAR, CONTROLS.....	38
3.1	Manufacturer and implied warranty	9	7.1	Handlebar position.....	38
3.2	Fuel, auxiliary substances.....	9	7.2	Adjusting the handlebar position	38
3.3	Spare parts, accessories	9	7.3	Changing the throttle grip	39
3.4	Figures	9	8	FRAME	44
4	SERIAL NUMBERS.....	10	8.1	Checking the frame.....	44
4.1	Vehicle identification number.....	10	9	SHOCK ABSORBER, LINK FORK.....	45
4.2	Type label.....	10	9.1	Adjusting the high-speed compression damping of the shock absorber.....	45
4.3	Engine number	11	9.2	Adjusting the low-speed compression damping of the shock absorber.....	46
4.4	Key number.....	11	9.3	Adjusting the rebound damping of the shock absorber	47
4.5	Fork part number	12	9.4	Measuring the rear wheel dimension unloaded	47
4.6	Shock absorber article number	12	9.5	Checking the static sag of the shock absorber	48
5	MOTORCYCLE.....	13	9.6	Checking the riding sag of the shock absorber	49
5.1	Raising the motorcycle with the rear lifting gear	13	9.7	Adjusting the spring preload of the shock absorber	49
5.2	Removing the rear of the motorcycle from the wheel stand	13	9.8	Adjusting the riding sag	50
5.3	Lifting the motorcycle with the front lifting gear	13	9.9	Checking the heim joint for play	51
5.4	Taking the motorcycle off the front lifting gear	14	9.10	Removing the shock absorber.....	52
5.5	Raising the motorcycle with the work stand	14	9.11	Installing the shock absorber.....	53
5.6	Removing the motorcycle from the work stand	15	9.12	Changing the heim joint.....	55
5.7	Starting the vehicle	15	9.13	Changing silent block	57
5.8	Starting the motorcycle to check the function	17	9.14	Checking the shock absorber linkage.....	57
6	FORK, TRIPLE CLAMP	18	9.15	Servicing the shock absorber	60
6.1	Adjusting the compression damping of the fork.....	18	9.16	Removing the spring.....	60
6.2	Adjusting the rebound damping of the fork.....	18	9.17	Disassembling the damper	61
6.3	Cleaning the dust boots of the fork legs	19	9.18	Disassembling the piston rod	62
6.4	Removing the fork protector.....	20	9.19	Checking the damper	63
6.5	Installing the fork protector.....	20	9.20	Removing the heim joint	64
6.6	Removing the fork legs	20	9.21	Installing the heim joint	65
6.7	Installing the fork legs	21	9.22	Assembling the piston rod	66

9.23	Assembling the damper.....	67	14.5	Checking spoke tension	112
9.24	Bleeding and filling the damper	70	14.6	Checking the rim run-out.....	113
9.25	Filling the damper with nitrogen	73	14.7	Front wheel	114
9.26	Installing the spring.....	74	14.7.1	Removing the front wheel using work stand.....	114
9.27	Checking the link fork	75	14.7.2	Removing the front wheel	115
9.28	Checking the fork bearing for play.....	75	14.7.3	Installing the front wheel using a work stand.....	116
9.29	Removing the link fork	76	14.7.4	Installing the front wheel	117
9.30	Installing the link fork	77	14.7.5	Changing the front brake disc.....	118
9.31	Changing the fork bearing	78	14.7.6	Changing the front wheel bearing	119
10	EXHAUST SYSTEM.....	82	14.8	Rear wheel	120
10.1	Removing the manifold.....	82	14.8.1	Removing the rear wheel using a work stand.....	120
10.2	Installing the manifold.....	83	14.8.2	Removing the rear wheel.....	121
10.3	Removing the main silencer.....	84	14.8.3	Removing the rear wheel using a work stand.....	122
10.4	Installing the main silencer.....	85	14.8.4	Installing the rear wheel.....	124
11	AIR FILTER	86	14.8.5	Changing the rear wheel bearing	126
11.1	Removing the air filter	86	14.8.6	Changing the bearing of the rear sprocket carrier	128
11.2	Installing the air filter	86	14.8.7	Changing the rear brake disc	129
11.3	Removing the air filter box.....	87	14.8.8	Checking the chain tension.....	130
11.4	Installing the air filter box.....	89	14.8.9	Adjusting the chain tension.....	130
11.5	Change the air filter. Clean the air filter box.	91	14.8.10	Adjusting the chain guide.....	131
12	FUEL TANK, SEAT, TRIM.....	92	14.8.11	Checking the chain, rear sprocket, engine sprocket, and chain guide.....	131
12.1	Opening fuel tank filler cap	92	14.8.12	Opening the chain	134
12.2	Closing the fuel tank filler cap.....	92	14.8.13	Riveting the chain.....	134
12.3	Removing the seat	93	14.8.14	Cleaning the chain.....	135
12.4	Mounting the seat.....	93	14.8.15	Checking the rear hub damping rubber pieces	136
12.5	Take off the side cover	93	14.8.16	Changing the drivetrain kit	137
12.6	Mounting the side cover	94	15	WIRING HARNESS, BATTERY	139
12.7	Removing the rear right side cover.....	94	15.1	Removing the 12-V battery	139
12.8	Installing the rear right side cover.....	95	15.2	Installing the 12-V battery.....	140
12.9	Removing the rear left side cover	95	15.3	Disconnecting the 12-V battery	141
12.10	Installing the rear left side cover	96	15.4	Connecting the 12-V battery.....	142
12.11	Removing the rear fairing.....	96	15.5	Charging the 12-V battery	142
12.12	Fitting the rear fairing	97	15.6	Checking the charging voltage	144
12.13	Checking the fuel pressure	98	15.7	Checking the open-circuit current	145
12.14	Changing the fuel screen.....	100	15.8	Changing the main fuse	146
12.15	Changing the fuel filter.....	101	15.9	Changing the fuses of individual power consumers	147
12.16	Changing the fuel pump	105	15.10	Changing the ABS fuses.....	148
13	MASK, FENDER	109	15.11	Diagnostics connector	150
13.1	Removing front fender	109	16	BRAKE SYSTEM	151
13.2	Installing front fender	109	16.1	Anti-lock braking system (ABS)	151
14	WHEELS.....	110			
14.1	Checking tire pressure.....	110			
14.2	Checking the tire condition.....	110			
14.3	Checking the wheel bearing for play	111			
14.4	Checking the brake discs	112			

TABLE OF CONTENTS

16.2	Checking the front brake linings	153	18.3.11	Removing the oil filter.....	188
16.3	Changing the front brake linings.....	153	18.3.12	Removing the thermostat.....	188
16.4	Adjusting the basic position of the hand brake lever	155	18.3.13	Positioning the engine at ignition top dead center	189
16.5	Checking the front brake fluid level.....	155	18.3.14	Removing the timing chain tensioner.....	189
16.6	Adding front brake fluid	156	18.3.15	Removing the camshafts.....	190
16.7	Changing the front brake fluid	157	18.3.16	Removing the cylinder head.....	191
16.8	Checking the rear brake linings	159	18.3.17	Removing the piston	192
16.9	Changing the rear brake linings.....	159	18.3.18	Removing the water pump impeller	193
16.10	Checking the free travel of foot brake lever	161	18.3.19	Removing the rotor.....	194
16.11	Adjusting the basic position of the foot brake lever	162	18.3.20	Removing the timing chain.....	194
16.12	Checking the rear brake fluid level ...	162	18.3.21	Removing the crankshaft speed sensor.....	195
16.13	Adding rear brake fluid	163	18.3.22	Removing the clutch cover.....	195
16.14	Changing the rear brake fluid	164	18.3.23	Removing the spacer and spring	196
17	LIGHTING SYSTEM, INSTRUMENTS	167	18.3.24	Removing the clutch basket.....	196
17.1	Combination instrument	167	18.3.25	Removing the primary gear wheel	198
17.1.1	Adjusting the kilometers or miles	167	18.3.26	Removing the starter drive	198
17.1.2	Adjusting the clock.....	167	18.3.27	Removing the shift shaft.....	199
17.1.3	Adjusting the wheel circumference.....	168	18.3.28	Removing shift drum locating	199
17.1.4	Setting the service display	168	18.3.29	Removing locking lever	199
17.2	Checking the headlight setting	169	18.3.30	Removing the oil pumps	200
17.3	Adjusting the headlight range.....	170	18.3.31	Removing the left engine case	201
17.4	Removing the headlight mask with the headlight	170	18.3.32	Removing the crankshaft and balancer shaft.....	202
17.5	Installing the headlight mask with the headlight	171	18.3.33	Removing the transmission shafts.....	202
17.6	Changing the parking light bulb.....	172	18.4	Working on individual parts	203
17.7	Changing the headlight bulb.....	172	18.4.1	Working on the right section of the engine case	203
17.8	Changing the turn signal bulb (US)	173	18.4.2	Working on the left section of the engine case	205
18	ENGINE	174	18.4.3	Working on the clutch cover	207
18.1	Removing the engine	174	18.4.4	Working on the water pump impeller	207
18.2	Installing the engine	178	18.4.5	Removing the crankshaft bearing inner race.....	208
18.3	Engine disassembly	184	18.4.6	Removing the drive gear wheel of the balancer shaft.....	208
18.3.1	Clamping the engine into the engine assembly stand	184	18.4.7	Changing the connecting rod, conrod bearing, and crank pin	208
18.3.2	Removing the resonator.....	185	18.4.8	Checking crankshaft run-out at bearing pin	211
18.3.3	Draining the engine oil.....	185	18.4.9	Installing the drive gear wheel of the balancer shaft.....	211
18.3.4	Removing the clutch push rod	186	18.4.10	Installing the crankshaft bearing inner race.....	212
18.3.5	Removing the starter motor	186	18.4.11	Measuring axial clearance of crankshaft and balancer shaft.....	212
18.3.6	Removing the spark plugs.....	186			
18.3.7	Removing the valve cover	186			
18.3.8	Removing the alternator cover	187			
18.3.9	Removing the spacer	187			
18.3.10	Removing the gear position sensor.....	187			

18.4.12	Cylinder - Nikasil® coating.....	213	18.5.9	Installing the primary gear wheel.....	247
18.4.13	Checking/measuring the cylinder.....	213	18.5.10	Installing the clutch basket.....	247
18.4.14	Checking/measuring the piston ...	214	18.5.11	Installing the spacer and spring	249
18.4.15	Checking the piston ring end gap	216	18.5.12	Installing the clutch cover	249
18.4.16	Determining the piston/cylinder mounting clearance.....	216	18.5.13	Installing the crankshaft speed sensor.....	250
18.4.17	Checking oil pumps for wear	216	18.5.14	Installing the timing chain rails	250
18.4.18	Preparing timing chain tensioner for installation	218	18.5.15	Installing the rotor.....	251
18.4.19	Checking the timing assembly	219	18.5.16	Adjusting the crankshaft speed sensor distance	251
18.4.20	Demounting cam lever and rocker arm	220	18.5.17	Setting engine to top dead center	252
18.4.21	Changing camshaft bearing and balancer shaft bearing.....	221	18.5.18	Mounting the water pump cover.....	252
18.4.22	Removing the valves	225	18.5.19	Installing the piston	253
18.4.23	Checking the valves	225	18.5.20	Installing the cylinder head.....	255
18.4.24	Checking valve springs	226	18.5.21	Installing the camshafts.....	256
18.4.25	Checking valve spring retainer	226	18.5.22	Installing the timing chain tensioner.....	258
18.4.26	Checking the cylinder head.....	226	18.5.23	Checking the valve clearance	259
18.4.27	Installing the valves	227	18.5.24	Adjusting the valve clearance.....	260
18.4.28	Installing cam lever and rocker arm	228	18.5.25	Installing the thermostat.....	263
18.4.29	Disassembling the antihopping clutch.....	229	18.5.26	Installing the oil filter.....	263
18.4.30	Checking the clutch	229	18.5.27	Installing the gear position sensor.....	264
18.4.31	Preassembling the antihopping clutch.....	231	18.5.28	Installing the spacer	264
18.4.32	Checking the shift mechanism	232	18.5.29	Installing the alternator cover	265
18.4.33	Preassembling the shift shaft.....	233	18.5.30	Installing the valve cover	265
18.4.34	Disassembling the main shaft	234	18.5.31	Installing the spark plugs	266
18.4.35	Disassembling the countershaft	235	18.5.32	Installing the starter motor	266
18.4.36	Checking the transmission.....	235	18.5.33	Installing the clutch push rod	266
18.4.37	Assembling the main shaft.....	237	18.5.34	Installing oil screens	266
18.4.38	Assembling the countershaft.....	238	18.5.35	Installing the resonator.....	267
18.4.39	Checking the starter drive	239	18.5.36	Removing the engine from the engine assembly stand	267
18.4.40	Removing the freewheel.....	240	19	CLUTCH	268
18.4.41	Checking the freewheel.....	240	19.1	Checking/correcting the fluid level of the hydraulic clutch	268
18.4.42	freewheel, installing.....	241	19.2	Changing the hydraulic clutch fluid	269
18.5	Engine assembly.....	241	19.3	Checking the clutch	270
18.5.1	Installing the transmission shafts.....	241	20	SHIFT MECHANISM.....	279
18.5.2	Installing crankshaft and balancer shaft.....	243	20.1	Changing the gear position sensor	279
18.5.3	Installing the left engine case	243	20.2	Programming the gear position sensor	281
18.5.4	Installing the oil pumps	244	21	WATER PUMP, COOLING SYSTEM	282
18.5.5	Installing locking lever	245	21.1	Draining the coolant.....	282
18.5.6	Installing shift drum locating	246			
18.5.7	Installing shift shaft.....	246			
18.5.8	Installing the starter drive	246			

TABLE OF CONTENTS

21.2	Filling/bleeding the cooling system.....	282	27.2	Checks and maintenance steps for winter operation	325
21.3	Checking the antifreeze and coolant level.....	283	28	STORAGE.....	327
21.4	Checking the coolant level.....	284	28.1	Storage	327
21.5	Changing the coolant.....	285	28.2	Preparing for use after storage	328
22	LUBRICATION SYSTEM	288	29	SERVICE SCHEDULE.....	329
22.1	Oil circuit.....	288	29.1	Additional information.....	329
22.2	Checking/cleaning the oil nozzle for clutch lubrication	289	29.2	Required work.....	329
22.3	Checking the engine oil level	290	29.3	Recommended work.....	330
22.4	Checking the oil pressure	290	30	WIRING DIAGRAM	332
22.5	Changing the engine oil and oil filter, cleaning the oil screens	293	30.1	Page 01 of 11 (EU)	332
22.6	Adding engine oil	296	30.2	Page 02 of 11 (EU)	334
23	IGNITION SYSTEM.....	297	30.3	Page 03 of 11 (EU)	336
23.1	Alternator - checking the stator winding.....	297	30.4	Page 04 of 11 (EU)	338
23.2	Ignition coil - checking the primary winding.....	300	30.5	Page 05 of 11 (EU)	340
23.3	Changing the spark plugs.....	301	30.6	Page 06 of 11 (EU)	342
24	CYLINDER HEAD	303	30.7	Page 07 of 11 (EU)	344
24.1	Checking the valve clearance.....	303	30.8	Page 08 of 11 (EU)	346
24.2	Adjusting the valve clearance	308	30.9	Page 09 of 11 (EU)	348
25	THROTTLE VALVE BODY	311	30.10	Page 10 of 11 (EU)	350
25.1	Performing the initialization run	311	30.11	Page 11 of 11 (EU)	352
25.2	Resetting the engine electronics control unit.....	311	30.12	Page 01 of 11 (US).....	354
25.3	Checking the CO adjustment using the Husqvarna Motorcycles diagnostics tool.....	312	30.13	Page 02 of 11 (US).....	356
26	TECHNICAL DATA	313	30.14	Page 03 of 11 (US).....	358
26.1	Engine	313	30.15	Page 04 of 11 (US).....	360
26.2	Engine tolerance, wear limits.....	314	30.16	Page 05 of 11 (US).....	362
26.3	Engine tightening torques.....	315	30.17	Page 06 of 11 (US).....	364
26.4	Capacities	318	30.18	Page 07 of 11 (US).....	366
26.4.1	Engine oil.....	318	30.19	Page 08 of 11 (US).....	368
26.4.2	Coolant.....	318	30.20	Page 09 of 11 (US).....	370
26.4.3	Fuel.....	318	30.21	Page 10 of 11 (US).....	372
26.5	Chassis	318	30.22	Page 11 of 11 (US).....	374
26.6	Electrical system.....	319	31	SUBSTANCES.....	376
26.7	Tires	319	32	AUXILIARY SUBSTANCES.....	378
26.8	Fork.....	319	33	SPECIAL TOOLS	380
26.9	Shock absorber	320	34	STANDARDS	400
26.10	Chassis tightening torques	321	35	INDEX OF SPECIAL TERMS	401
27	CLEANING/PROTECTIVE TREATMENT	324	36	LIST OF ABBREVIATIONS	402
27.1	Cleaning the motorcycle.....	324	INDEX		403

1.1 Symbols used

The meaning of specific symbols is described below.



Indicates an expected reaction (e.g. of a work step or a function).



Indicates an unexpected reaction (e.g. of a work step or a function).



Indicates a page reference (more information is provided on the specified page).



Indicates information with more details or tips.



Indicates the result of a testing step.



Indicates a voltage measurement.



Indicates a current measurement.



Indicates a resistance measurement.



Indicates the end of an activity including potential rework.

1.2 Formats used

The typographical formats used in this document are explained below.

Proprietary name	Indicates a proprietary name.
Name[®]	Indicates a protected name.
Brand[™]	Indicates a brand available on the open market.
<u>Underlined terms</u>	Refer to technical details of the vehicle or indicate technical terms, which are explained in the glossary.

2.1 Repair Manual

Read this Repair Manual carefully and thoroughly before beginning work. It contains useful information and tips to help you repair and service your vehicle.

This manual assumes that the necessary special Husqvarna tools and Husqvarna workplace and workshop equipment are available.

2.2 Safety advice

A number of safety instructions need to be followed to operate the product described safely. Therefore read this instruction and all further instructions included carefully. The safety instructions are highlighted in the text and are referred to at the relevant passages.



Info

Various information and warning labels are attached in prominent locations on the product described. Do not remove any information or warning labels. If they are missing, you or others may not recognize dangers and may therefore be injured.

2.3 Degrees of risk and symbols



Danger

Identifies a danger that will immediately and invariably lead to fatal or serious permanent injury if the appropriate measures are not taken.



Warning

Identifies a danger that is likely to lead to fatal or serious injury if the appropriate measures are not taken.




Caution

Identifies a danger that may lead to minor injuries if the appropriate measures are not taken.

Note

Identifies a danger that will lead to considerable machine and material damage if the appropriate measures are not taken.

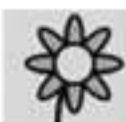

Note

Indicates a danger that will lead to environmental damage if the appropriate measures are not taken.

2.4 Work rules

Special tools are necessary for certain tasks. The tools are not a component of the vehicle, but can be ordered using the number in parentheses. Example: bearing puller (15112017000)

During assembly, use new parts to replace parts which cannot be reused (e.g. self-locking screws and nuts, seals, sealing rings, O-rings, pins, and lock washers).

In the case of certain screws, a screw adhesive (e.g. **Loctite**®) is required. Observe the manufacturer's instructions.

After disassembly, clean the parts that are to be reused and check them for damage and wear. Change damaged or worn parts.

After completing a repair or service work, check the operating safety of the vehicle.