

Search this site

Embedded Files

Skip to main content

Skip to navigation

CabinetSense Wiki

- [Home](#)
- [32mm System](#)
- [Build History](#)
- [Closet Systems](#)
- [CNC](#)
- [Common Attributes](#)
- [Component Library](#)
- [Components](#)
- [Construction Templates](#)
- [Cutlist Plus Integration](#)
- [Dynamic User Components](#)
- [Elevation and Plan Dimensions](#)
- [Frequently Asked Questions](#)
- [Known Issues](#)
- [Menus](#)
 - [CabinetSense Menu](#)
 - [CNC Menu](#)
 - [Component Menu](#)
 - [Document Menu](#)
 - [Add Inside Dimensions](#)
 - [Add Outside Dimensions](#)
 - [Change Prefix](#)
 - [Clear Dimensions](#)
 - [Clear Part Numbers](#)
 - [Dimension Preferences](#)
 - [Find Part Number](#)
 - [Renumber Parts](#)
 - [Send to Layout](#)
 - [Show Part Numbers](#)
 - [Help Menu](#)
 - [Profiles Menu](#)
 - [Scene Menu](#)
 - [Toolbars](#)
- [Plugins, Programs, and Links](#)
- [Scene and Layer Management](#)
- [Shop and Submittal Drawings](#)
- [Sketchup Tutorials](#)
- [Tips and Tricks](#)
- [Troubleshooting](#)
- [Tutorials](#)
- [Videos](#)


[CabinetSense Wiki](#)

Add Inside Dimensions

The outside dimensions request will dimension components from the outside of the part as opposed to the inside dimension request which will dimension from the inside walls of a cabinet (ie. inside opening).


Dimensions can only be added to your scene when a cabinet is:

- directly facing the camera:
- **HINT:** You can use the CabinetSense [Face Me](#) tool to face the cabinet or wall directly towards the camera.

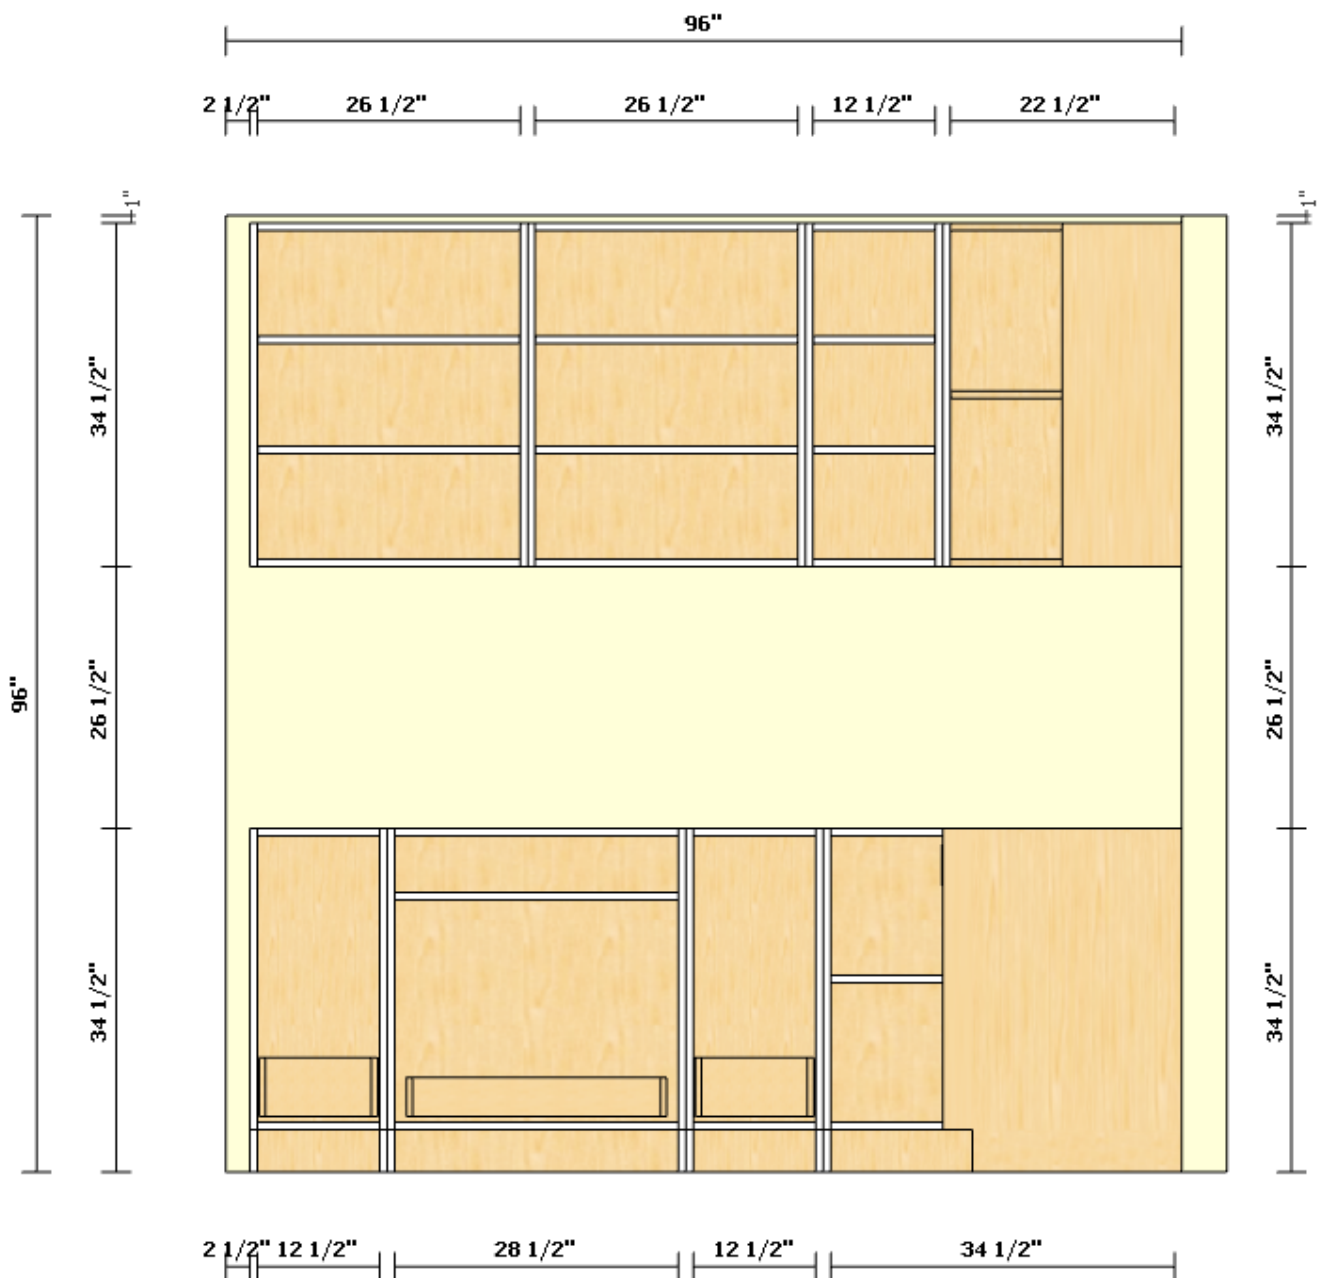

- Top View:

Top

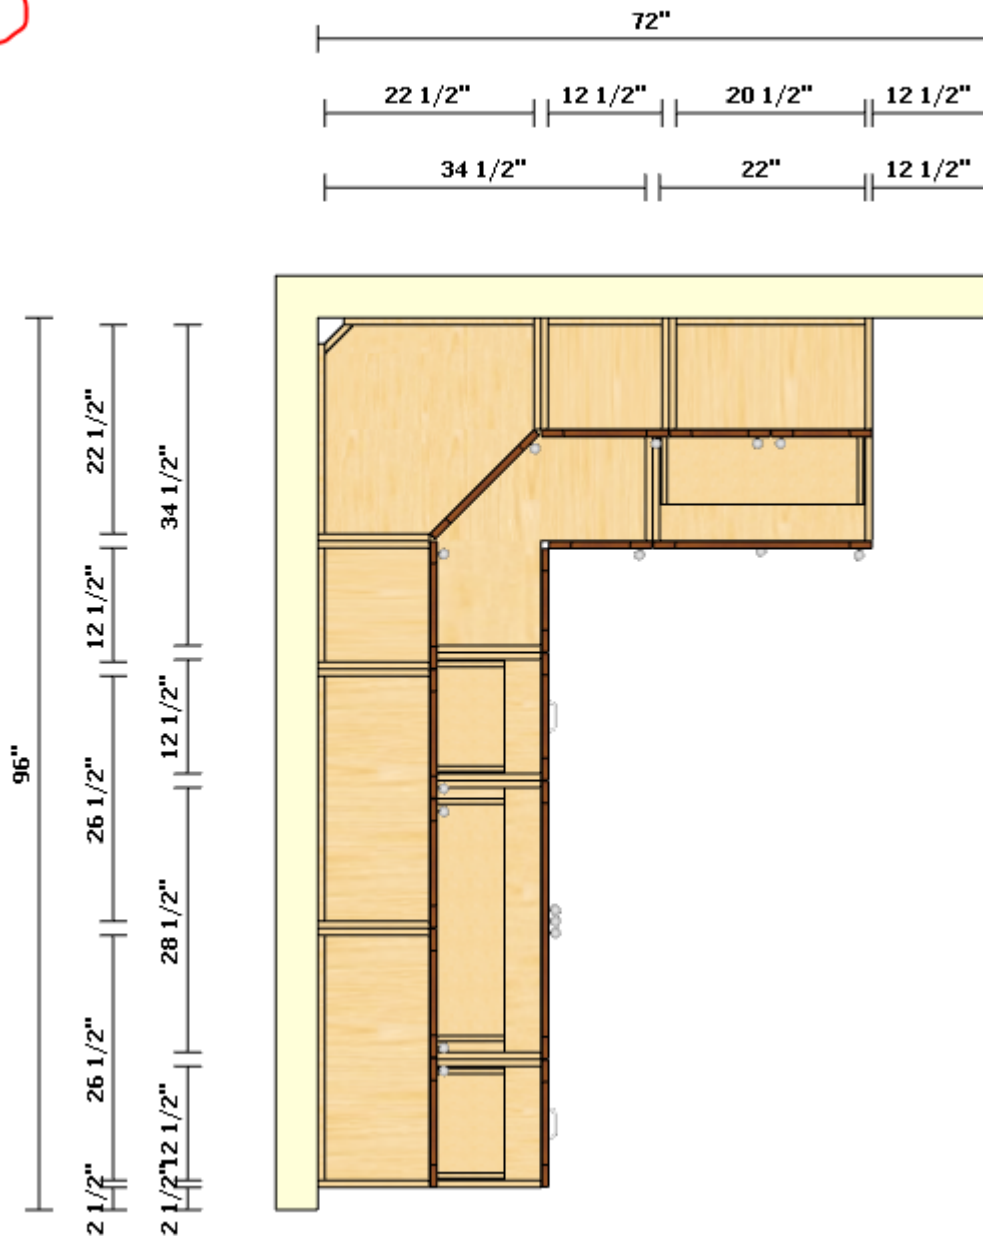

You can control which components are dimensioned by:

- Selecting only those parts that you want to be dimensioned; OR
- Select all components OR do not select any to have all camera facing components dimensioned.