

# **Getting Started**


**Dr. Nouredine Bekhouche**  
**Dept. of Applied Engineering**

# Router Setup

- **Connect PC/Laptop's Ethernet port to one of four, 4, ports (not Internet) on the router.**

## Opening Settings


**1**

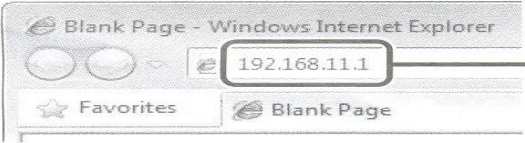

A screenshot of a Windows Internet Explorer browser window. The address bar contains the IP address 192.168.11.1. The page title is "Blank Page - Windows Internet Explorer". There are "Favorites" and "Blank Page" buttons at the bottom.

**192.168.10.99**

**2**

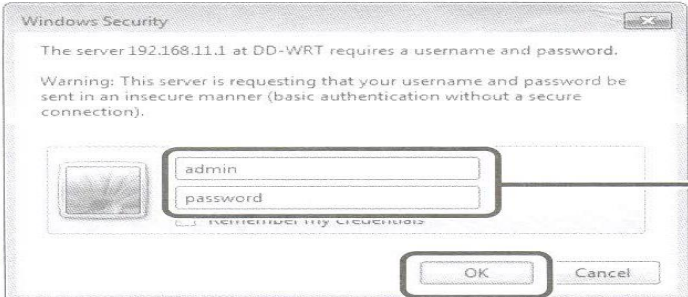

A screenshot of a Windows Security dialog box. The text reads: "The server 192.168.11.1 at DD-WRT requires a username and password. Warning: This server is requesting that your username and password be sent in an insecure manner (basic authentication without a secure connection)." There are two input fields, one labeled "admin" and one labeled "password". Below the fields is a checkbox labeled "Remember my credentials". At the bottom are "OK" and "Cancel" buttons.

**admin  
password**

# PLC-PC Link

- Open the Do-more Designer program
- Click on the NetEdit 3

NetEdit 3



# PLC-PC Link – Contd.

- select TCP/IP tab and click on IP address tab
- Enter the numbers below if different, click OK

