




SPLIT TYPE ROOM AIR CONDITIONER

OPERATION MANUAL

UN-GHS12 T3 PRO

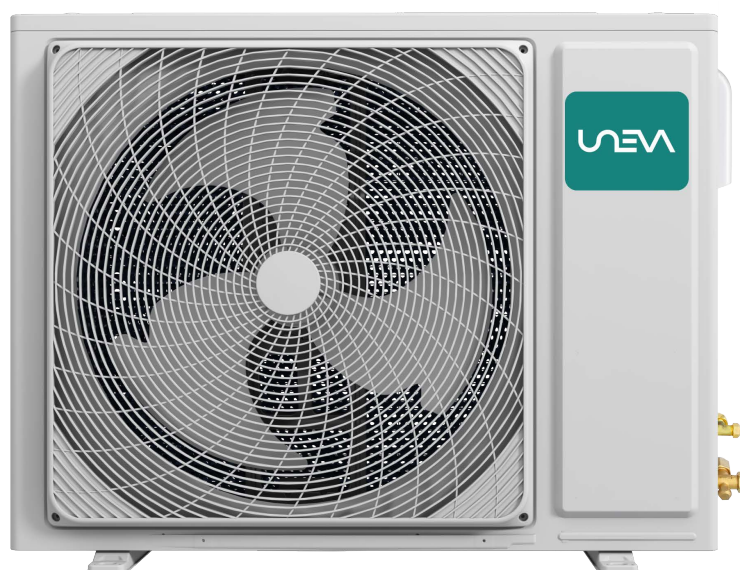

Please read this operation manual before using the air conditioner.
Keep this operation manual for future reference.

Cautions

⚠ WARNING


Please call Sales/Service Shop for the Installation.

Do not attempt to install the air conditioner by yourself because improper works may cause electric shock, fire, water leakage.

- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The appliance is connected to a supply impedance of $Z_{sysmax}=0.376+0.235j=0.443$ or less.

⚠ WARNING

When abnormality such as burnt-smell found, immediately stop the operation button and contact sales shop.




OFF



STRICT
ENFORCEMENT


Use an exclusive power source with a circuit breaker



Check proper installation of the drainage securely



STRICT
ENFORCEMENT

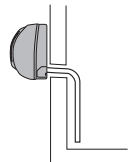

Connect power supply cord to the outlet completely



STRICT
ENFORCEMENT

Use the proper voltage




STRICT
ENFORCEMENT

1. Do not use power supply cord extended or connected in halfway
2. Do not install in the place where there is any possibility of inflammable gas leakage around the unit.
3. Do not get the unit exposed to vapor or oil steam.




PROHIBITION

Do not use power supply cord in a bundle.

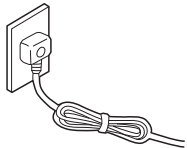


PROHIBITION

Take care not to damage the power supply cord.

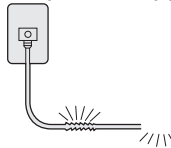


PROHIBITION

Do not insert objects into the air inlet or outlet.

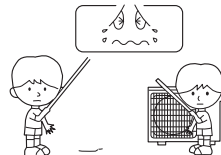

PROHIBITION

Do not start or stop the operation by disconnecting the power supply cord and so on.




PROHIBITION

Do not channel the air flow directly at people, especially at infants or the aged.




PROHIBITION

Do not try to repair or reconstruct by yourself.

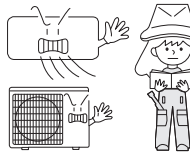

Connect the earth cable.

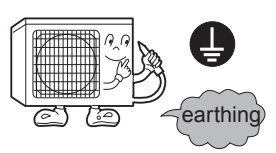

earthing

⚠ CAUTION

Do not use for the purpose of storage of food, art work, precise equipment, breeding, or cultivation.




PROHIBITION

Take fresh air occasionally especially when gas appliance is running at the same time.




STRICT
ENFORCEMENT

Do not operate the switch with wet hand.



PROHIBITION

Do not place animals or plants in the direct path of the air flow




PROHIBITION

Do not install the unit near a fireplace or other heating apparatus.



PROHIBITION

Check good condition of the installation stand



PROHIBITION

Do not pour water onto the unit for cleaning



PROHIBITION

Do not place any objects on or climb on the unit.



PROHIBITION


Do not place flower vase or water containers on the top of the unit.




PROHIBITION

Parts and Functions

Indoor Unit

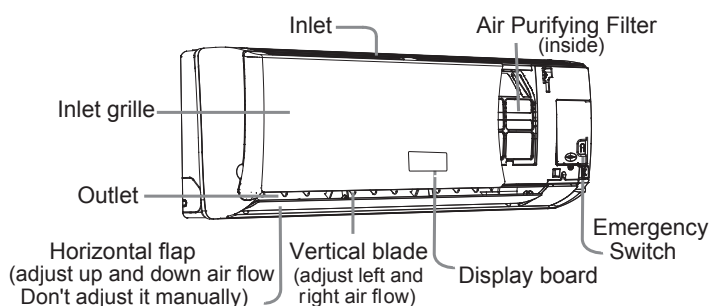

Display board A

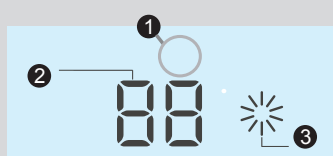


- ① Signal receiver
- ② Temp. display
- ③ Operation mode indicator

Display board B




- ① Signal receiver
- ② Temp display
- ③ Operation mode indicator (lights up when the compressor is on.)
- ④ TIMER ON/OFF display
TIMER ON = OFF display
SLEEP display

Display board C



- ① Signal receiver
(A beeping sound is generated when a signal from remote controller is received.)
- ② Power indicator
- ③ Timer mode indicator
- ④ Operation mode indicator
- ⑤ Temp display


Display board D



- ① Signal receiver
- ② Temp. display
- ③ COOL display
- ④ HEAT display
- ⑤ HEALTH display
- ⑥ DRY display

Actual inlet grille may vary from the one shown in the manual according to the product purchased


Outdoor Unit

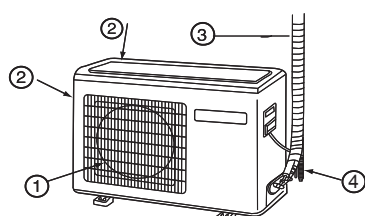

- ① OUTLET
- ② INLET
- ③ CONNECTING PIPING AND ELECTRICAL WIRING
- ④ DRAIN HOSE

Remote controller

Remote controller A:

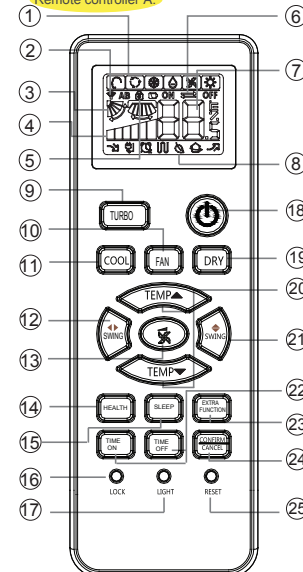

1. Mode display

Operation mode	AUTO	COOL	DRY	FAN
Remote controller				

2. Signal sending display
3. SWING display
4. FAN SPEED display



5. LOCK display
6. TIME OFF display
- TIME ON display

Healthy function is not available for some units.

7. TEMP display
8. Additional functions display

Operation mode	QUIET	SLEEP	Supplemented electrical heating	HEALTH	TURBO
Remote controller					

9. TURBO button Fan speed reach the max value
10. FAN button
11. COOL button
12. SWING LEFT/RIGHT button
13. FAN SPEED button
14. HEALTH button
15. SLEEP button
16. LOCK button
17. LIGHT button

Control the lightening and extinguishing of the indoor LED display board.

18. POWER ON/OFF button
19. DRY button
20. TEMP button


21. SWING UP/DOWN button
22. TIME OFF/ON button

23. EXTRA FUNCTION button
Function: HEALTH AIRFLOW → AUTO → FAN

24. CANCEL/CONFIRM button
Function: Setting and cancel to the timer and other additional functions.

25. RESET button
When the remote controller appears abnormal, use a sharp pointed article to press this button to reset the remote.

Remote controller B:

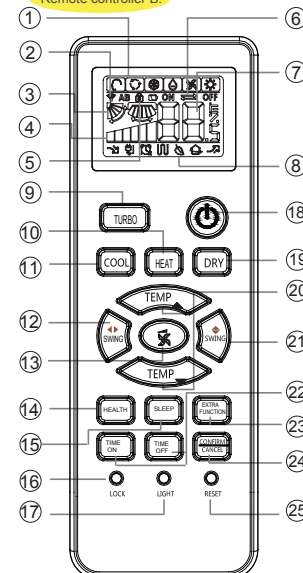

1. Mode display

Operation mode	AUTO	COOL	DRY	FAN	HEAT
Remote controller					

2. Signal sending display
3. SWING display
4. FAN SPEED display



5. LOCK display
6. TIME OFF display
- TIME ON display

Healthy function is not available for some units.

7. TEMP display
8. Additional functions display

Operation mode	QUIET	SLEEP	Supplemented electrical heating	HEALTH	TURBO
Remote controller					

9. TURBO button Fan speed reach the mix value
10. HEAT button
11. COOL button

12. SWING LEFT/RIGHT button
13. FAN SPEED button
14. HEALTH button
15. SLEEP button
16. LOCK button
17. LIGHT button

Control the lightening and extinguishing of the indoor LED display board.

18. POWER ON/OFF button
19. DRY button
20. TEMP button

21. SWING UP/DOWN button


22. TIME OFF/ON button
23. EXTRA FUNCTION button
Function: HEALTH AIRFLOW → AUTO → FAN

24. CANCEL/CONFIRM button
Function: Setting and cancel to the timer and other additional functions.

25. RESET button
When the remote controller appears abnormal, use a sharp pointed article to press this button to reset the remote.

Operation

Base Operation

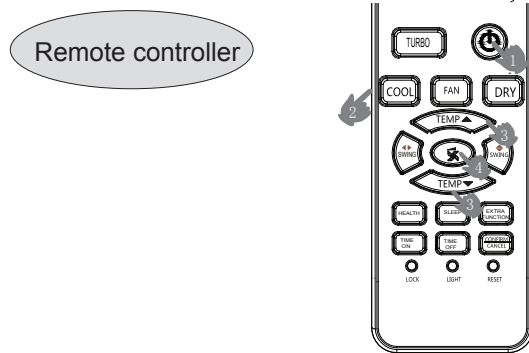

1. Unit start

Press ON/OFF on the remote controller, unit starts.

2. Select temp. setting

Press TEMP▲ / TEMP▼ button

TEMP▲ Every time the button is pressed, temp.setting increase 1°C, if kept depressed, it will increase rapidly

TEMP▼ Every time the button is pressed, temp.setting decrease 1°C, if kept depressed, it will decrease rapidly

Select a desired temperature.

3. Fan function


Remote controller A: Press FAN button.

Remote controller B:

Press button to enter additional options, when cycle display to , will flash. And then press enter to FAN function.

For each press button fan speed changes as follows:

Remote controller:



Air conditioner is running under displayed fan speed. When FAN is set to AUTO, the air conditioner automatically adjusts the fan speed according to room temperature.

Operation Mode	Remote Controller	Note
AUTO		Under the mode of auto operation, air conditioner will automatically select Cool or Heat operation according to room temperature. When FAN is set to AUTO, the air conditioner automatically adjusts the fan speed according to room temperature.
COOL		Cooling only unit do not have displays and functions related with heating
DRY		In DRY mode, when room temperature becomes lower than temp.setting+2°C, unit will run intermittently at LOW speed regardless of FAN setting.
HEAT		In HEAT mode, warm air will blow out after a short period of the time due to cold-draft prevention function. This function is unavailable on some models.
FAN		In FAN operation mode, the unit will not operate in COOL or HEAT mode but only in FAN mode. AUTO is not available in FAN mode. And temp.setting is disabled. When FAN is set to AUTO, the air conditioner automatically adjusts the fan speed according to room temperature. In FAN mode, SLEEP operation is not available.

Emergency operation and test operation

Emergency Operation:

- Use this operation only when the remote controller is defective or lost, and with function of emergency running, air conditioner can run automatically for a while.
- When the emergency operation switch is pressed, the "Pi" sound is heard once, which means the start of this operation.
- When power switch is turning on for the first time and emergency operation starts, the unit will run automatically in the following modes:

Room temperature	Designated temperature	Timer mode	Fan speed	Operation mode
Above 23°C	26°C	No	AUTO	COOL




- It is impossible to change the settings of temp. and fan speed, it is also not possible to operate in timer or dry mode.

Test operation:

Test operation switch is the same as emergency switch.

- Use this switch in the test operation when the room temperature is below 16°C, do not use it in the normal operation.
- Continue to press the test operation switch for more than 5 seconds. After you hear the "Pi" sound twice, release your finger from the switch: the cooling operation starts with the air flow speed "Hi".
- Under this operation mode, the fan motor of indoor unit will run in high speed.

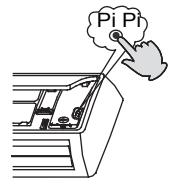

Air Flow Direction Adjustment

1. Status display of air flow Vertical flap

For each press the " " button, air flow direction on remote control displays as follows according to different operation modes:

Auto/Cool/Dry/Fan: → → → Cycle → →


Heat: → → Cycle → → → →

No initial state displayed on remote controller, the vertical flap will be fixed on the current position.

2. Left and right air flow adjustment

For each press the " " button, remote control displays as follows:

Initial state






Cautions:

- When adjusting the flap by hand, turn off the unit.
- When humidity is high, condensate water might occur adjusted to left or at air outlet if all vertical louvers are right.
- It is advisable not to keep horizontal flap at downward position for a long time in COOL or DRY mode, otherwise, condensate water might occur.

Operation

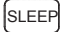
Comfortable SLEEP

Press  button , the remote controller will show  , and then achieve to the sleep function. Press again this  button , the sleep function will be cancelled.

Operation Mode


1. In COOL, DRY mode

1 hours after SLEEP mode starts,temp.will become 1°C higher than temp.setting.After another 1 hours, temp.risesby 1°C futher .The unit will run for further 6 hours then stops Temp. is higher than temp.setting so that room temperature won't be too low for your sleep.

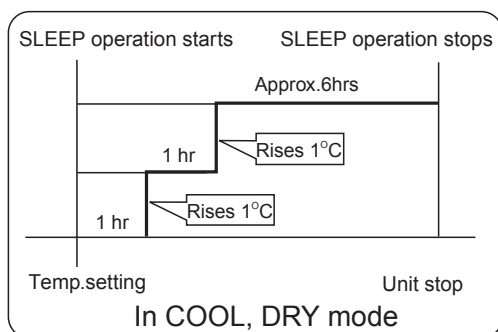

2.In HEAT mode

1 hours after SLEEP mode starts, temp will become 2°C lower than temp.setting. After another 1 hours, temp decrease by 2°C further. After more another 3 hours, temp.risesby 1°C further.The unit will run for further 3 hours then stops.Temp. is lower than temp. setting so that room temperature won't be too high for your sleep.

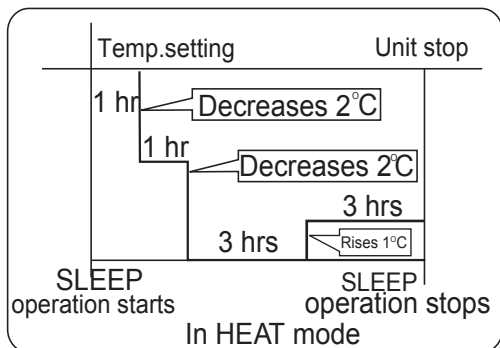

3.In AUTO mode

The unit operates in corresponding sleep mode corresponding sleep mode adapted to the automatically selected operation mode.

4. In FAN mode

It has no SLEEP function.

5. When quiet sleeping function is set to 8 hours the quiet sleeping time can not be adjusted.When TIMER function is set,the quiet sleeping function can't be set up.After the sleeping function is set up,if user resets TIMER function, the sleeping function will be cancelled; the machine will be in the state of timing-on,if the two modes are set up at the same time,either of their operation time is ended first,the unit will stop automatically,and the other mode will be cancelled.

Note

When TIMER function is set, the sleeping function can't be set up .After the sleeping function is set up,if user resets TIMER function, the sleeping function will be cancelled; the machine will be in the state of timing-on.


Note to the power failure resume:

press the sleep button ten times in five seconds and enter function after hearing four sounds.And press the sleep button ten times within five seconds and leave this function after hearing two sounds.



Power Failure Resume Function

If the unit is started for the first time, the compressor will not start running unless 3 minutes have elapsed. When the power resumes after power failure, the unit will run automatically, and 3 minutes later the compressor starts running.

Healthy airflow Operation



1.Press  to starting
Setting the comfort work conditions.

2.The setting of healthy airflow function

Press  button to enter additional options,Press this button continuously, the louvers location will cycle between in the following three locations, to choose the swing location what you needed,and then press  button to confirm.




3.The cancel of the healthy airflow function

Press  button to enter additional options,Press this button continuously, the louvers location will cycle between in the following three locations again,and then press  button to cancel.

Notice: Do not direct the flap by hand. Otherwise, the grille will run incorrectly. If the grille is not run correctly, stop for a minute and then start, adjusting by remote controller.

Note:


- 1.After setting the healthy airflow function, the position grill is fixed.
- 2.In cooling, it is better to select the  mode.
- 3.In cooling and dry, using the air conditioner for a long time under the high air humidity, condensate water may occur at the grille .


Operation

■ Time On/Off On-Off Operation

1. After unit starts, select your desired operation mode.

2. Press  /  button to change TIMER mode.

Press  button "ON 0.5" will appear ,after 10 seconds the time display will be blank.

Press  button "OFF 0.5" will appear ,after 10 seconds the time display will be blank.

Then select your desired TIMER mode (TIME ON or TIME OFF). " ON "or " OFF "will flash.

3. Press  /  button to set time.

Press the button for each time, setting time in the first 12 hours increased by 0.5 hour every time, after 12 hours, increased by 1 hour every time.

4. Confirm timer setting

After adjust the time, press  button and confirm the time ON or OFF button will not flash any more.

5. Cancel timer setting

Press the  button the time display eliminated.


Hints:

After replacing batteries or a power failure happens, time setting should be reset.

According to the Time setting sequence of TIME ON or TIME OFF, either Start-Stop or Stop-Start can be achieved.

■ HEALTH Operation

(This function is unavailable on some models.)

Press HEALTH button , the remote controller will show  and then achieve to the health function.
Press again this HEALTH button , the health function will be cancelled.


The anion generator in the airconditioner can generate a lot of anion effectively balance the quantity of position and anion in the air and also to kill bacteria and speed up the dust sediment in the room and finally clean the air in the room.

■ TURBO Operation

(This function is unavailable on some models.)

TURBO Operation


When you need rapid heating or cooling, you can use this function.

Press TURBO button, the remote controller will show , and then achieve to the turbo function. Press again this TURBO button , the turbo function will be cancelled.

Note :

1. During TURBO operation, in rapid COOL mode , the room will show inhomogeneous temperature distribution.
2. The "TURBO" button will make the fan speed of the indoor unit reach the maximum value. The nameplate nominal value is tested in this mode.

■ Loading of the battery

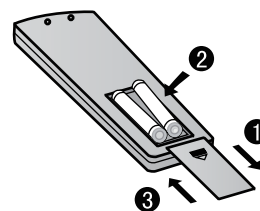

- 1 Remove the battery cover;
- 2 Load the batteries as illustrated. 2 R-03 batteries, resetting key (cylinder);
- 3 Be sure that the loading is in line with the "+" and "-";
- 4 Load the battery, then put on the cover again.


Note:

- The distance between the signal transmission head and the receiver hole should be within 7m without any obstacle as well.
- When electronic-started type fluorescent lamp or change-over type fluorescent lamp or wireless telephone is installed in the room, the receiver is apt to be disturbed in receiving the signals, so the distance to the indoor unit should be shorter.
- Full display or unclear display during operation indicates the batteries have been used up. Please change batteries.
- If the remote controller can't run normally during operation, please remove the batteries and reload several minutes later.

Maintenance


For Smart Use of The Air Conditioner

Setting of proper room temperature

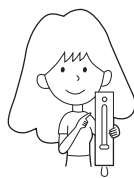


Proper temperature

Do not block the air inlet or outlet




Close doors and windows during operation

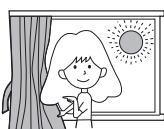


During cooling operation prevent the penetration of direct sunlight with curtain or blind

Use the timer effectively

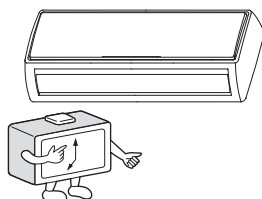


If the unit is not to be used for a long time, turn off the power supply main switch.



OFF

Use the louvers effectively



Remote Controller



Do not use water, wipe the controller with a dry cloth. Do not use glass cleaner or chemical cloth.

Indoor Body



Wipe the air conditioner by using a soft and dry cloth. For serious stains, use a neutral detergent diluted with water. Wring the water out of the cloth before wiping, then wipe off the detergent completely.

Do not use the following for cleaning



Gasoline, benzene, thinner or cleanser may damage the coating of the unit.



Hot water over 40°C (104°F) may cause discoloring or deformation.

Air Filter cleaning

1 Open the inlet grille by pulling it upward.

2 Remove the filter.

Push up the filter's center tab slightly until it is released from the stopper, and remove the filter downward.


3 Clean the filter.

Use a vacuum cleaner to remove dust, or wash the filter with water. After washing, dry the filter completely in the shade.

4 Attach the filter.

Attach the filter correctly so that the "FRONT" indication is facing to the front. Make sure that the filter is completely fixed behind the stopper. If the right and left filters are not attached correctly, that may cause defects.

5 Close the inlet grille.




Once every two weeks

Replacement of Air Purifying Filter

(NOTE: Air purifying filter is optional part)


1. Open the Inlet Grille

Prop up the inlet grille by using a small device named grille-support which located in the right side of the indoor unit.



2. Detach the standard air filter

Slide the knob slightly upward to release the filter, then withdraw it.

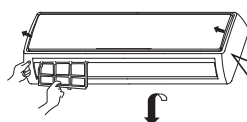


Detach old Air Purifying Filter




3. Attach Air Purifying Filter

Put air purifying filter appliances into the right and left filter frames.

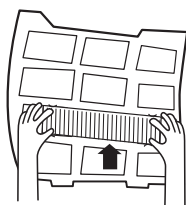

4. Attach the standard air filter (Necessary installation)

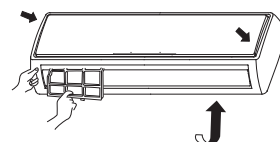

ATTENTION:

The white side of the photocatalyst air purifying filter face outside, and the black side face the unit.

The green side of the bacteria-killing medium air purifying filter face outside, and the white side face the unit.

5. Close the Inlet Grille






Close the Grille surely

NOTE:

- The photocatalyst air purifying filter will be solarized in fixed time. In normal family, it will be solarized every 6 months.
- The bacteria-killing medium air purifying filter will be used for a long time, no need for replacement. But in the period of using them, you should remove the dust frequently by using vacuum cleaner or flapping them lightly, otherwise, its performance will be affected.
- Please keep the bacteria-killing medium air purifying filter in the cool and dry conditions avoid long time directly sunshine when you stop using it, or its ability of sterilization will be reduced.

Trouble shooting

Before asking for service, check the following first.

	Phenomenon	Cause or check points
Normal Performance inspection	The system does not restart immediately. 	<ul style="list-style-type: none"> When unit is stopped, it won't restart immediately until 3 minutes have elapsed to protect the system. When the electric plug is pulled out and reinserted, the protection circuit will work for 3 minutes to protect the air conditioner.
	Noise is heard 	<ul style="list-style-type: none"> During unit operation or at stop, a swishing or gurgling noise may be heard. At first 2-3 minutes after unit start, this noise is more noticeable. (This noise is generated by refrigerant flowing in the system.) During unit operation, a cracking noise may be heard. This noise is generated by the casing expanding or shrinking because of temperature changes. Should there be a big noise from air flow in unit operation, air filter may be too dirty.
	Smells are generated.	<ul style="list-style-type: none"> This is because the system circulates smells from the interior air such as the smell of furniture, paint, cigarettes.
	Mist or steam are blown out. 	<ul style="list-style-type: none"> During COOL or DRY operation, indoor unit may blow out mist. This is due to the sudden cooling of indoor air.
	In dry mode, fan speed can't be changed.	<ul style="list-style-type: none"> In DRY mode, when room temperature becomes lower than temp.setting+2°C, unit will run intermittently at LOW speed regardless of FAN setting.
Multiple check		<ul style="list-style-type: none"> Is power plug inserted? Is there a power failure? Is fuse blownout?
	Poor cooling 	<ul style="list-style-type: none"> Is the air filter dirty? Normally it should be cleaned every 15 days. Are there any obstacles before inlet and outlet? Is temperature set correctly? Are there some doors or windows left open? Is there any direct sunlight through the window during the cooling operation? (Use curtain) Are there too much heat sources or too many people in the room during cooling operation?

T1: Application temp. range of air conditioner -7°C~43°C.

T3: Application temp. range of air conditioner -7°C~52°C.

Cautions

The machine is adaptive in following situation

1. Applicable ambient temperature range:

For: T1

Cooling	Indoor	Maximum: D.B / W.B Minimum: D.B / W.B	32°C/23°C 21°C/15°C
	Outdoor	Maximum: D.B Minimum: D.B	43°C/26°C 21°C
Heating	Indoor	Maximum: D.B Minimum: D.B	27°C 20°C
	Outdoor	Maximum: D.B / W.B Minimum: D.B / W.B	24°C/18°C -7°C/-8°C

For: T3

Cooling	Indoor	Maximum: D.B / W.B Minimum: D.B / W.B	32°C/23°C 21°C/15°C
	Outdoor	Maximum: D.B / W.B Minimum: D.B	52°C/31°C 21°C
Heating	Indoor	Maximum: D.B Minimum: D.B	27°C 15°C
	Outdoor	Maximum: D.B / W.B Minimum: D.B / W.B	24°C/18°C -7°C/-8°C

- If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similar qualified person.
The type of connecting wire is H05RN-F or H07RN-F
- If the fuse on PC board is broken please change it with a fuse type T. 3.15A/250V.
If the fuse of outdoor unit on PC board is broken, please change it with the type of T. 25A/250V.
- The distance between the indoor unit and the floor should be more than 2m.
- The wiring method should be in line with the local wiring standard.
- After installation, the power plug should be easily reached..
- The used batteries should be disposed of properly.
- The appliance is not intended to use by young children or infirm persons without supervision.
- Young children should be supervised ensure that they do not play with the appliance.
- The appliance must be installed on a strong enough support.
- The wiring diagram is attached inside the machine.

استكشاف الأخطاء وإصلاحها

تنبيهات

قبل طلب الصيانة، تحقق مما يلي:






يتكيف الجهاز في الحالة التالية
1. النطاق المعمول به لدرجة الحرارة المحيطة:

بالنسبة للجدول 1	داخلي	الحد الأقصى D.B / W.B الحد الأدنى D.B / W.B	درجة مئوية 32°/23° درجة مئوية 18°/14°
التبريد	داخلي	الحد الأقصى D.B الحد الأدنى D.B	درجة مئوية 43°/26° درجة مئوية 18°
	خارجي	الحد الأقصى D.B الحد الأدنى D.B	درجة مئوية 27° درجة مئوية 15°
	خارجي	الحد الأقصى D.B / W.B الحد الأدنى D.B / W.B	درجة مئوية 24°/18° درجة مئوية -7°/-8°
	خارجي	الحد الأقصى D.B / W.B الحد الأدنى D.B / W.B	درجة مئوية 24°/18° درجة مئوية -7°/-8°

بالنسبة
للجدول 2

داخلي	الحد الأقصى D.B / W.B الحد الأدنى D.B / W.B	درجة مئوية 32°/23° درجة مئوية 18°/14°
خارجي	الحد الأقصى D.B / W.B الحد الأدنى D.B	درجة مئوية 52°/31° درجة مئوية 18°
داخلي	الحد الأقصى D.B الحد الأدنى D.B	درجة مئوية 27° درجة مئوية 24°/18°
خارجي	الحد الأقصى D.B / W.B الحد الأدنى D.B / W.B	درجة مئوية 24°/18° درجة مئوية -7°/-8°







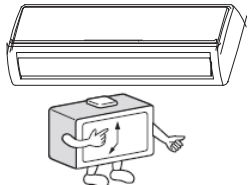
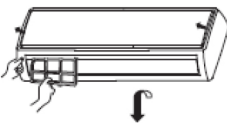
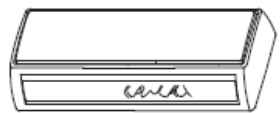

- إذا تعرض سلك الكهرباء للتلف، وجب استبداله عن طريق المصنّع أو وكيل الصيانة أو عن طريق شخص مؤهل. نوع سلك التوصيل هو **H05RN-F** أو **H07RN-F 3**. إذا كان المصهر الموجود على لوحة أسلاك الطاقة لا يعمل، فيرجى استبداله بالنوع **T**.
- أمبير/250 فولت. إذا كان المصهر الموجود على لوحة أسلاك الطاقة لا يعمل، فيرجى استبداله بالنوع **T 25** أمبير/250 فولت.
- المسافة بين الوحدة الداخلية الرضوية يجب أن تكون أكثر من 2 م.
- يجب أن تتماشى طريقة توصيل الأسلاك مع المعيار المحلي المعمول به في توصيل الأسلاك.
- بعد التركيب، يجب أن يكون الوصول إلى مقبس الطاقة هال.
- يجب التخلص من البطاريات المستعملة بشكل سليم.
- هذا الجهاز غير مصمم للاستخدام من قبل الأطفال صغار السن أو الأشخاص أصحاب الإعاقات دون إشراف.
- يجب مراقبة الأطفال لضمان عدم عبثهم بالجهاز.
- يجب تركيب الجهاز على سطح قوي بما يكفي لتحمله.
- يتم تركيب مخطط الأسلاك داخل الجهاز.

الظاهرة	السبب أو نقاط التحقق
عند إيقاف الوحدة، لن تعيد التشغيل فوراً، 	يجب أن تمر 3 دقائق للسماح بحماية النظام.
يتم سماع الضوضاء 	<ul style="list-style-type: none"> أثناء تشغيل الوحدة أو عند توقفها، قد يتم سماع صوت حفحة أو غرغرة. في أول 2-3 دقائق بعد بدء الوحدة، تصبح هذه الضوضاء ملحوظة بشكل أكبر. تصدر هذه الضوضاء عن مادة لثيا ريد التي تتدفق في الجهاز. أثناء تشغيل الوحدة، يمكن سماع ضوضاء تصدع. يتم توليد هذه الضوضاء عن طريق توسع أو تقلص الإطار الخارجي بسبب تغيرات درجة الحرارة. إذا كانت هناك ضوضاء كبيرة من تدفق الهواء في تشغيل الوحدة، قد يكون فلتر الهواء متسخاً جداً. وهذا لأن الجهاز يحفز الروائح من الهواء الداخلي مثل رائحة الأثاث والطلاء، السجائر.
يتم نفاخ الرذاذ أو البخار. أثناء التشغيل البارد أو الجاف، قد تقوم الوحدة الداخلية بنفخ الرذاذ. وهذا بسبب البرودة المفاجئة في الهواء الداخلي. 	<ul style="list-style-type: none"> في وضع "جاف"، عندما تصبح درجة حرارة الغرفة أقل من إعداد درجة الحرارة +2 درجة مئوية، سوف تعمل الوحدة بشكل متقطع بسرعة منخفضة بغض النظر عن إعداد المروحة.
في الوضع الجاف، لا يمكن تغيير سرعة المروحة. 	<ul style="list-style-type: none"> هل تم إدخال قابس الطاقة؟ هل هناك عطل بالكهرباء؟ هل المصهر منقطع؟ هل الفلتر متسخ؟ عادة يجب تنظيفه كل 15 يوماً. هل هناك أي عوائق أمام المدخل والمخرج؟ هل درجة الحرارة مضبوطة بشكل صحيح؟ هل هناك بعض اللون أو النوافذ لا تزال مفتوحة؟ هل هناك أي دخول لضوء الشمس المباشر عبر النافذة أثناء التشغيل البارد؟ (استخدم ستارة) هل هناك مصادر حرارة كثيرة أو أشخاص أكثر جداً في الغرفة أثناء التشغيل البارد؟
سوء التهوية 	تحقق متعدد

الجدول 1: نطاق درجة الحرارة الساري لمكيف الهواء -75 درجة مئوية~43 درجة مئوية.



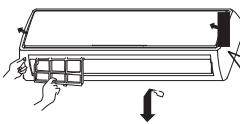

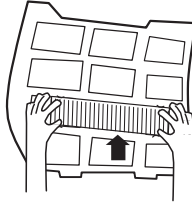
الجدول 3: نطاق درجة الحرارة الساري لمكيف الهواء -7 درجة مئوية~52 درجة مئوية.

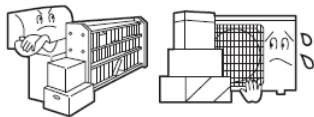الاستخدام الذكي لمكيف الهواء

 <p>امسح مكيف الهواء باستخدام قطعة قماش ناعمة وجافة. بالنسبة للبقع الكبيرة، استخدم منظفًا محايدًا مخففًا بالماء. أعصر الماء من القماش قبل المسح، ثم امسح المنظف تمامًا.</p>	<h3>جهاز التحكم عن بعد الجسم الداخلي</h3>  <p>لا تستخدم الماء، امسح وحدة التحكم بقماش جاف. لا تستخدم منظف زجاج أو قماش كيميائي.</p>	<h3>يحظر سد مدخل ومخرج التهوية</h3> 	<h3>ضبط درجة حرارة الغرفة المناسبة</h3>  <p>درجة الحرارة المناسبة</p>
<h3>لا تستخدم هذه الأشياء في التنظيف</h3>  <p>الماء الساخن أعلى من 40 درجة مئوية (104 ف)</p> <p>قد يؤدي الغازولين أو البازين أو لتناز أو المطهر إلى إلحاق الضرر أو تسبب تغييرًا في اللون أو تشوها الوحدة.</p>	<h3>أغلق الأبواب والنوافذ أثناء التشغيل</h3>  <p>أثناء تشغيل التبريد، امنع دخول ضوء الشمس المباشر بستارة</p>	<h3>استخدم المؤقت بفاعلية</h3> 	
<h3>تنظيف فلتر الهواء</h3> <ol style="list-style-type: none">1 افتح شبكة الدخول عن طريق سحبها لأعلى.2 قم بإزالة الفلتر.3 نظف الفلتر. استخدم مكنسة كهربائية لإزالة الغبار أو غسل الفلتر بالماء. بعد الغسل، جفف الفلتر تمامًا في الظل.4 ركب الفلتر بشكل صحيح بحيث تكون إشارة "الأمام" مواجهة للأمام. تأكد من أن الفلتر مثبت بشكل تام خلف السدادة. إذا لم يكن الفلتر الآمن والأيسر مركبين بشكل صحيح، فقد يسبب هذا عيوبًا.5 أغلق شبكة الدخول.  <p>مرة كل أسبوعين</p>	<h3>استخدم فتحات التهوية بفاعلية</h3> 		
		 <p>OFF</p>	

(الحظة: فلتر تطهير الهواء هو جزء اختياري)

استبدال فلتر تطهير الهواء
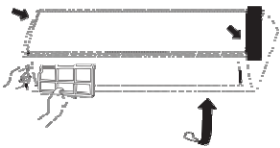
<p>4. ركب فلتر الهواء القياسي (التركيب الضروري)</p>  <p>تنبيه:</p> <p>الجانب الأبيض من فلتر تطهير الهواء الذي يعمل بالحفاز الضوئي يكون مواجهًا للخارج، والجانب الأسود يكون مواجهًا للوحدة. الجانب الأخضر من فلتر تطهير الهواء المطهر للبكتيريا يكون مواجهًا للخارج، والجانب الأبيض يكون مواجهًا للوحدة.</p> <p>5. أغلق شبكة الدخول</p> <p>أغلق الشبكة بإحكام</p> <p>الحظة:</p> <p>سيتم تعريض فلتر تطهير الهواء الذي يعمل بالحفاز الضوئي لأشعة الشمس في وقت ثابت. في المنازل العادية، سيتم تعريضه للشمس كل 6 أشهر.</p> <ul style="list-style-type: none"> ● سيتم استخدام فلتر تطهير الهواء الأوسط القاتل للبكتيريا لمدة طويلة، ال داع لاستبداله. ولكن أثناء استخدامهما، يجب عليك إزالة الغبار بشكل متكرر باستخدام مكنسة كهربائية أو عن طريق الضرب الخفيف، الف ذلك سيؤثر أداء. ● يرجى الحفاظ على فلتر تطهير الهواء الأوسط القاتل للبكتيريا في ظروف باردة وجافة، وتجنب التعرض لضوء الشمس المباشر لفترة طويلة عند التوقف عن الاستخدام، إل سنقل قدرته على التعقيم. 	<ol style="list-style-type: none"> افتح شبكة الدخول أخرج شبكة الدخول باستخدام أداة صغيرة تسمى دعامة الشبكة، وهي موجودة في الجانب الأيمن من الوحدة الداخلية. قم بفك فلتر الهواء القياسي حرك المقبض ليلال لأعلى لفك الفلتر، ثم اسحبه. قم بفك فلتر تطهير الهواء ركب فلتر تطهير الهواء ضع أجهزة فلتر تطهير الهواء في الإطارين الأيمن الأيسر للفلتر.    
---	---

تشغيل التربو


(هذه الوظيفة غير متوفرة في بعض لموديلات.)

تشغيل التربو عندما تحتاج إلى تسخين أو تبريد سريع، يمكنك استخدام هذه الوظيفة.

اضغط زر **TURBO**، ستعرض وحدة التحكم عن بعد شاشة د وظيفة التربو. اضغط على زر **TURBO** مرة أخرى، سيتم إلغاء وظيفة التربو.

ملاحظة: أثناء تشغيل "التربو"، في وضع التبريد السريع، سيكون هناك توزيع غير متجانس لدرجة الحرارة في الغرفة.

تركيب البطارية

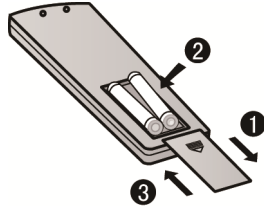

- 1 قم بفك غطاء لبا طارية؛
- 2 ركب البطاريات كما هو موضح.. بطاريات من نوع **R-03**، مفتاح إعادة الضبط (أسطواني)؛
- 3 تأكد من أن التركيب يتماشى مع "+/-"؛
- 4 ركب البطارية، ثم أعد تركيب الغطاء.

الحظة:

- يجب أن تكون المسافة بين رأس إرسال الإشارة وفتحة جهاز الاستقبال في حدود 7 أمتار بدون أي عوائق أيضاً.
- عند تركيب مصباح فلوريسنت من النوع الذي يعمل إلكترونياً أو تغيير مصباح فلوريسنت أو الهاتف لاسلكي في الغرفة، سيكون جهاز الاستقبال عرضة للتعطل عند استقبال الإشارات، لذا يجب أن تكون المسافة إلى الوحدة الداخلية أقصر.
- تشير الشاشة الكاملة أو الشاشة غير الواضحة أثناء التشغيل إلى أن البطاريات قد نفدت. يرجى تغيير البطاريات. إذا لم يكن جهاز التحكم عن بعد يعمل بشكل طبيعي أثناء التشغيل، يرجى إخراج البطاريات وإعادة تركيبها بعد عدة دقائق.

شغيل/إيقاف المؤقت عملية إيقاف/التشغيل

1. بعد تشغيل الوحدة، اختر وضع التشغيل المرغوب.



2. اضغط زر / لتغيير وضع "المؤقت".

اضغط الزر **ON 0.5** سوف يظهر، وبعد 10 ثوان ستكون شاشة الوقت فارغة.



اضغط الزر **OFF 0.5** سوف يظهر، وبعد 10 ثوان ستكون شاشة الوقت فارغة.

ثم اختر وضع المؤقت المطلوب (تشغيل المؤقت أو إيقاف المؤقت). "ON" أو "OFF" سوف يومض.

3. اضغط الزر / لضبط الوقت.



اضغط الزر لكل مرة، يزداد وقت الضبط في أول 12 ساعة بمعدل

0.5 ساعة كل مرة، وبعد 12 ساعة، يزداد بمعدل 1 ساعة في كل مرة.

4. تأكيد ضبط الوقت بعد ضبط الوقت، اضغط الزر و اكد الوقت، سيتوقف زر **ON** أو **OFF** عن الوميض.



5. إلغاء ضبط المؤقت اضغط الزر يتم إزالة شاشة الوقت.



تلميحات:

بعد استبدال البطاريات أو حدوث عطل كهربائي، يجب إعادة ضبط الوقت. حسب تسلسل إعداد الوقتل تشغيل المؤقت أو إيقاف المؤقت، يمكن إجراء إما تشغيل- إيقاف أو إيقاف-تشغيل.

تشغيل صحي (HEALTHY)

هذه الخاصية غير متوفرة في بعض الموديلات

اضغط زر **"HEALTH"**، ستعرض وحدة التحكم عن بعد ، ثم نفذ وظيفة الصحة .

اضغط على زر **HEALTH** مرة أخرى، سيتم إلغاء وظيفة الصحة.

يمكن لمولد الأنيون في مكيف الهواء أن يولد كثيراً من الأنيون ليوازن بفاعلية كمية الوضع الأنيون في الهواء وأيضاً لقتل البكتريا وتسريع عملية ترسيب الغبار في الغرفة وأخيراً للتنظيف ويقوم الأنيون في الهواء أيضاً بقتل البكتريا وتسريع الهواء في الغرفة.

التشغيل

النوم المريح

5. عند ضبط وظيفة النوم الهادئ على 8 ساعات لا يمكن تعديل وقت النوم الهادئ. عند ضبط وظيفة المؤقت، لا يمكن إعداد وظيفة النوم الهادئ. بعد إعداد وظيفة النوم، إذا أعاد المستخدم ضبط وظيفة المؤقت، سيتم إلغاء وظيفة النوم؛ سيكون الجهاز في حالة تشغيل التوقيت، إذا تم ضبط الوضعين في نفس الوقت، سيتم إنهاء أي من وقت تشغيلهما وال، ثم تتوقف الوحدة تلقائيًا، ويتم إلغاء الوضع الآخر.

الحظة عند ضبط وظيفة المؤقت، لا يمكن إعداد وظيفة النوم الهادئ. بعد ضبط وظيفة النوم الهادئ، إذا أعاد المستخدم ضبط وظيفة المؤقت، سيتم إلغاء وظيفة النوم الهادئ؛ وسيكون الجهاز في حالة تشغيل التوقيت.

الحظة استئناف العمل بعد انقطاع الكهرباء:

اضغط على زر النوم الهادئ عشر مرات في خمس ثوانٍ وادخل إلى وظيفة بعد سماع أربعة أصوات. واضغط زر النوم الهادئ عشر مرات في خمس ثوانٍ واترك هذه الوظيفة بعد سماع صوتين.



وظيفة استئناف العمل بعد انقطاع الكهرباء

إذا كان يتم تشغيل الوحدة للمرة الأولى، فلن يبدأ الضاغط في العمل ال بعد مُضي 3 دقائق. عندما تعود الكهرباء بعد انقطاعها، ستعمل الوحدة تلقائيًا، وبعد 3 دقائق سيبدأ الضاغط في العمل.

عملية تدفق الهواء الصحي



1. اضغط  للبدء ضبط ظروف العمل المريحة.

2. ضبط وظيفة تدفق الهواء الصحي

اضغط الزر  للدخول إلى الخيارات الإضافية، اضغط هذا الزر باستمرار، سوف يدور مكان فتحات التهوية بين الأماكن لثلاثة التالية، لاختيار مكان التحريك الذي تحتاجه، ثم اضغط الزر  للتأكيد.



3. إلغاء وظيفة تدفق الهواء الصحي

اضغط الزر  لإدخال الخيارات الإضافية، اضغط هذا الزر باستمرار، سوف يدور مكان فتحات التهوية بين الأماكن لثلاثة التالية، ثم اضغط الزر  للإلغاء.


ملحوظة: لا تضبط اتجاه الرفرف بيدك. غير ذلك، سوف تعمل الشبكة بشكل غير صحيح. إذا لم تعمل الشبكة بشكل صحيح، توقف لدقيقة ثم ابدأ، مع الضبط بجهاز التحكم عن بعد.

الحظة:

1. بعد ضبط وظيفة تدفق الهواء الصحي، يتم تثبيت مكان الشبكة.


2. عند التبريد، من الأفضل اختيار الوضع.

3. في الوضعين البارد والجاف، عند استخدام مكيف الهواء لمدة طويلة في ظل ارتفاع رطوبة الهواء، قد يحدث تكثف للماء على الشبكة.

اضغط الزر SLEEP، ستعرض وحدة التحكم عن بعد ، ثم نفذ وظيفة السكون. اضغط على هذا الزر SLEEP مرة أخرى، سيتم إلغاء وظيفة التشغيل الهادئ.


وضع التشغيل

1. في الوضع "بارد"، "جاف" بعد 1 ساعة من بدء وضع السكون، ستصبح درجة الحرارة أعلى بمقدار 1° درجة مئوية عن إعداد درجة الحرارة. وبعد 1 ساعة، ترتفع درجة الحرارة بمقدار 1° درجة مئوية أخرى. سوف تعمل الوحدة لمدة 6 ساعات أخرى ثم تتوقف. تكون درجة الحرارة أعلى من إعداد درجة الحرارة لذا لن تكون درجة حرارة الغرفة منخفضة جدًا لنومك.

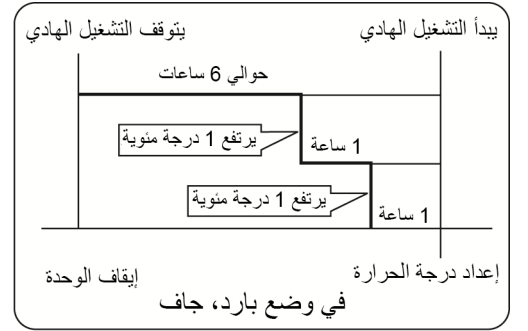

2. في الوضع "ساخن"

بعد 1 ساعة من بدء وضع السكون، ستصبح درجة الحرارة أقل بمقدار 2° درجة مئوية عن إعداد درجة الحرارة. وبعد 1 ساعة أخرى، تقل درجة الحرارة بمقدار 2° درجة مئوية أخرى. بعد 3 ساعات أخرى، ترتفع درجة الحرارة بمقدار 1° درجة مئوية. ستعمل الوحدة لمدة 3 ساعات إضافية ثم تتوقف. تكون درجة الحرارة أقل من إعداد درجة الحرارة حتى لا تكون درجة حرارة الغرفة مرتفعة جدًا أثناء النوم.

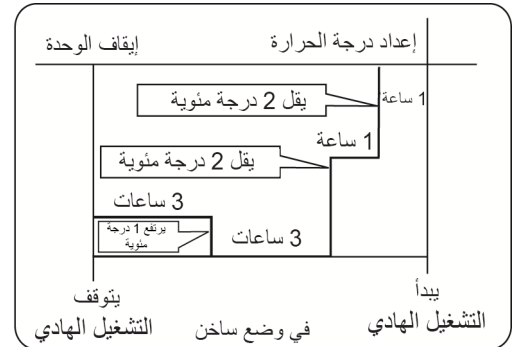

3. في الوضع "تلقائي" تعمل الوحدة في وضع النوم المطابق - يتم ضبط وضع النوم المطابقين اسب مع وضع التشغيل المحدد تلقائيًا. 4. في وضع "المروحة" لا يوجد بهذا الوضع وظيفة "النوم".

التشغيل

التشغيل الأساسي

التشغيل الطارئ والتشغيل التجريبي

التشغيل الطارئ:

- استخدم هذا الجراء فقط عندما تكون وحدة التحكم عن بعد معيبة أو مفقودة، ومع تشغيل وظيفة الطوارئ، يمكن أن يعمل مكيف الهواء تلقائيًا لفترة.
- عند الضغط على مفتاح التشغيل الطارئ، ستسمع صوت "Pi" مرة واحدة، وهو ما يعني بدء هذه العملية. • عندما يعمل محول الطاقة للمرة الأولى ويبدأ التشغيل الطارئ، سوف تعمل الوحدة تلقائيًا في الأوضاع التالية:




وضع التشغيل	سرعة المروحة	وضع المؤقت	درجة الحرارة المحددة	درجة حرارة الغرفة
COOL (تبريد)	AUTO (تلقائي)	No	26 درجة مئوية	أعلى من 23 درجة مئوية

- يستحيل تغيير إعدادات درجة الحرارة وسرعة المروحة، كما أنه ليس من الممكن التشغيل في وضع المؤقت أو الوضع الجاف.

التشغيل التجريبي:

هو نفس مفتاح الطوارئ.

- استخدم هذا المفتاح في التشغيل التجريبي عندما تكون درجة حرارة الغرفة أقل من 16° درجة مئوية، لا تستخدمه في حالة التشغيل العادي.
- واصل الضغط على مفتاح التشغيل التجريبي لأكثر من ثوان.
- بعد أن تسمع الصوت "Pi" مرتين، ارفع إصبعك عن المفتاح: تبدأ عملية لتبريد وسرعة تدفق الهواء "عالية".
- في وضع التشغيل هذا، سوف يعمل محرك المروحة الخاص بالوحدة الداخلية بسرعة عالية.

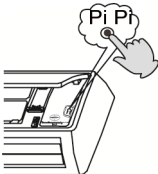

ضبط اتجاه تدفق الهواء

1. عرض حالة تدفق الهواء

الررف الرئيسي

تلقائي/التبريد/جاف/المروحة Cycle ←

ساخن Cycle ←

الوضع 2 لا تظهر حالة أولية على وحدة التحكم عن بعد، سيتم تثبيت الررف الرئيسي على الموضع الحالي

2. ضبط تدفق الهواء الأيسر والأيمن


لكل ضغط على زر المروحة (↔)، تعرض وحدة التحكم عن بعد ما يلي:

وحدة التحكم عن بعد:



تنبيهات:

- عند ضبط الررف باليد، أوقف تشغيل الوحدة.
- عندما تكون الرطوبة مرتفعة، قد يتكثف الماء مع الضبط إلى اليسار أو عند منفذ الهواء إذا كانت جميع فتحات التهوية الرأسية مضبوطة على اليمين.
- ينصح بعدم إبقاء الررف أفقي في الوضع السفلي لمدة طويلة في الوضع "بارد" أو "جاف"، إلّا فقد يحدث تكثف للمياه.

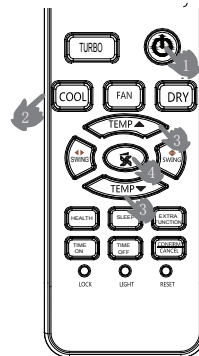

جهاز التحكم عن بعد

1. بدء تشغيل الوحدة اضغط على زر "ON/OFF" في وحدة التحكم عن بعد، سوف تعمل الوحدة.

2. اختيار إعداد درجة الحرارة

اضغط على الزر TEMP▲ TEMP▼

TEMP▲ في كل مرة يتم الضغط على الزر، يزيد إعداد درجة الحرارة بمقدار 1 درجة مئوية، وإذا وصلت الضغط، سيزيد سريعاً TEMP▼ في كل مرة يتم الضغط على الزر، يقل إعداد درجة الحرارة بمقدار 1 درجة مئوية، وإذا وصلت الضغط، سيقول سريعاً اختر درجة الحرارة المطلوبة.

3. وظيفة المروحة


اضغط على زر "FAN".

جهاز التحكم عن بعد A:

جهاز التحكم عن بعد B:

اضغط زر EXTRA FUNCTION للدخول إلى الخيارات الإضافية، عند تدوير الشاشة إلى (⚙️)، سوف يومض (⚙️)، ثم اضغط CONFIRM CANCEL، ادخل إلى وظيفة المروحة.

مع كل ضغط على زر (⚙️) تتغير سرعة المروحة التي: جهاز التحكم عن بعد:




يعمل مكيف الهواء على سرعة المروحة المعروضة، عند ضبط المروحة "على تلقائي"، يقوم مكيف الهواء تلقائيًا بضبط سرعة المروحة وفقًا لدرجة حرارة الغرفة.

وضع التشغيل	جهاز التحكم عن بعد	الملاحظة
AUTO (تلقائي)	⚙️	تحت وضع لتشغيل التلقائي، سوف يعمل مكيف الهواء تلقائيًا باختيار التشغيل "البارد" أو "الساخن" حسب درجة حرارة الغرفة. عند ضبط "المروحة" على "تلقائي"، يقوم مكيف الهواء تلقائيًا بضبط سرعة المروحة وفقًا لدرجة حرارة الغرفة.
COOL (التبريد)	❄️	الوحدة التي بها تبريد فقط لا تحتوي على الشاشات والوظائف المرتبطة بالحرارة.
DRY (جاف)	💧	في وضع "جاف"، عندما تصبح درجة حرارة الغرفة أقل من إعداد درجة الحرارة 2+ درجة مئوية، سوف تعمل الوحدة بشكل متقطع بسرعة منخفضة بغض النظر عن إعداد المروحة.
HEAT (ساخن)	☀️	في الوضع "ساخن"، سيخرج الهواء الساخن بعد فترة قصيرة بسبب وظيفة منع التيار البارد. هذه الوظيفة غير متوفرة في بعض الموديلات.
FAN (المروحة)	⚙️	في وضع تشغيل "المروحة"، لن تعمل الوحدة في الوضع "بارد" أو "ساخن"، ولكن فقط في وضع "المروحة"، لن يكون الإعداد "تلقائي" متاحًا في وضع "المروحة". ويتم تشغيل إعداد درجة الحرارة. عند ضبط "المروحة" على "تلقائي"، يقوم مكيف الهواء تلقائيًا بضبط سرعة المروحة وفقًا لدرجة حرارة الغرفة. في وضع "المروحة"، لن تكون عملية "النوم" متاحة.

القطع والوظائف

الوحدة الداخلية

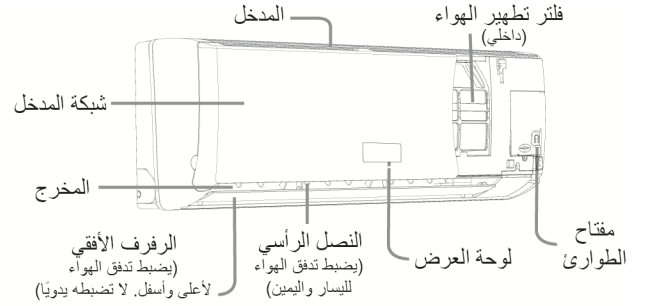

لوحة العرض A



لوحة العرض B




لوحة العرض



1. فتحة مستقبال الإشارة
2. شاشة الحرارة المحيطة عند استقبال إشارة وحدة التحكم عن بعد، تظهر درجة الحرارة المضبوطة.
3. مؤشر وضع التشغيل


لوحة العرض



1. جهاز استقبال الإشارة البعيدة (سيدر صغير عند استقبال إشارة من وحدة التحكم عن بعد)
2. مؤشر الطاق
3. مؤشر وضع المؤقت
4. مؤشر وضع التشغيل
5. شاشة درجة الحرارة المحيطة


قد تختلف شبكة الدخول عن تلك المعروضة في الدليل حسب المنتج الذي تشتريه

الوحدة الخارجية

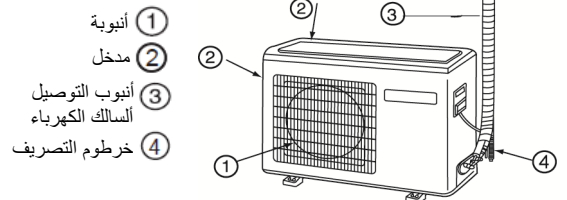

جهاز التحكم عن بعد

وحدة التحكم عن بعد A

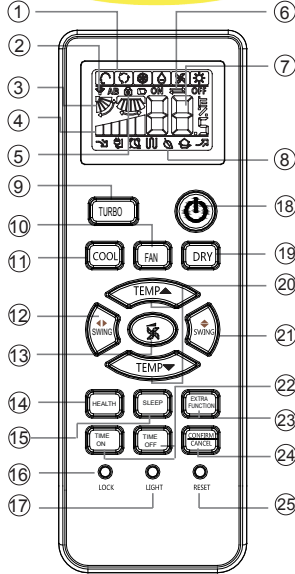


1. عرض الوضع

وضع التشغيل	FAN (المروحة)	DRY (الجاف)	COOL (التبريد)	AUTO (التلقائي)
جهاز التحكم عن بعد	🌀	💧	❄️	🔄

2. شاشة إرسال الإشارة


3. شاشة المروحة

4. شاشة "سرعة المروحة"



5. شاشة القفل الوظيفة الصحية غير متاحة في بعض الوحدات.

وحدة التحكم عن بعد B

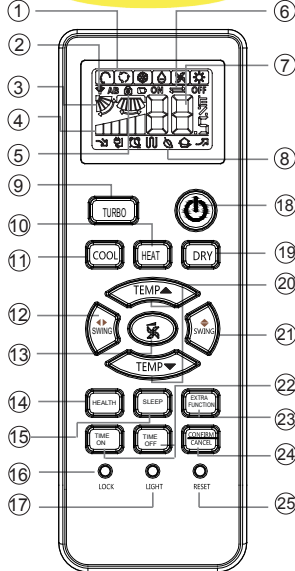


1. عرض الوضع

وضع التشغيل	FAN (المروحة)	DRY (الجاف)	COOL (التبريد)	AUTO (التلقائي)
جهاز التحكم عن بعد	🌀	💧	❄️	🔄

2. شاشة إرسال الإشارة

3. شاشة المروحة

4. شاشة "سرعة المروحة"



5. شاشة القفل الوظيفة الصحية غير متاحة في بعض الوحدات.

6. شاشة إيقاف المؤقت

7. شاشة "درجة الحرارة"

8. شاشة الوظائف الإضافية

وضع التشغيل	مادي	الوقت	الصحة	توربيني
جهاز التحكم عن بعد	🌀	🕒	🛡️	🔥

9. أزرار توربيني

10. أزرار المروحة

11. زر "بارد"

12. زر المروحة اليسرى/اليمنى

13. زر سرعة المروحة

14. زر الصحة

15. زر السكون

16. زر القفل

17. زر "المصباح"

التحكم في الإضاءة وإطفاء لوحة

عرض LED الداخلية.

18. زر الطاقة/ناعم

19. زر جاف

20. زر "درجة الحرارة"

21. زر المروحة لأعلى/لأسفل

22. زر إيقاف/تشغيل المؤقت

23. زر "الوظيفة الإضافية"

الوظيفة: تدفق الهواء الصحي

تلقائي مروحة

24. وظيفة زر إلغاء/تأكيد: ضبط وإلغاء المؤقت

وغيره من الوظائف الإضافية.

25. زر إعادة الضبط عندما تبدو وحدة التحكم عن بعد

غير طبيعية، استخدم أداة حادة مدببة للضغط على هذا الزر

لإعادة ضبط وحدة التحكم عن بعد.

6. شاشة إيقاف المؤقت

7. شاشة "درجة الحرارة"

8. شاشة الوظائف الإضافية

وضع التشغيل	مادي	الوقت	الصحة	توربيني
جهاز التحكم عن بعد	🌀	🕒	🛡️	🔥

9. أزرار توربيني

10. أزرار التدفئة

11. زر "بارد"

12. زر المروحة اليسرى/اليمنى

13. زر سرعة المروحة

14. زر الصحة

15. زر السكون

16. زر القفل

17. زر "المصباح"

التحكم في الإضاءة وإطفاء

لوحة عرض LED الداخلية.

18. زر الطاقة/ناعم

19. زر جاف

20. زر "درجة الحرارة"

21. زر المروحة لأعلى/لأسفل

22. زر إيقاف/تشغيل المؤقت

23. زر "الوظيفة الإضافية"

الوظيفة: تدفق الهواء الصحي

تلقائي مروحة

24. وظيفة زر إلغاء/تأكيد: ضبط وإلغاء المؤقت

وغيره من الوظائف الإضافية.

25. زر إعادة الضبط عندما تبدو وحدة التحكم عن بعد

غير طبيعية، استخدم أداة حادة مدببة للضغط على هذا الزر

لإعادة ضبط وحدة التحكم عن بعد.

تنبيهات


⚠ تحذير

- يرجى الاتصال بمتجر المبيعات/الصيانة من أجل التركيب.
- لا تحاول تركيب مكيف الهواء بنفسك لأن العمل غير الصحيح قد يسبب صدمة كهربائية أو حريقاً أو تسرباً في الماء.
- في حالة تلف سلك الإمداد الكهربائي، يجب استبداله من قبل الشركة المصنعة أو وكيل الصيانة التابع لها أو غيره من الأشخاص المؤهلين لتفادي التعرض للخطر.
- ليس المقصود من هذه الأجهزة استخدامها من قبل أشخاص (بما فيهم الأطفال) يعانون من ضعف القدرات الجسدية والحسية والعقلية أو عدم وجود الخبرة والمعرفة الكافية، ما لم يتم مراقبتهم أو توجيههم فيما يتعلق باستخدام الجهاز من جانب الشخص المسؤول عن سلامتهم.
- ينبغي الإشراف على الأطفال لضمان عدم عبثهم بالجهاز.
- يمكن استخدام هذا الجهاز بمعرفة الأطفال بدءاً من سن 8 سنوات فما فوق والأشخاص الذين يعانون من ضعف القدرات البدنية أو الحسية أو العقلية أو عدم الخبرة أو المعرفة شريطة توفير الإشراف والتوجيه لهم فيما يتعلق باستخدام الجهاز بطريقة آمنة وفهم المخاطر ذات الصلة. ويجب ألا يعيث الأطفال بالجهاز. يجب ألا يتم التنظيف أو الصيانة المنزلية بواسطة الأطفال بدون إشراف.
- الأجهزة ليست مخصصة للاستخدام مع مؤقت خارجي أو نظام تحكم عن بعد منفصل.
- أصغر أو أكبر $Z_{sysmax}=0.376+0.235j=0.443$ مقاومة قوة مع ترتبط التي المعدات

⚠ تحذير

<p>تأكد من أن الوحدة بها تصريف سليم</p> <p>تطبيق صارم</p>  	<p>استخدم مصدر طاقة حصري بقاطع دائرة</p> 	<p>تأكد من أن الوحدة بها تصريف سليم</p> <p>تطبيق صارم</p> 
<p>عند حدوث شيء غير طبيعي مثل وجود رائحة حريق، أوقف زر التشغيل فوراً واتصل بمسؤول الصيانة المعتمد.</p> <p>تطبيق صارم</p>  	<p>استخدم الفولطية المناسبة</p> <p>تطبيق صارم</p> 	<p>وصل سلك الكهرباء بالمنفذ بشكل كامل</p> <p>تطبيق صارم</p> 
<p>1. تجنب استخدام كابل إطالة 2. لا تركب في المكان الذي فيه أي احتمالية لتسريب الغاز القابل للاشتعال حول الوحدة. 3. لا تعرض الوحدة للبخار أو بخار الغاز.</p> <p>ممنوع</p>  	<p>احذر من إتلاف سلك الطاقة.</p> <p>ممنوع</p> 	<p>لا تستخدم سلك إمداد الطاقة في حزمة.</p> <p>ممنوع</p> 
<p>تجنب إدخال أشياء في مدخل ومخرج الهواء.</p> <p>ممنوع</p>  	<p>لا تمرر تدفق الهواء مباشرة على الأشخاص، خاصة الرضع أو كبار السن.</p> <p>ممنوع</p> 	<p>لا تبدأ أو توقف التشغيل عن طريق فصل سلك الكهرباء</p> <p>ممنوع</p> 

⚠ تنبيه


<p>لا تستخدمها لغرض تخزين الطعام أو الأعمال الفنية.</p> <p>ممنوع</p> 	<p>استنشق الهواء الطلق من وقت لآخر خاص إذا كان هناك أكثر من جهاز غاز يعمل في نفس الوقت.</p> <p>تطبيق صارم</p> 	<p>لا تقم بتشغيل المفتاح إذا كانت يدك مبللة.</p> <p>ممنوع</p> 	<p>لا تضع الحيوانات أو النباتات في المسار المباشر لتدفق الهواء.</p> <p>ممنوع</p> 
<p>لا تركب الوحدة بالقرب من مدفأة أو غيرها من أجهزة التدفئة.</p> <p>ممنوع</p> 	<p>تأكد من أن حامل التركيب في وضع جيد</p> <p>ممنوع</p> 	<p>لا تسكب الماء على الوحدة للتنظيف.</p> <p>ممنوع</p> 	<p>لا تضع مزهرية أو حاويات ماء على الوحدة.</p> <p>ممنوع</p> 



مكيف هواء الحجرة منفصل الوحدات

دليل المستخدم

UN-GHS12 T3 PRO

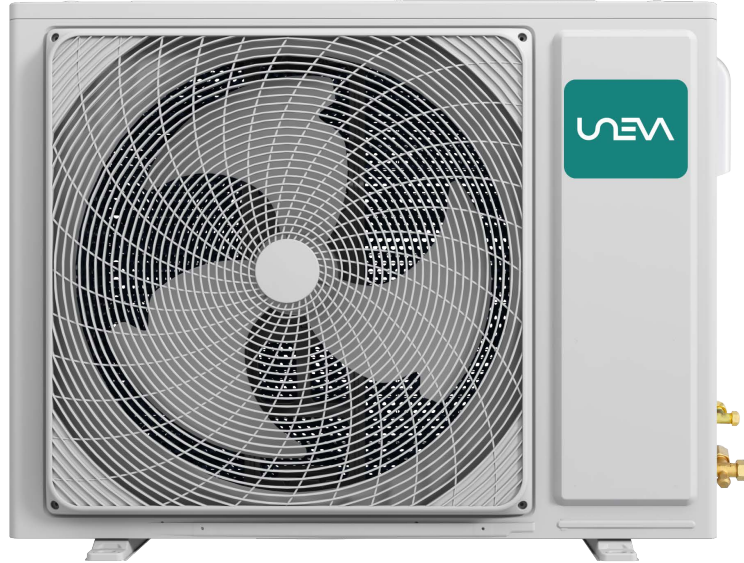

يرجى قراءة دليل التشغيل هذا قبل استخدام مكيف الهواء.

احتفظ بدليل التشغيل هذا للرجوع إليه مستقبلاً.

0011528944