

Purpose of this QRG

- To teach you how to delete a Restriction Definition in the OLT (Oil Sands – Extraction)

Intended Audience for this QRG

- Administrators (Oil Sands – Extraction) in the OLT

Purpose of Restriction Definitions in the OLT

- To describe the details of each restriction (and its reason code), which appears in the Restrictions display grid in the OLT



Prerequisites

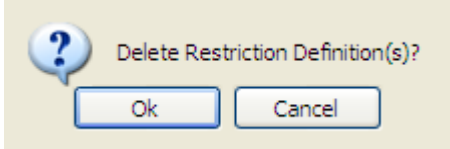
- You must have access to the OLT software application
- You must have Administrator role (Oil Sands – Extraction) in the OLT to complete the procedure described below

Helpful Hints

- 'Restriction' functionality in the OLT is only available to, and used by, Oil Sands – Extraction
- A Restriction is a condition that limits Extraction from achieving a stated production target. Each restriction is attributed for a Functional Location (FLOC). For example if a weigh scale in mining fails, Extraction may be restricted from meeting production targets; therefore they might create a Restriction Definition in the OLT to describe the situation and associate the particular definition to the faulty pump's FLOC.

Procedure

- On the navigation pane, click Restrictions icon  to navigate to the Restrictions screen.
- Click in the Restrictions display grid to select/highlight the Restriction you wish to delete the definition for.
- Click Delete button (located on the middle of your screen)  to delete the selected/highlighted item.

- Click Ok button  to confirm your choice.

- Click Ok button  to acknowledge your delete was successful.