

Purpose of this QRG

- To teach you how to view Restrictions in the OLT

Intended Audience for this QRG

- Supervisors in the OLT
- Operators in the OLT
- Read-only users in the OLT

Purpose of Restrictions in the OLT

- To attribute a reason (code) to a condition which limits Extraction from achieving a particular production target


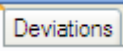
Prerequisites

- You must have access to the OLT software application
- You must have a Supervisor, Operator or Read-only user role in the OLT to complete the procedure described below

Helpful Hints

- Administrators in the OLT must first set up Restriction Definitions before others may view Restrictions
- 'Restriction' functionality in the OLT is only available to, and used by, Oil Sands – Extraction
- Each Restriction is attributed to a FLOC, for example, a weigh scale in mining. If a weight scale fails, Extraction may be restricted from meeting production targets.
- If you wish to view 'Restrictions for 'all' shifts, then navigate to the Deviations screen by clicking on the Deviations tab (located on the top of your screen). Note: the view may vary depending on what your OLT Administrator sets up.

Procedure

- On the navigation pane, click  Restrictions to navigate to the Restrictions screen.
- Click Deviations tab (located on the top of your screen)  to view 'all' Deviations

Note: If you wish to view 'current shift' Deviations only, then navigate back to the Priorities screen, by

clicking the Priorities icon  .