


## AV200 360 Pan Instructions

- Pan servo with external potentiometer – potentiometer needs to be centralised to stop the servo from spinning. The pan pot is not connected to anything and this allows the servo to spin 360 degrees
- Battery tray is fitted to the adaptor plate
- NOTE: large pulley is fixed and the servo attached to the gimbal which turns around the large pulley – just try it it does work☺

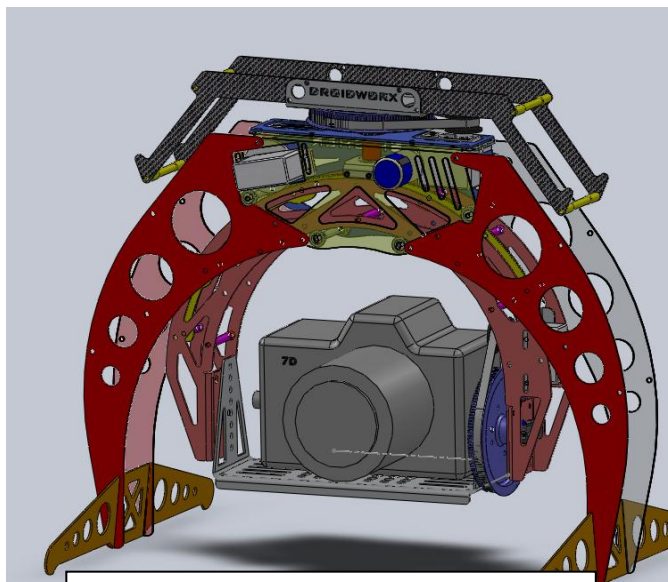

### Two Flanged bearings supplied

**Top Bearing:** Flange must face upwards.  
Bearing inserted from the top

### Pan Servo

Servo Plate fits on top of the servo and the servo is located under the main gimbal frame

### Large Pulley

- Pulley hub must face down

### Two Flanged bearings supplied

**Bottom Bearing:** Flange must face Down,  
Bearing inserted from the bottom

