


Climate Control Assembly (80.10.02)


Removal

- 1 . Remove the instrument panel console.
For additional information, refer to [Instrument Panel Console \(76.25.03\)](#).


- 2 . Release the climate control assembly.
▶ Remove the 4 screws.

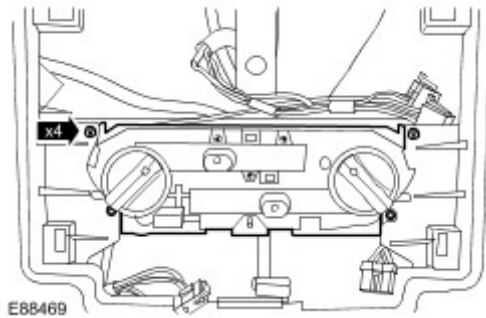


- 3 . Disconnect the blower motor speed control switch electrical connector.

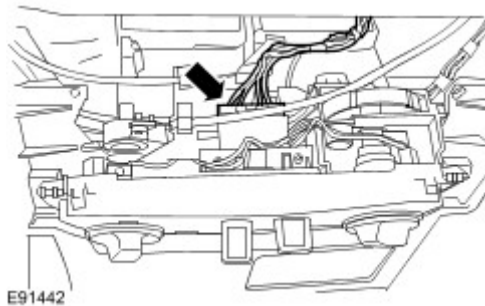


- 4 . Disconnect the recirculation blend door control cable.
▶ Release the clip.

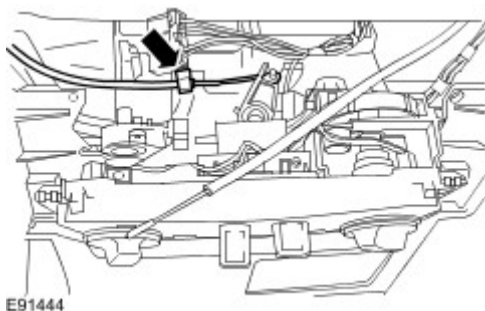

- 5 . Disconnect the heater control valve control cable.
▶ Release the clip.

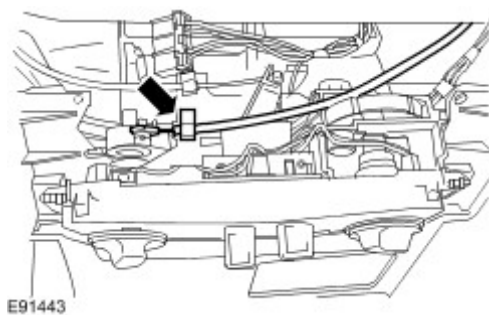

6 . Disconnect the climate control assembly illumination electrical connector.

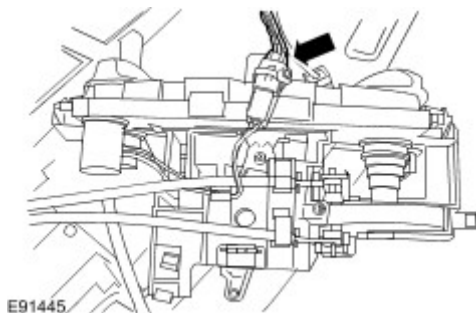


7 . Remove the climate control assembly.



Release the clips.



Disconnect the 2 blend door control cables.

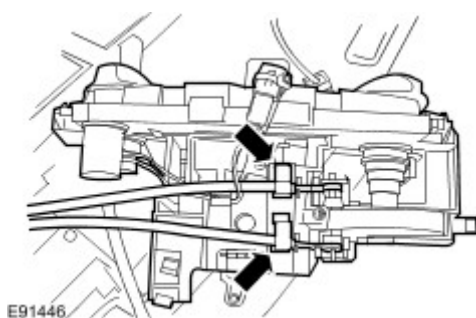


Installation

1 . To install, reverse the removal procedure.


Blower Motor Resistor

Removal

- 1 . Disconnect the electrical connector.

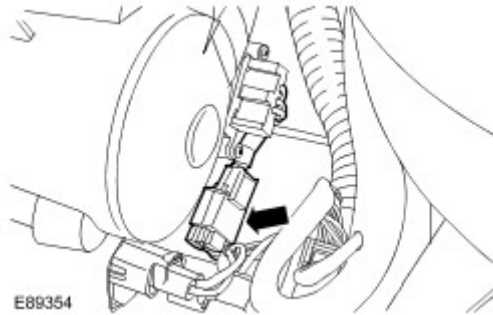

- 2 . Remove the blower motor resistor.
▶ Remove the 2 screws.

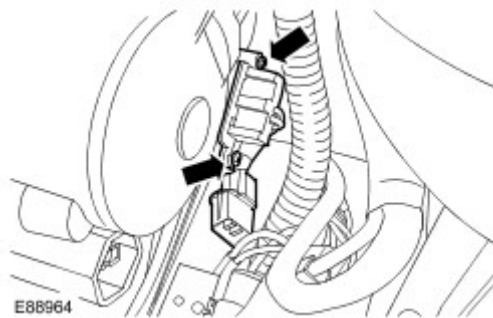

Installation

- 1 . To install, reverse the removal procedure.