


## Exterior Rollover Bar


### Removal

- 1 . Remove Torx bolt, from both sides, securing top of rollover bar to roof mounted bar.
- 2 . With assistance to support rollover bar at windshield, remove 4 Torx bolts, from both sides, securing rollover bar to fender mounting.
- 3 . Remove two Torx bolts, from both sides, securing top bar to roof mounting.
- 4 . Slide top bars rearwards to disengage from main rollover bar assembly.
- 5 . Lift main rollover bar assembly from vehicle.
- 6 . If necessary, remove 2 Torx bolts and nuts, from both sides, and detach lower cross bar from main rollover bar.

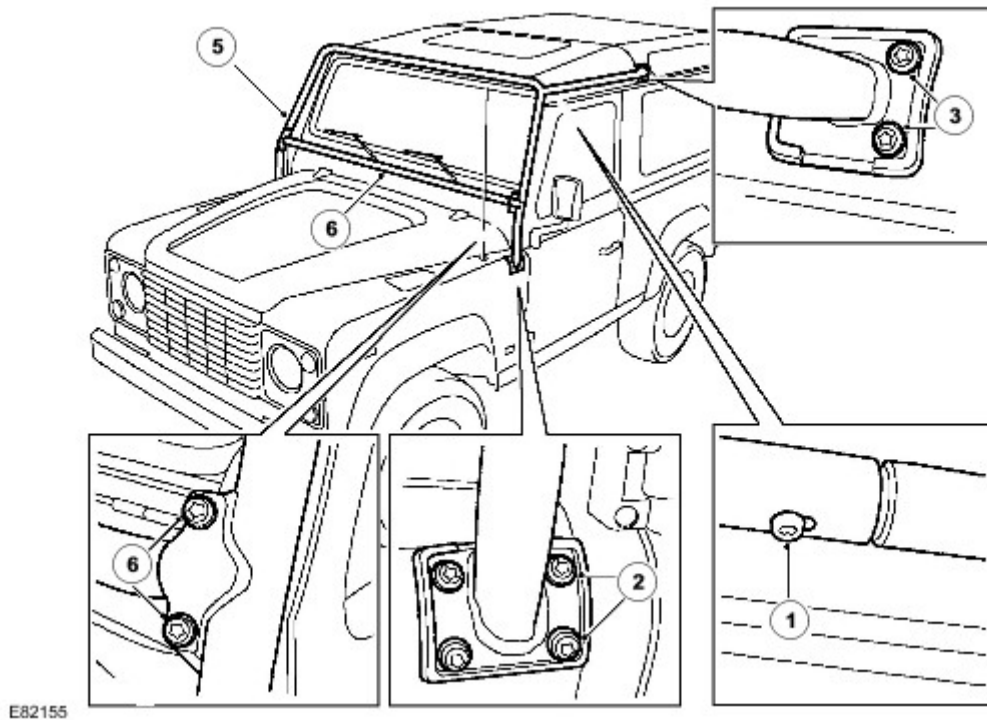

### Installation

- 1 . Locate lower cross bar into main rollover bar mounting brackets and secure with Torx bolts and nuts tightened to 25 Nm (18 lbf.ft).
- 2 . Ensure rubber gaskets are fitted correctly to rollover bar mounting brackets.

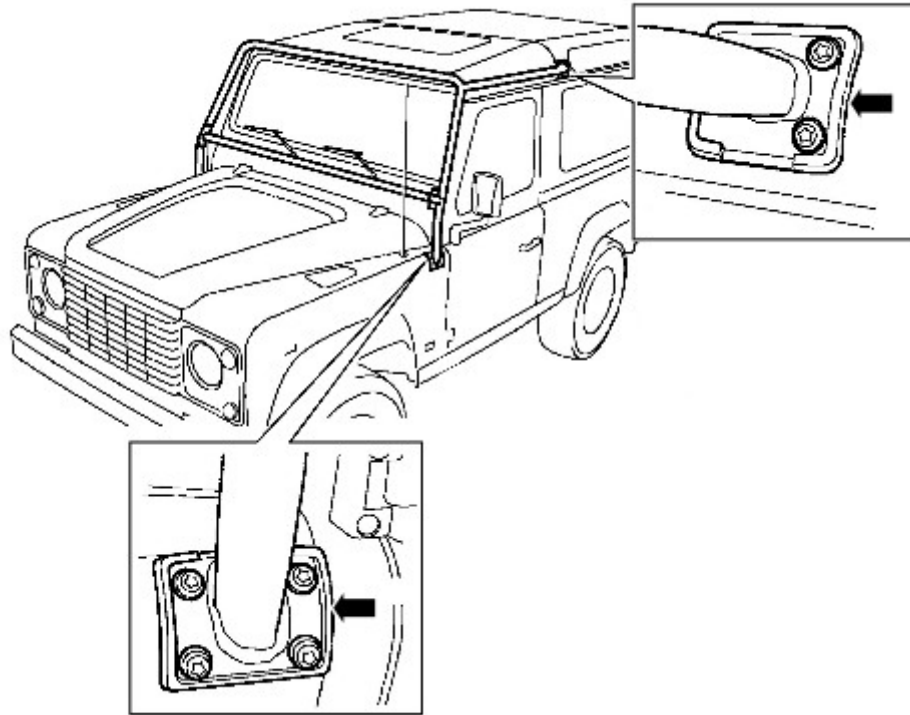


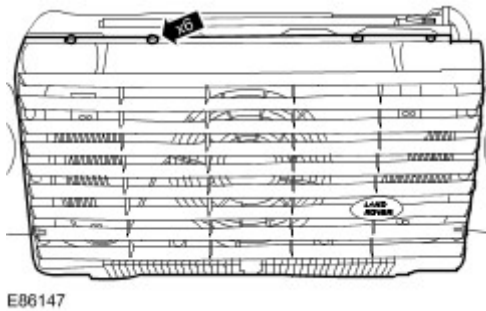
E82105

- 3 . With assistance, lift rollover bar assembly and position on fenders.
- 4 . Slide top bars into main rollover bar, position on roof mounting and secure with Torx bolts to 25 Nm (18 lbf.ft.).
- 5 . Secure rollover bar to both fender mountings with Torx bolts. Tighten to 25 Nm (18 lbf.ft.).
- 6 . Secure top bars to main rollover bar and tighten fixing bolts to 25 Nm (18 lbf.ft.).

## Radiator Grille (76.55.03)

### Removal

- 1 . Disconnect the battery ground cable.  
For additional information, refer to [Battery Disconnect and Connect](#).
- 2 . Remove the radiator grille.  
 Remove the 6 screws.




### Installation

- 1 . To install, reverse the removal procedure.
- 2 . Connect the battery ground cable.  
For additional information, refer to [Battery Connect](#).

## Rear Folding Step

### Removal

- 1 . Remove 2 bolts securing step to chassis member, remove step and collect spacers.

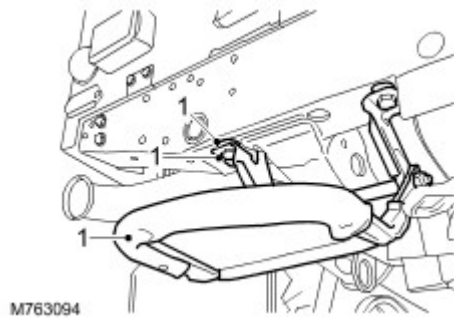


### Installation

- 1 . Position step, fit spacer washers and tighten bolts.

## Towbar

### Removal

- 1 . Remove 4 bolts securing stabilizer bar to rear undershield.
- 2 . Remove 6 bolts securing rear undershield to chassis.
- 3 . Remove rear undershield.
- 4 . Remove bolt, washer and nut from both sides, securing tow bar lower mounting brackets and towing eyes to chassis.
- 5 . Remove 4 bolts and spring washers securing tow bar centre mounting bracket to chassis.
- 6 . Remove both bolts securing 2 tow bar locating tubes in chassis rear cross member.
- 7 . Remove 2 bolts securing tow bar top mounting brackets to chassis.
- 8 . With assistance, withdraw tow bar assembly from chassis.

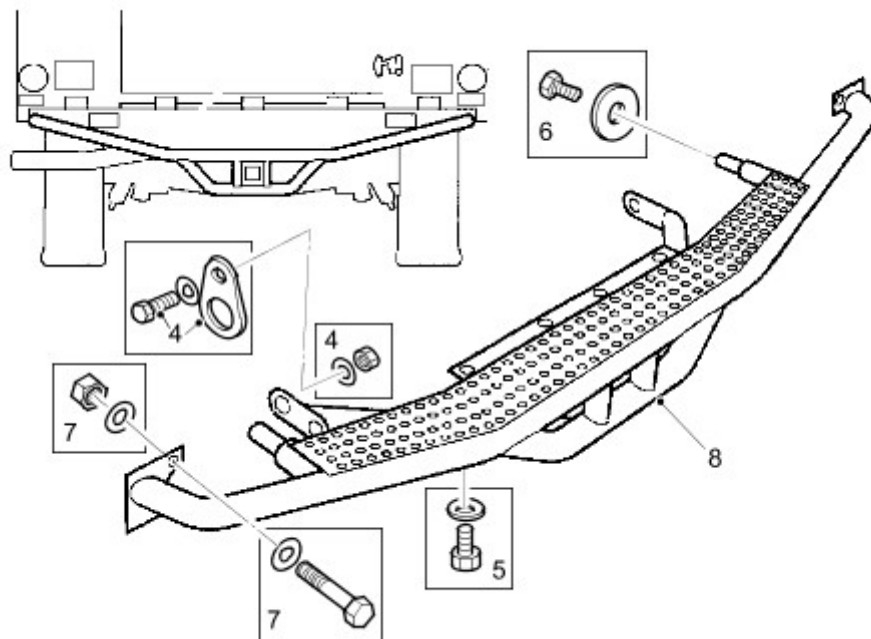

### Installation

- 1 . With assistance, lift tow bar assembly and locate both tubes in chassis crossmember.
- 2 . Secure top tow bar mounting brackets to chassis but do not fully tighten fixings.
- 3 . Secure tow bar locating tubes to rear of chassis and tighten bolts to 25 Nm (18 lbf.ft).
- 4 . Secure tow bar centre mounting bracket to underside of chassis and tighten bolts to 25 Nm (18 lbf.ft).
- 5 . Position towing eyes to lower mounting brackets and secure to chassis and tighten bolts to 25 Nm (18 lbf.ft).

- 6 . Fully tighten tow bar top mounting bracket bolts to 25 Nm (18 lbf.ft).
- 7 . Fit rear undershield and secure to chassis with bolts.
- 8 . Fit bolts securing rear stabilizer bar and tighten to 30 Nm (22 lbf.ft).