

Specifications

Torque specifications

Description	Nm	lb-ft
Clock support bracket	1	1


Clock (88.15.07)

Removal


- 1 . Disconnect the battery ground cable.
For additional information, refer to [Battery Disconnect and Connect](#)
- 2 . Remove the audio unit.
For additional information, refer to [Audio Unit \(86.50.81\)](#)
- 3 . Release the instrument panel console.



- 4 . Disconnect the 6 electrical connectors.

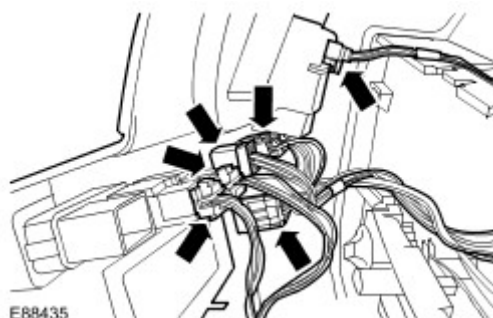


- 5 . Remove the instrument panel console.
▶ Disconnect the 7 electrical connectors.

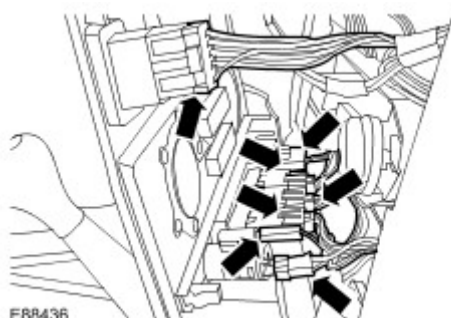

- 6 . Remove the clock support bracket.
▶ Remove the 4 screws.



7 . Remove the clock.

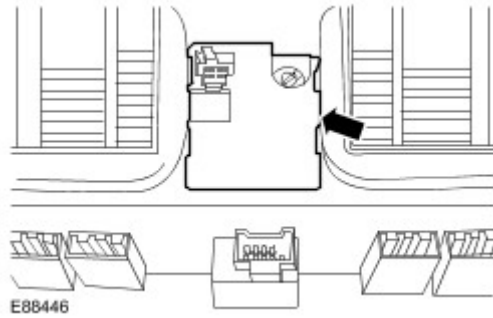

Installation

- 1 . To install, reverse the removal procedure.
- 2 . Connect the battery ground cable.
For additional information, refer to [Battery Connect](#).