


Roof Opening Panel (76.84.01)

Removal

- 1 . Open roof opening panel fully.
- 2 . Disengage spring lock from operating handle catch.
- 3 . Holding roof opening panel at both sides, release hinges from locating brackets at front of outer frame.
- 4 . Remove roof opening panel.
- 5 . Starting from centre rear, peel headlining finisher from inner frame.
- 6 . Remove 18 screws securing inner frame to outer frame and detach inner frame.
- 7 . **NOTE:**
Assistance may be required to remove the sun roof assembly.

Lift outer frame from roof.

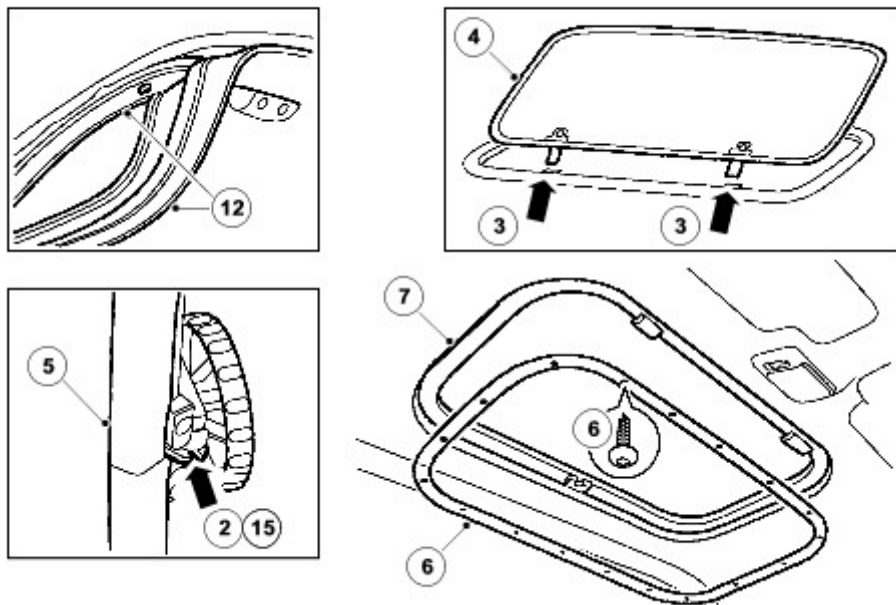

J6054

Installation

- 1 . Clean roof area around outer frame seating.
- 2 . Position outer frame on roof.
- 3 . Instal inner frame to headlining and secure to outer frame with 18 screws but do not fully tighten.
- 4 . Check alignment of inner and outer frames with roof mounting and headlining, adjust as necessary, and fully tighten fixing screws to 10 Nm (7 lbf.ft).
- 5 . Starting from centre rear, instal headlining finisher lip into locating channel of inner frame.

- 6 . Press finisher firmly over inner frame and continue around complete frame, ensuring finisher lies flat on headlining.
- 7 . Fit roof opening panel hinges fully into locating brackets on outer frame and lower the glass panel.
- 8 . Engage operating handle catch with spring lock of outer frame and close roof opening panel.