


Interior Mirror (76.10.51)

Removal

- 1 . Prise interior mirror arm from mounting plate.
- 2 . Remove 3 screws and remove mounting plate from headlining.

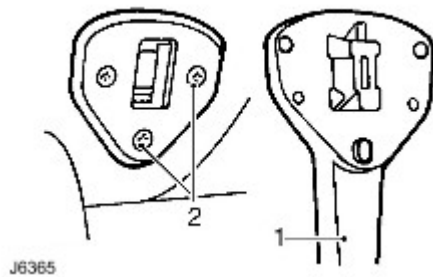

Installation

- 1 . Install mounting plate to headlining.
- 2 . Locate lower lug of mirror arm in mounting plate aperture.
- 3 . Press mirror arm firmly to engage the spring clip.