


Interior Trim

Fascia Console

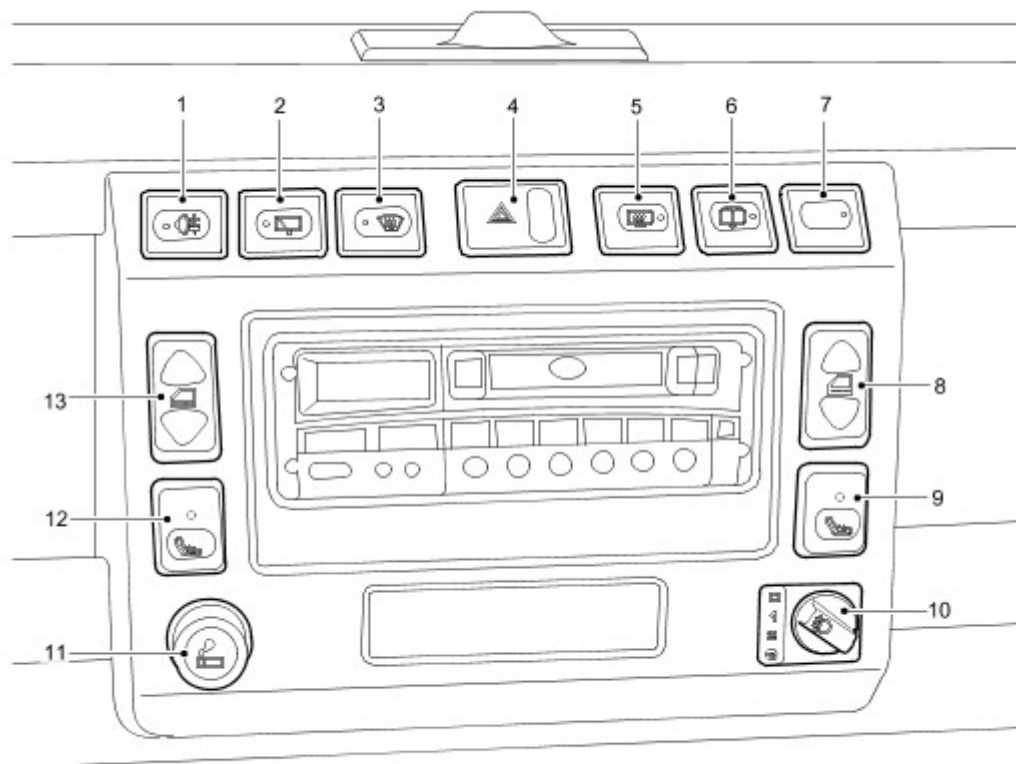

M865561A

Item	Part Number	Description
1		Rear fog lamp switch
2		Rear wiper switch
3		Heated front screen switch (if fitted)
4		Hazard warning lamp switch
5		Heated rear window switch
6		Rear washer switch
7		Front fog lamps switch (if fitted)
8		RH front window switch
9		RH heated front seat switch (if fitted)
10		Headlamp levelling control switch
11		Cigar lighter (if fitted)
12		LH heated front seat switch (if fitted)
13		LH front window switch


The console comprises a plastic moulding secured to the fascia with five screws. The new console allows existing switches to be repositioned and has provided the opportunity to commonise the switches with other Land Rover models.

A central cut-out in the console provides for the installation of the radio, where fitted, or a coin tray for markets without a standard radio installation.

Cowl Side Trim Panel (76.13.27)

Removal

- 1 . Raise the seat cushion and fit stowage strap.
- 2 . Remove the rear quarter trim panel.
For additional information, refer to [Rear Quarter Trim Panel \(76.13.12\)](#)
- 3 . Remove the rear door speaker.
For additional information, refer to [Rear Door Speaker \(86.50.12\)](#)
- 4 . Peel back carpet and remove 2 screws securing cowl side trim panel to wheel arch.
- 5 . Prise top edge of cowl side trim panel down to release from body channel.
- 6 . Remove the cowl side trim panel.

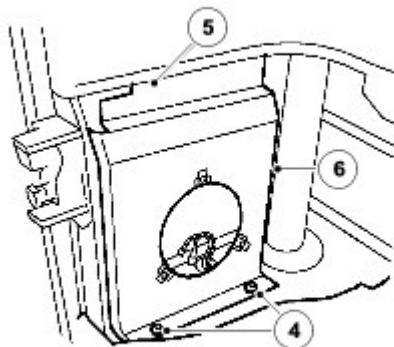

J6051


Installation

- 1 . Position the cowl side trim panel on wheel arch.
- 2 . Press top edge of cowl side trim panel down firmly and locate under body channel.
- 3 . Secure cowl side trim panel to wheel arch with screws and reposition carpet.
- 4 . Fit the rear door speaker.
For additional information, refer to [Rear Door Speaker \(86.50.12\)](#)
- 5 . Fit the rear quarter trim panel.
For additional information, refer to [Rear Quarter Trim Panel \(76.13.12\)](#)

C-Pillar Upper Trim Panel - 90/Station Wagon (76.13.35)

Removal

- 1 . Remove rear seat squab.
For additional information, refer to
For additional information, refer to [Rear Seat Backrest](#)
- 2 . Remove rear quarter trim panel.
For additional information, refer to [Rear Quarter Trim Panel \(76.13.12\)](#)
- 3 . Prise cap from front seat belt upper guide retaining bolt.
- 4 . Unscrew retaining bolt and remove seat belt from 'B' pillar.
- 5 . Carefully prise trim stud from 'B' pillar.
- 6 . Remove 4 bolts securing side trim panel to body side.
- 7 . Release top edge of side trim panel by striking upwards with the hand to disengage 3 spring clips.

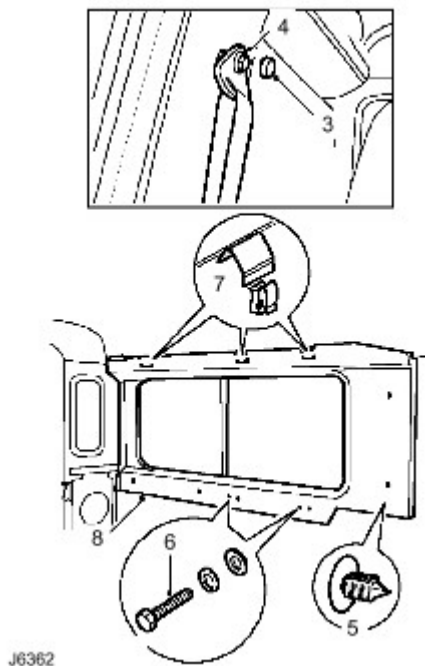

- 8 . Lift trim panel from window surround and remove from vehicle.

Installation


- 1 . Install new spring clips to the 3 brackets on top edge of side trim panel.
- 2 . Align trim panel, ensuring it is correctly positioned around side window.
- 3 . Locate trim panel spring clips on inner cant rail and press firmly down to secure top edge of trim panel.
- 4 . Align bosses of trim panel with body side fixing holes and secure with 4 bolts and washers. Do not fully tighten at this stage.

- 5 . Install trim stud to secure bottom edge of trim panel to 'B' pillar.
- 6 . Secure seat belt guide to 'B' pillar, tighten bolt to 32 Nm (24 lbf.ft) and install cap.
- 7 . Install rear quarter trim panel.
For additional information, refer to [Rear Quarter Trim Panel \(76.13.12\)](#)
- 8 . Install rear seat squab.
For additional information, refer to
For additional information, refer to [Rear Seat Backrest](#)


C-Pillar Upper Trim Panel - 110/Station Wagon (76.13.35)

Removal


- 1 . Remove rear bench seat.
For additional information, refer to
For additional information, refer to [Third Row Seat \(78.10.39\)](#)
- 2 . Remove rear quarter trim panel.
For additional information, refer to [Rear Quarter Trim Panel \(76.13.12\)](#)
- 3 . Prise finisher cap from rear seat belt upper guide bracket retaining bolt.
- 4 . Unscrew bolt and remove guide bracket from 'C' pillar.
- 5 . Remove bolt securing seat belt to wheel arch mounting.

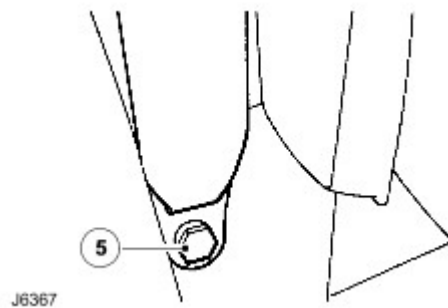

- 6 . Prise trim panel cap fastener from 'C' pillar.

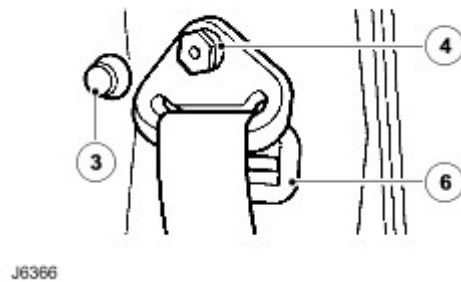

- 7 . Remove seat belt aperture finisher from side trim panel.
- 8 . Remove screw and release seat belt clip from 'C' pillar.
- 9 . Remove fixings securing bottom edge of trim panel to body side.

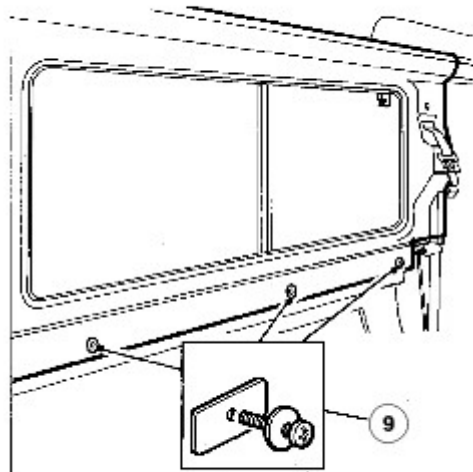

J6368

- 10 . Release top edge of trim panel by striking upwards with the hand to disengage 3 spring clips.
- 11 . Lift trim panel from window surround and feed seat belt through panel aperture.
- 12 . Remove trim panel from vehicle.

Installation

- 1 . Install new spring clips to the 3 brackets on top edge of side trim panel.
- 2 . Feed seat belt through aperture in trim panel and install finisher.
- 3 . Align trim panel, ensuring it is correctly positioned around side window.
- 4 . Locate trim panel spring clips on inner cant rail and press firmly down to secure top edge of trim panel.
- 5 . Align bosses of trim panel with body side fixing holes and secure with bolts or screws. If individual type seats are fitted do not fully tighten fixings at this stage.
- 6 . Install seat belt clip to 'C' pillar.
- 7 . Install trim panel cap fastener to 'C' pillar.
- 8 . Install seat belt to wheel arch. Tighten bolt to 32 Nm (24 lbf.ft).
- 9 . Install seat belt guide bracket to 'C' pillar. Tighten bolt to 32 Nm (24 lbf.ft) and fit finisher cap.
- 10 . Install rear quarter trim panel.
For additional information, refer to [Rear Quarter Trim Panel \(76.13.12\)](#)
- 11 . Install rear bench seat.
For additional information, refer to [Third Row Seat \(78.10.39\)](#)

Engine Cover (12.30.50)


Removal

1 . **NOTE:**

Note the routing of the engine wiring harness.

Remove the engine cover.

➤ Remove the 2 bolts.

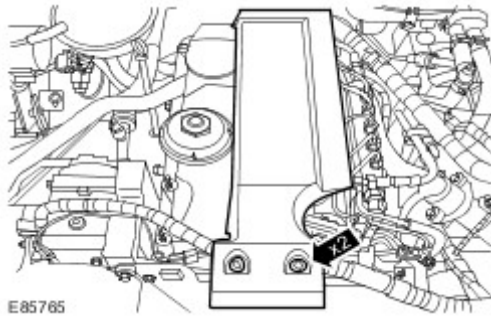

Installation

1 . **NOTE:**

Make sure the engine wiring harness is routed correctly.

To install, reverse the removal procedure.

Front Door Trim Panel (76.34.01)

Removal


- 1 . Remove 2 screws securing door pull and remove door pull.




- 2 . Remove screw securing door release escutcheon and remove escutcheon.



- 3 . Remove sill button guide.

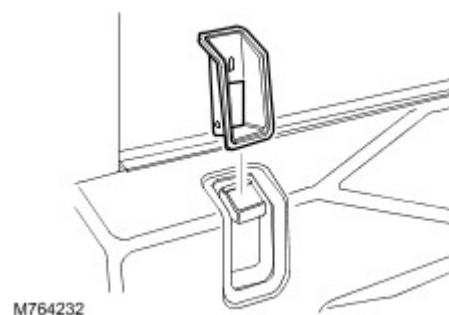

- 4 . Remove 2 studs securing trim casing.

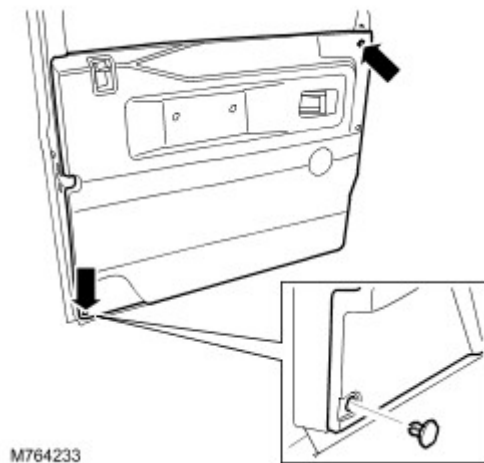


5 . Using a trim removal tool, release 11 fasteners and remove trim casing.

6 . **NOTE:**

Do not carry out further dismantling if component is removed for access only.

Remove fasteners and anti-vibration pad from trim casing

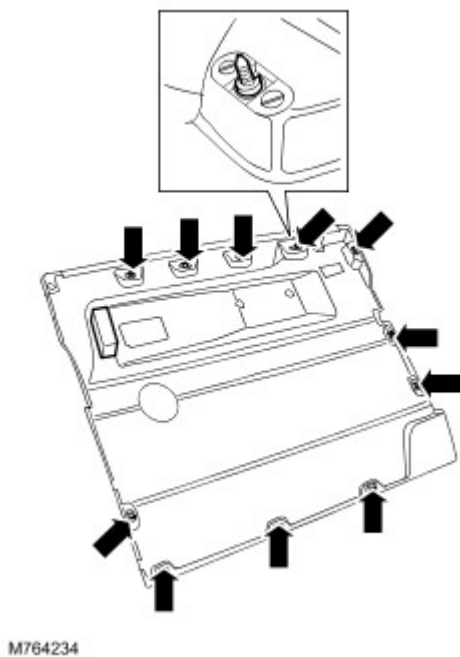


Installation

- 1 . Instal anti-vibration pad and fasteners to trim casing.
- 2 . Position trim casing, align fasteners with holes in door and press firmly into position.
- 3 . Instal trim studs to casing.
- 4 . Instal sill button guide.
- 5 . Instal escutcheon to door handle and secure with screw.
- 6 . Instal door pull and secure with screws.

Front Headliner - 90/Station Wagon

Removal

- 1 . Remove sun roof headlining finisher.
- 2 . Remove sun visors.
For additional information, refer to [Sun Visor](#)
- 3 . Remove interior lamp.
For additional information, refer to [Interior Lamp](#).
- 4 . Remove interior mirror and mounting plate.
For additional information, refer to [Interior Mirror \(76.10.51\)](#)
- 5 . Remove 4 retaining screws and detach both 'A' post trims.
- 6 . Remove caps and unscrew front seat belt fixing bolts from 'B' posts.
- 7 . Carefully prise side trim panel cap fastener from 'B' posts.
- 8 . Carefully prise 2 cap fasteners, from both sides, securing headlining to body at door aperture.
- 9 . Carefully prise out 5 cap fasteners securing front and rear headlinings to roof.
- 10 . From both sides, pull side trim panel inwards enough to release rear corners of front headlining.

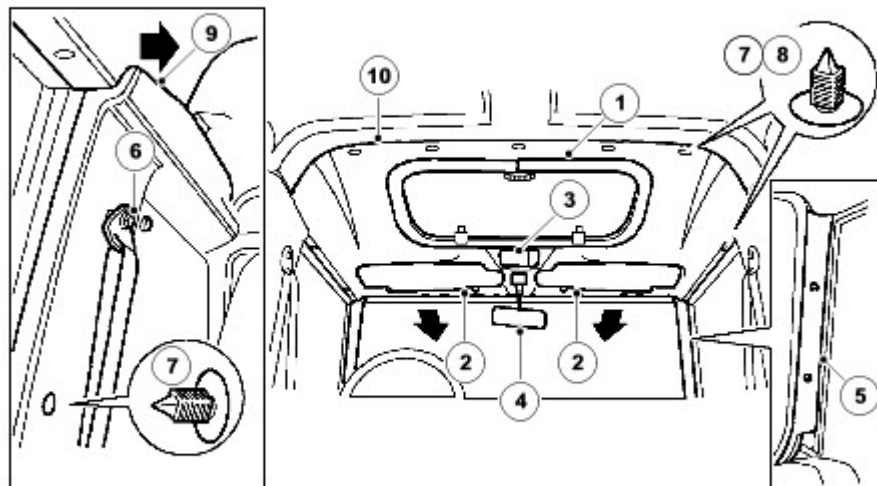

J6364

11 . NOTE:

Take care not to bend the headlining on removal and refitting.

Lower headlining and remove from vehicle.


Installation

- 1 . With assistance, raise headlining to roof.
- 2 . Carefully pull side trim panel inwards, on both sides, and slide headlining behind trim panel.
- 3 . Position front headlining into recess of rear headlining and secure both to roof mounting brackets with 5 cap fasteners.
- 4 . Secure both sides of front headlining to body at door apertures with cap fasteners.
- 5 . Fit side cap fasteners at 'B' posts.
- 6 . Secure seat belts to 'B' posts and tighten bolts to 32 Nm (24 lbf/ft). Fit caps to bolts.
- 7 . Fit 'A' post trims.
- 8 . Fit interior mirror.
For additional information, refer to [Interior Mirror \(76.10.51\)](#)
- 9 . Fit interior lamp.
For additional information, refer to [Interior Lamp](#)
- 10 . Fit sun visors.
For additional information, refer to [Sun Visor](#)
- 11 . Fit sun roof headlining finisher.

Headliner Rear Trim Panel - 110/90/Station Wagon

Removal

- 1 . Remove rear quarter trim panel.
For additional information, refer to [Rear Quarter Trim Panel \(76.13.12\)](#)
- 2 . Remove rear grab handles.
For additional information, refer to [Rear Grab Handle - 110/90/Station Wagon](#)
- 3 . Carefully prise out 6 trim studs securing rear end lining to mounting brackets.
- 4 . Remove headliner rear trim panel.

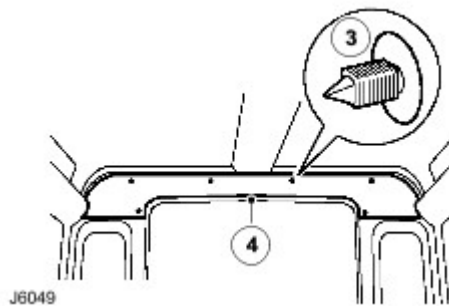


Installation

- 1 . Position rear end lining on mounting brackets and secure with 6 trim studs.
- 2 . Install rear grab handles.
For additional information, refer to [Rear Grab Handle - 110/90/Station Wagon](#)
- 3 . Install rear end trim panel.
For additional information, refer to [Rear Quarter Trim Panel \(76.13.12\)](#)

Interior Rollover Bar

Removal

- 1 . Remove rear seat cushions.
For additional information, refer to
For additional information, refer to [Rear Seat Cushion](#).
- 2 . Remove cowl side trim panels.
For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#).
- 3 . Remove C-pillar upper trim panel.
For additional information, refer to
For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#).
- 4 . Remove floor console extension.
For additional information, refer to
- 5 . Remove 4 bolts securing centre section of rollover bar and seat belt stalks to floor.
- 6 . Remove 2 torx bolts and nuts from both sides and detach centre section of rollover bar assembly.
- 7 . Remove torx bolt, from both sides, securing rollover bar to body side mounting brackets.
- 8 . Remove 3 bolts and washers, from both sides, securing lower rollover bar brackets to front of wheelarch.
- 9 . Remove 2 torx bolts and washers, from both sides, securing rollover bar upper mountings to roof fixing brackets and carefully lower complete assembly to floor.
- 10 . Unscrew retaining bolts, from both sides, and remove front seat belt inertia reels and rear seat belts from rollover bar mounting.
- 11 . Supporting from both sides, raise and tilt rollover bar rearwards to clear wheel arches.

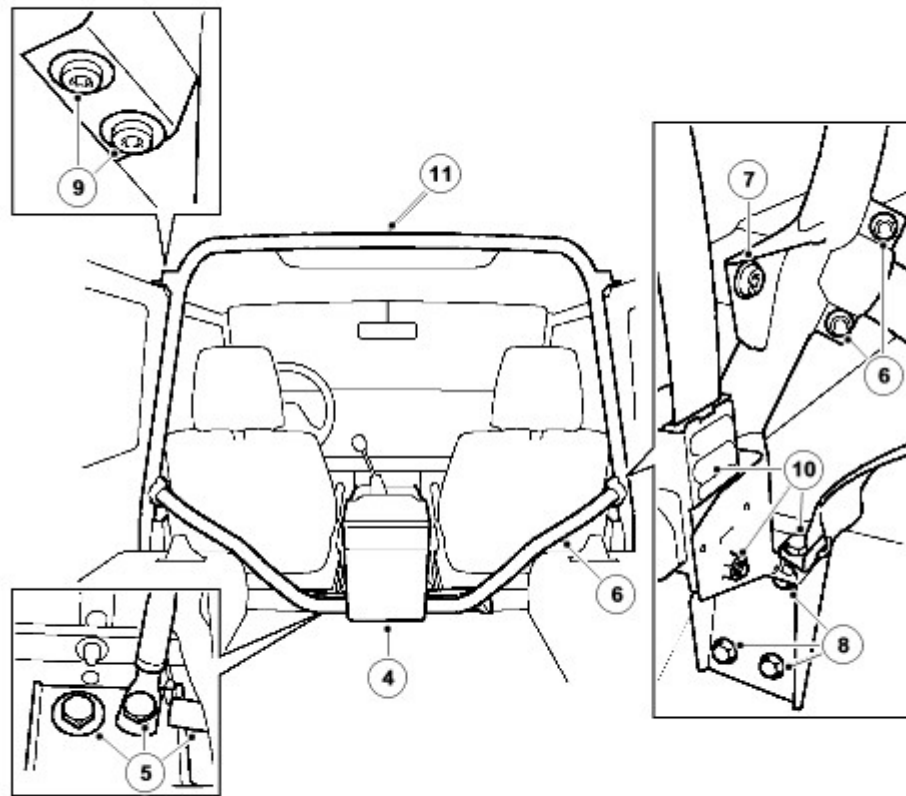

76M2381

12 . NOTE:

Assistance may be required to remove rollover bar.

Remove rollover bar from vehicle.

Installation


- 1 . Supporting from both sides, position rollover bar, engage struts in rear corners and front of side panels. Align on floor.
- 2 . Secure front seat belt inertia reels and rear seat belts to rollover bar mountings. Tighten bolts to 32 Nm (24 lbf.ft).
- 3 . Raise rollover bar assembly and secure to roof mounting brackets. Tighten bolts to 45 Nm (33 lbf.ft).
- 4 . Secure rollover bar to wheel arches. Tighten bolts to 45 Nm (33 lbf.ft).
- 5 . Secure rollover bar to body side mounting brackets, tightening bolts to 45 Nm (33 lbf.ft).
- 6 . Secure centre section to main rollover bar, but do not fully tighten fixing bolts at this stage.
- 7 . Secure seat belt stalks and rollover bar floor mounting brackets to chassis. Tighten bolts to 32 Nm (24 lbf.ft.).
- 8 . Fully tighten rollover bar centre section retaining bolts to 45 Nm (33 lbf.ft).

- 9 . Fit floor console extension.
For additional information, refer to
- 10 . Fit C-pillar upper trim panel.
For additional information, refer to
For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#)
- 11 . Fit cowl side trim panels.
For additional information, refer to [Cowl Side Trim Panel \(76.13.27\)](#)
- 12 . Fit rear seat cushions.
For additional information, refer to
For additional information, refer to [Rear Seat Cushion](#)


Rear Door Trim Panel (76.34.04)

Removal

- 1 . Remove screw securing door handle escutcheon.
- 2 . Remove escutcheon.
- 3 . Remove interior lock button bezel.
- 4 . Remove retaining clip and remove door glass regulator handle.
- 5 . Release covers and remove 2 screws securing door pull to door.

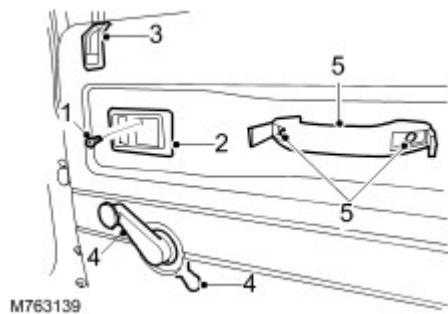

- 6 . Carefully release 12 clips securing trim casing to door and remove door casing.

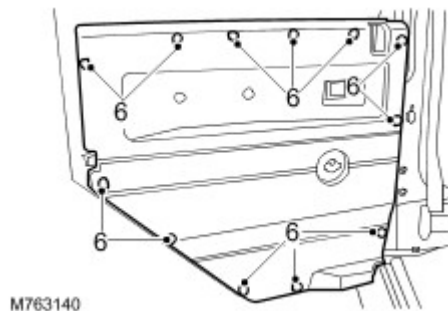


Installation

- 1 . Instal trim casing to door and secure with clips.
- 2 . Instal door glass regulator handle.
- 3 . Instal escutcheon to door handle and tighten screw.
- 4 . Instal door lock button bezel.
- 5 . Instal door pull and secure with screws.

Rear Grab Handle - 110/90/Station Wagon

Removal

- 1 . Carefully prise top and bottom edges of finisher caps from grab handle and then hinge outwards to gain access to fixing screws.
- 2 . Remove 4 fixing screws and detach grab handle from rear end trim panel.

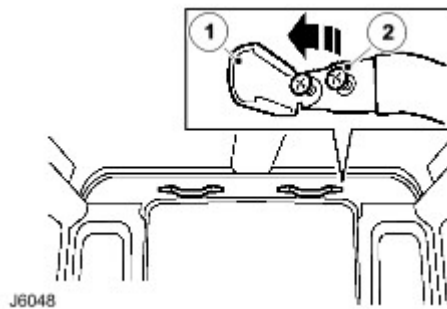

Installation


- 1 . Position grab handle on rear end trim panel and secure with 4 fixing screws.
- 2 . Press finisher caps over screws.

Rear Headliner - 90/Station Wagon

Removal

- 1 . Remove C-Pillar upper trim panels.
For additional information, refer to [C-Pillar Upper Trim Panel - 90/Station Wagon \(76.13.35\)](#)
For additional information, refer to [C-Pillar Upper Trim Panel - 110/Station Wagon \(76.13.35\)](#)
- 2 . Remove headliner rear trim panel.
For additional information, refer to [Headliner Rear Trim Panel - 110/90/Station Wagon](#)
- 3 . Remove rear interior lamp.
For additional information, refer to [Interior Lamp](#)
- 4 . Carefully prise out 5 trim studs securing rear and front headliner to roof mounting brackets.
- 5 . Release front corners of headliner from cant rail, on both sides.
- 6 . Pull headliner forwards sufficiently to clear rear end lining mounting brackets.
- 7 . Release rear corners of headliner from cant rail, on both sides.
- 8 . **NOTE:**
Take care not to bend headliner on removal and refitting.

Lower rear headliner from roof and remove from vehicle.

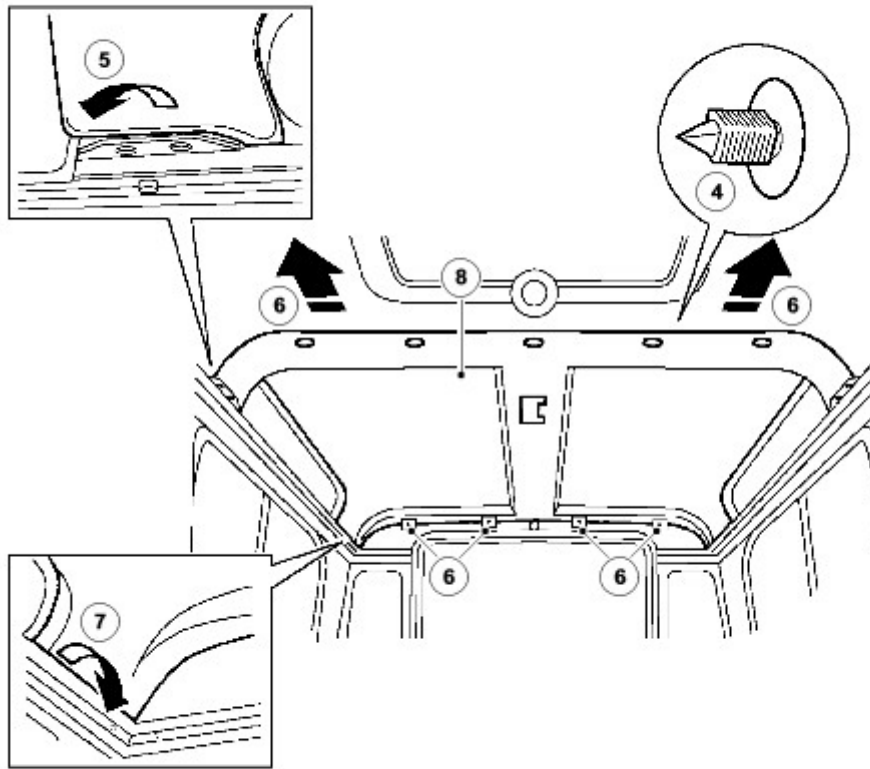

J6363

Installation

- 1 . With assistance, position rear headliner to roof and locate rear corners in cant rail.
- 2 . Push headliner rearwards and position over rear end lining mounting brackets.
- 3 . Locate front corners of headliner in cant rail.
- 4 . Position front edge of rear headliner over front headliner and secure with trim studs.
- 5 . Adjust rear headliner to achieve good fit at all corners.
- 6 . Instal rear interior lamp.
For additional information, refer to [Interior Lamp](#)
- 7 . Instal headliner rear trim panel.
For additional information, refer to [Headliner Rear Trim Panel - 110/90/Station Wagon](#)
- 8 . Instal C-pillar upper trim panels.
For additional information, refer to [C-Pillar Upper Trim Panel - 90/Station Wagon \(76.13.35\)](#)
For additional information, refer to [C-Pillar Upper Trim Panel - 110/Station Wagon \(76.13.35\)](#)

Steering Column Shrouds (57.40.29)

Removal

- 1 . Remove the steering wheel center pad.




- 2 . Remove the instrument cluster lower finisher.

▶ Remove the 2 screws.




- 3 . Release the 3 grommets from the steering column shrouds.

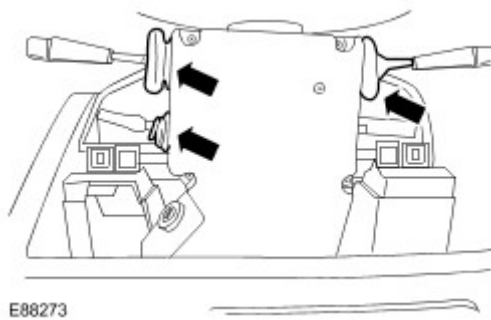


- 4 . Remove the grommet.




- 5 . Remove the 6 screws.

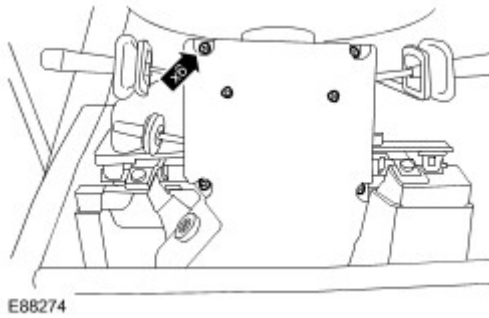

- 6 . Remove the upper steering column shroud.

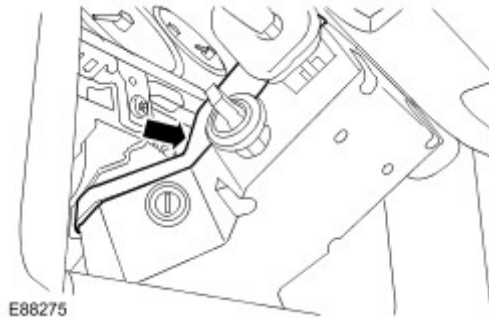


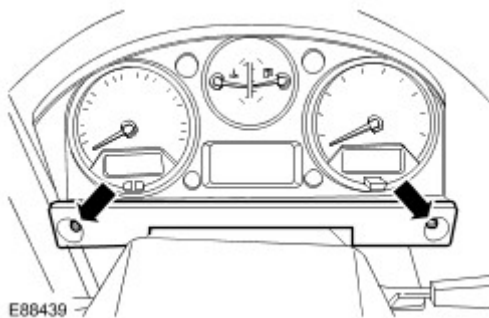
- 7 . Remove the lower steering column shroud.

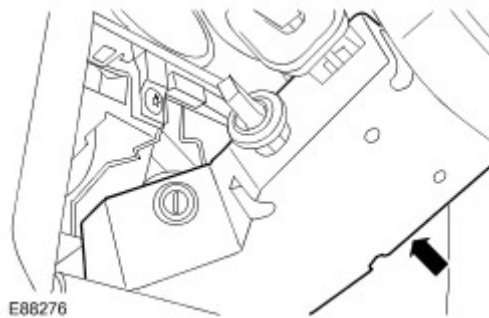

Installation

- 1 . To install, reverse the removal procedure.


 Tighten to 2 Nm (1 lb.ft).



Sun Visor

Removal

- 1 . Raise sun visor.

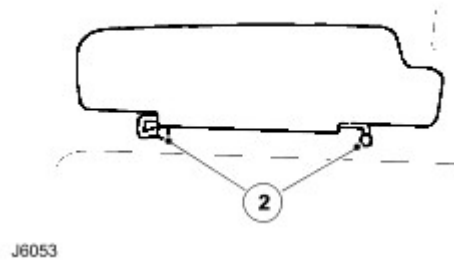

- 2 . Remove 2 screws and collect sun visor.


Installation

- 1 . Position sun visor and secure with 2 screws.


Taildoor Trim Panel (76.34.09)

Removal


- 1 . Remove the taildoor trim panel trim finisher.

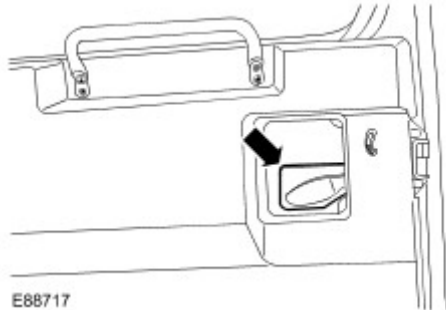

- 2 . Remove the taildoor grab handle.
▶ Remove the 4 screws.

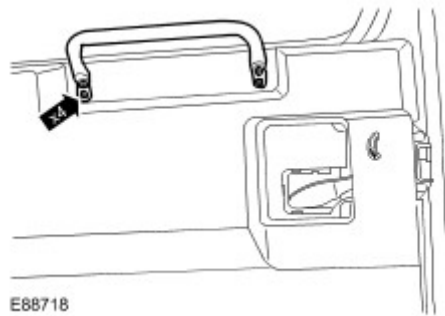

- 3 . Remove the taildoor trim panel.
▶ Release the 9 clips.

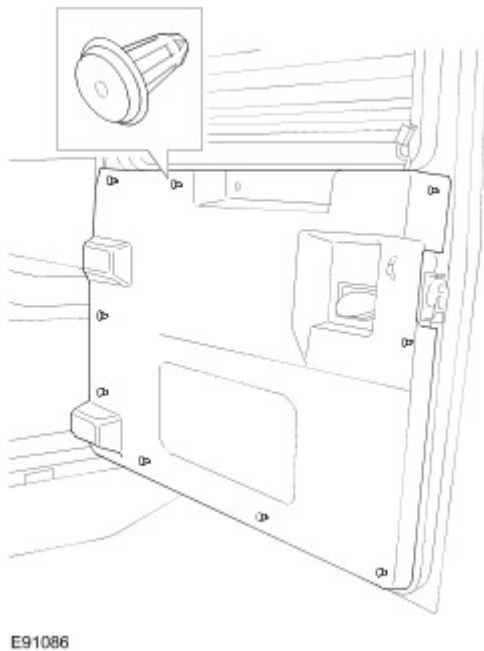

4 . **NOTE:**

Do not carry out further dismantling if component is removed for access only.

Remove the 9 clips from the taildoor trim panel.

Installation

1 . To install, reverse the removal procedure.

▶ Tighten to 6 Nm (4 lb.ft).

