

Front Rocker Panel

Removal

- 1 . Remove bolts securing front rocker panel to body, discard seal.

Installation

- 1 . Prepare and clean panel joint faces. Refit new seal.



M772111

- 2 . Reverse removal procedure.

Rear Rocker Panel

Removal


NOTE:

When replacing the rear rocker panel, the dogleg lower panel must also be replaced.

- 1 . Disconnect both battery leads, negative lead first.
- 2 . Remove door aperture seal.
- 3 . Remove rear wheelhouse eyebrow.
- 4 . Remove rivets and bolts securing rocker panel and dogleg panel to the body.

Installation

- 1 . Prepare and clean panel joint faces.

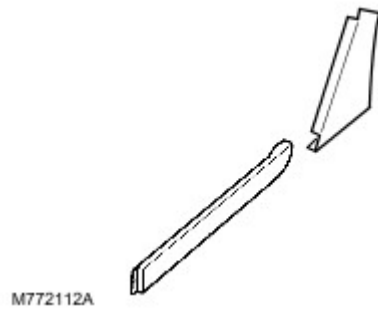

- 2 . Reverse removal procedure.

B and C-Pillar Assembly

Removal


- 1 . Disconnect both battery leads, negative lead first.
- 2 . Remove rear door and striker.
- 3 . Remove front safety belt retractor.
For additional information, refer to
For additional information, refer to [Front Safety Belt Retractor \(76.73.13\)](#).
- 4 . Remove front and rear carpets.
- 5 . Remove front seat.
- 6 . Remove rear seat.
- 7 . Remove front, centre and rear sections of headlining.
- 8 . **NOTE:**
Assembly is held on with bolts.

Remove front and rear rocker panels.
For additional information, refer to [Front Rocker Panel](#).

For additional information, refer to [Rear Rocker Panel](#).

Installation

- 1 . Prepare and clean panel joint faces.

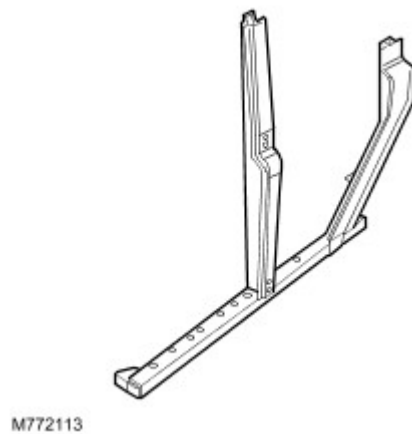

- 2 . Reverse removal procedure.