


Horn (86.30.09)

Removal

- 1 . Remove LH headlamp.
For additional information, refer to [Headlamp Assembly \(86.40.49\)](#)
- 2 . Disconnect horn multiplug.

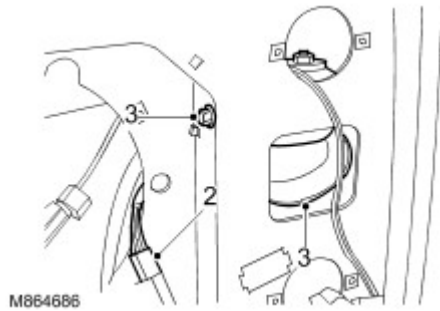

- 3 . Remove nut and remove horn from mounting bracket.

Installation

- 1 . Position horn, tighten securing and connect multiplug.
- 2 . Fit LH headlamp.
For additional information, refer to [Headlamp Assembly \(86.40.49\)](#)