



## Fender (76.10.24)

### Removal


- 1 . Remove fender splash shield.  
For additional information, refer to [Fender Splash Shield \(76.10.48\)](#).
- 2 . Remove radiator grille.  
For additional information, refer to [Radiator Grille \(76.55.03\)](#).
- 3 . Release fixings and remove cooling fan shroud.
- 4 . Remove air cleaner grille from front fender.
- 5 . Remove 4 screws securing air intake elbow to fender.

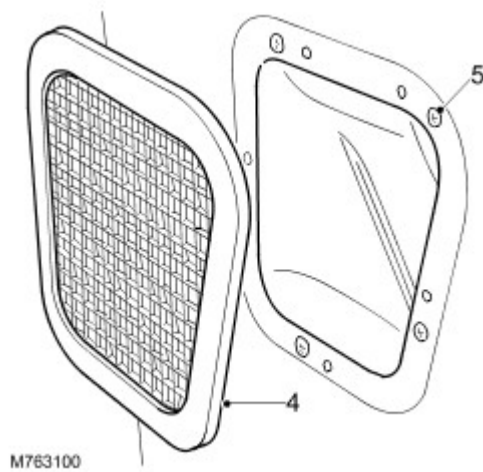


- 6 . Remove 7 screws and remove heater air intake grille from fender.
- 7 . Remove 2 bolts securing heater air intake bracket to inner fender. Remove bracket.
- 8 . Remove heater air intake from fender and collect seal.

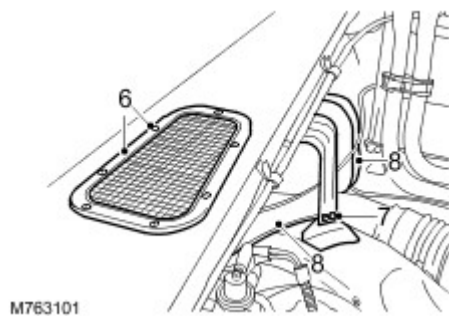


- 9 . Remove 2 bolts securing EGR solenoid to inner fender and lay aside.
- 10 . Remove 3 studs securing expansion tank pipe to inner fender.
- 11 . Remove 2 bolts securing PAS reservoir to inner fender and lay aside.

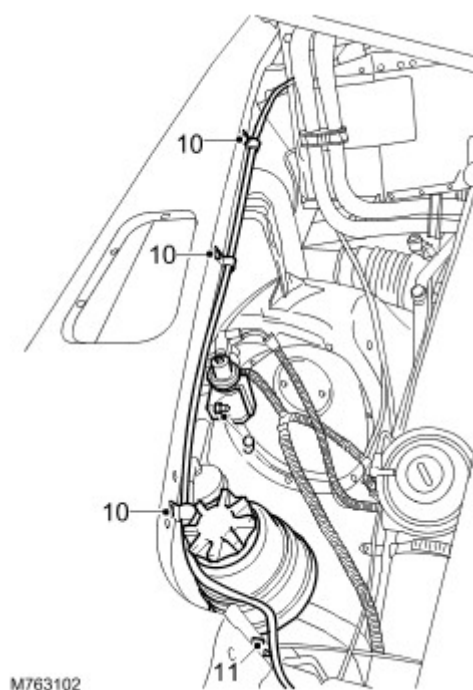

12 . Remove 4 bolts securing outer fender to inner fender.

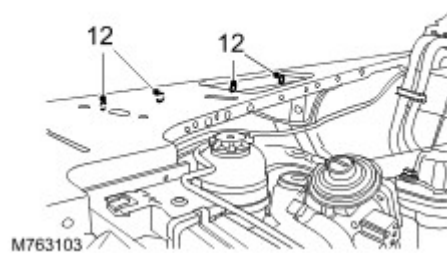


13 . Remove 4 bolts securing radiator mounting bracket to fender.

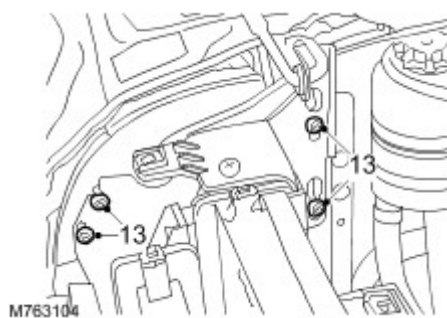


14 . Loosen screw and release hood lock inner cable from hood lock.

15 . Release hood lock outer cable from hood lock.

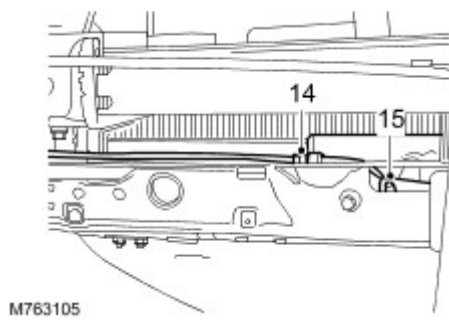

16 . Push centre pins from studs securing wheel arch extension to fender, remove studs and remove wheel arch extension.


17 . Remove bolt securing inner and outer fender to chassis.

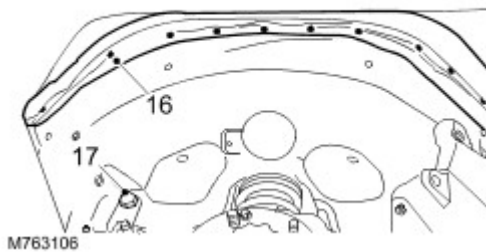


18 . Remove nut and bolt securing support stay to fender.

19 . Remove 4 bolts securing fender to 'A' post.

20 . Remove bolt securing fender to bulkhead.

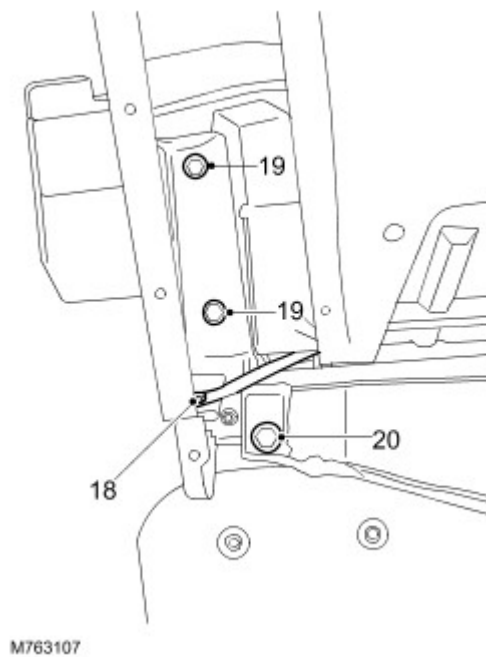

21 . Disconnect headlamp, side lamp, repeater and side turn lamp multiplugs.

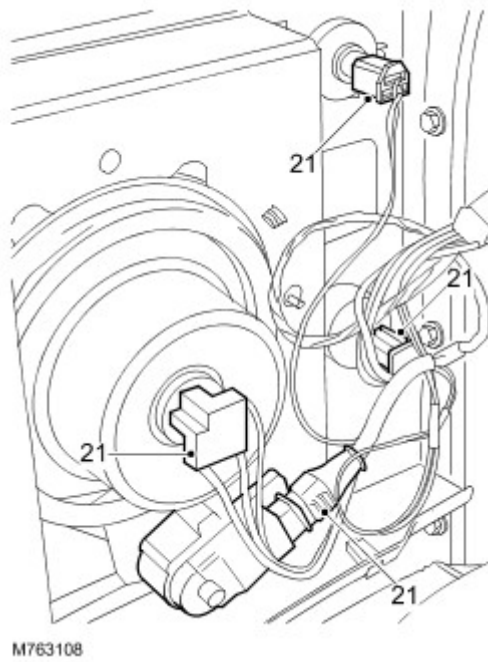


22 . With assistance, remove fender.


23 . Remove bolt, remove grille support bracket.

24 . Remove 4 screws securing side lamp and side turn lamp.


25 . Remove 2 screws securing headlamp finisher to fender, remove finisher.

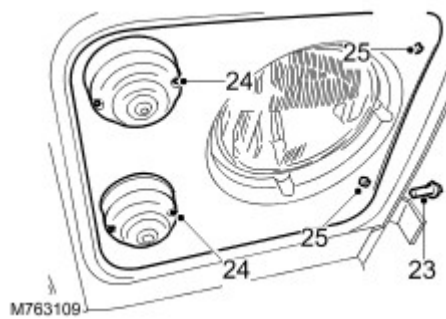


26 . Remove 4 screws and remove headlamp from fender, collect sealing ring.

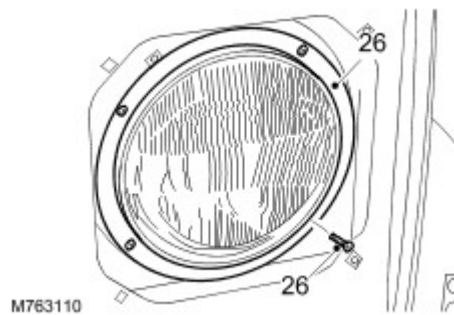

27 . Release side repeater lamp from fender.

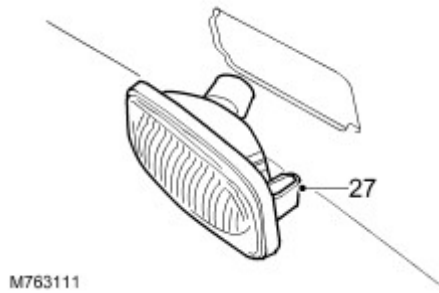

28 . Remove hood cable grommet.

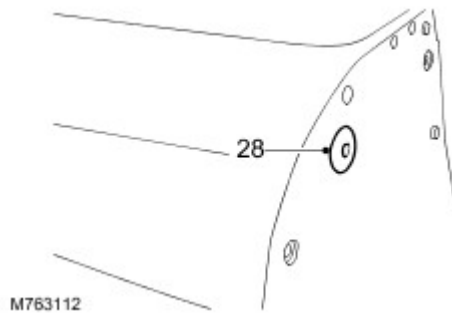

## Installation

- 1 . Fit hood cable grommet.
- 2 . Fit side repeater lamp to fender.
- 3 . Fit headlamp sealing ring, fit headlamp and tighten screws.
- 4 . Fit headlamp finisher, side lamp and side turn lamps and tighten screws.
- 5 . Fit grille support bracket and tighten bolt.
- 6 . With assistance, position and align fender to body and locate hood cable to fender.
- 7 . Connect headlamp, side lamp, side turn lamp and side repeater lamp multiplugs.
- 8 . Fit bolt securing fender to bulkhead.
- 9 . Fit bolts securing fender to 'A' post.
- 10 . Fit nut and bolt securing support stay to fender.
- 11 . Fit bolt securing inner and outer fender to chassis.
- 12 . Fit bolts securing radiator bracket to fender.
- 13 . Fit bolts securing outer fender to inner fender.
- 14 . Align fender and finally tighten all bolts.
- 15 . Position wheel arch extension to fender, and fit securing studs.
- 16 . Position PAS reservoir to fender and tighten bolts.

- 17 . Position expansion tank pipe and secure with studs.
- 18 . Position EGR solenoid and tighten bolts.
- 19 . Position heater air intake seal and fit air intake.
- 20 . Fit heater air intake bracket and tighten bolts.
- 21 . Fit heater air intake grille and tighten screws.
- 22 . Align air cleaner intake elbow, tighten screws and fit grille.
- 23 . Fit fender splash shield.  
For additional information, refer to [Fender Splash Shield \(76.10.48\)](#)
- 24 . Position hood release cable to lock and tighten screw.
- 25 . Fit cooling fan shroud.
- 26 . Fit radiator grille.  
For additional information, refer to [Radiator Grille \(76.55.03\)](#)


## Fender Splash Shield (76.10.48)

### Removal


1.  **WARNING: Support on safety stands.**

Raise front of vehicle.


2. Remove front wheel.
3. Support axle weight with jack.
4. Remove 6 screws securing damper top cover to inner wing, remove cover.
5. Remove nut securing damper to top mounting bracket and collect rubber bush and 2 washers.

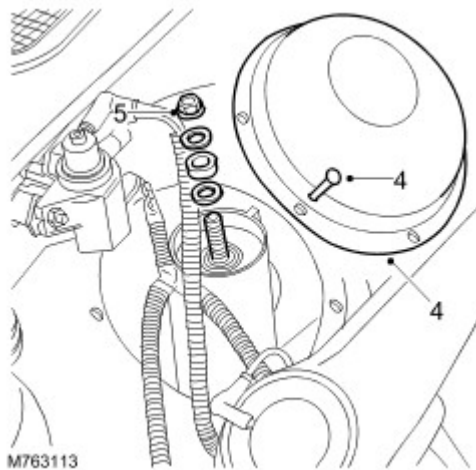

6. Remove 4 nuts securing damper to mounting bracket and collect washers.
7. Remove damper top cover.

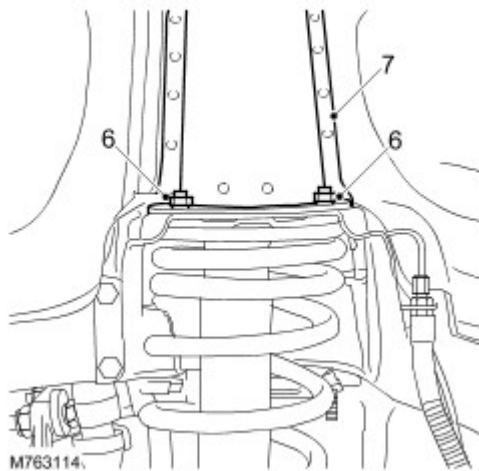

8. Remove 4 screws and 3 studs securing fender splash shield to inner wing. Remove fender splash shield.

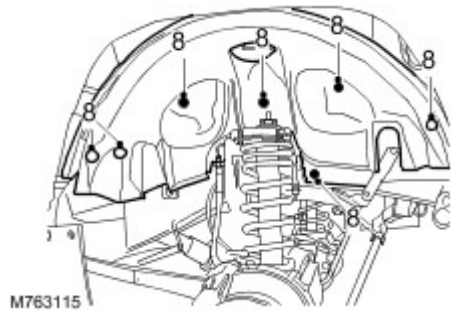

## Installation

- 1 . Position fender splash shield, secure with screws and studs.
- 2 . Fit damper mounting bracket and tighten nuts.
- 3 . Position damper to mounting bracket, fit rubber bush and washers and tighten nut.
- 4 . Fit damper cover to inner wing and secure with screws.
- 5 . Fit road wheel.
- 6 . Remove stands and lower vehicle.




## Hood

### Removal

- 1 . Remove the hood.

▶ With assistance, remove the hood in an upwards direction.

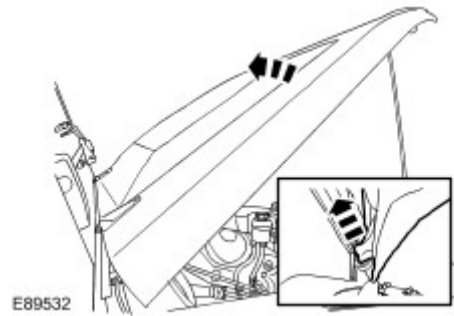

### Installation

- 1 . To install, reverse the removal procedure.

▶ Make sure the hood guides are inline with the hinge bracket.

